

DIII Net Port-1							
編碼	point name	Object ID	Object Name	小工具 Indoor_xx	Object Type	Instance Number	
1-00	ON/OFF (setting) 開/關(設定)	16777217	StartStopCommand _000	_001	4	1	set
1-00	ON/OFF (status) 開/關(狀態)	12582914	StartStopStatus _000	_001	3	2	Fb
1-00	Alarm Sign 鬧鐘通知	12582915	Alarm _000	_001	3	3	
1-00	Error Code 錯誤代碼	54525956	MalfunctionCode _000	_001	13	4	
1-00	Operation Mode (setting) 運轉模式(設定)	58720261	AirConModeCommand _000	_001	14	5	set
1-00	Operation Mode (status) 運轉模式(狀態)	54525958	AirConModeStatus _000	_001	13	6	Fb
1-00	Airflow Rate (setting) 氣流比率(設定)	58720263	AirFlowRateCommand _000	_001	14	7	set
1-00	Airflow Rate (status) 氣流比率(狀態)	54525960	AirFlowRateStatus _000	_001	13	8	Fb
1-00	Measured Room Temperature 測量房間溫度	9	RoomTemp _000	_001	0	9	
1-00	Set Room Temperature 設定房間溫度	8388618	TempAdjust _000	_001	2	10	set
1-00	Filer Limit Sign 過濾限制通知	12582923	FilterSign _000	_001	3	11	
1-00	Filter Limit Sign Reset 重設過濾限制通知	20971532	FilterSignReset _000	_001	5	12	
1-00	Remote Control Operation (ON/OFF) 遙控器運轉(開/關)	20971533	RemoteControlStart _000	_001	5	13	
1-00	Remote Control Operation (Operation Mode) 遙控器運轉(運轉模式)	20971534	RemoteControlAirConModeSet _000	_001	5	14	
1-00	Remote Control Operation (Set Temperature) 遙控器運轉(設定溫度)	20971536	RemoteControlTempAdjust _000	_001	5	16	
1-00	Remote Control Operation (Sub Group Address Control Rejection) 遙控器運轉(子組位置拒絕控制)	20971537	CL_Rejection _000	_001	5	17	
1-00	Elec Total Power Elec總功率	96469011	ElecTotalPower _000	_001	23	19	
1-00	Communication Status 溝通狀態	12582932	CommunicationStatus _000	_001	3	20	
1-00	System Forced OFF 系統強制關閉	20971541	SystemForcedOff _000	_001	5	21	
1-00	Air Direction (setting) 風向(設定)	8388630	AirDirectionCommand _000	_001	2	22	
1-00	Air Direction (status) 風向(狀態)	23	AirDirectionStatus _000	_001	0	23	
1-00	Forced Thermostat OFF (setting) 強制恆溫器關閉(設定)	16777240	ForcedThermoOFFCommand _000	_001	4	24	
1-00	Forced Thermostat OFF (status) 強制恆溫器關閉(狀態)	12582937	ForcedThermoOFFStatus _000	_001	3	25	
1-00	Energy Efficiency Command (setting) 能源效率指令(設定)	16777242	EnergyEfficiencyCommand _000	_001	4	26	
1-00	Energy Efficiency Command (status) 能源效率指令(狀態)	12582939	EnergyEfficiencyStatus _000	_001	3	27	
1-00	Thermostat Status 恆溫器狀態	12582940	ThermoStatus _000	_001	3	28	
1-00	Compressor Status 壓縮機狀態	12582941	CompressorStatus _000	_001	3	29	
1-00	Indoor Fan Status 室內風扇狀態	12582942	IndoorFanStatus _000	_001	3	30	
1-00	Heater Operation Status 暖氣運轉狀態	12582943	HeaterStatus _000	_001	3	31	
1-00	Ventilation Mode (setting) 通風模式(設定)	58720288	VentilationModeCommand _000	_001	14	32	
1-00	Ventilation Mode (status) 通風模式(狀態)	54525985	VentilationModeStatus _000	_001	13	33	
1-00	Ventilation Amount (setting) 通風總和(設定)	58720290	VentilationAmountCommand _000	_001	14	34	
1-00	Ventilation Amount (status) 通風總和(狀態)	54525987	VentilationAmountStatus _000	_001	13	35	
1-01	ON/OFF (setting)	16777473	StartStopCommand _001	_002	4	257	set
1-01	ON/OFF (status)	12583170	StartStopStatus _001	_002	3	258	Fb
1-01	Alarm Sign	12583171	Alarm _001	_002	3	259	
1-01	Error Code	54526212	MalfunctionCode _001	_002	13	260	
1-01	Operation Mode (setting)	58720517	AirConModeCommand _001	_002	14	261	set
1-01	Operation Mode (status)	54526214	AirConModeStatus _001	_002	13	262	Fb
1-01	Airflow Rate (setting)	58720519	AirFlowRateCommand _001	_002	14	263	set
1-01	Airflow Rate (status)	54526216	AirFlowRateStatus _001	_002	13	264	Fb

1-01	Measured Room Temperature	265	RoomTemp	_001	_002	0	265	
1-01	Set Room Temperature	8388874	TempAdjust	_001	_002	2	266	set
1-01	Filer Limit Sign	12583179	FilterSign	_001	_002	3	267	
1-01	Filter Limit Sign Reset	20971788	FilterSignReset	_001	_002	5	268	
1-01	Remote Control Operation (ON/OFF)	20971789	RemoteControlStart	_001	_002	5	269	
1-01	Remote Control Operation (Operation Mode)	20971790	RemoteControlAirConModeSet	_001	_002	5	270	
1-01	Remote Control Operation (Set Temperature)	20971792	RemoteControlTempAdjust	_001	_002	5	272	
1-01	Remote Control Operation (Sub Group Address Control Rejecti	20971793	CL_Rejection	_001	_002	5	273	
1-01	Elec Total Power	96469267	ElecTotalPower	_001	_002	23	275	
1-01	Communication Status	12583188	CommunicationStatus	_001	_002	3	276	
1-01	System Forced OFF	20971797	SystemForcedOff	_001	_002	5	277	
1-01	Air Direction (setting)	8388886	AirDirectionCommand	_001	_002	2	278	
1-01	Air Direction (status)	279	AirDirectionStatus	_001	_002	0	279	
1-01	Forced Thermostat OFF (setting)	16777496	ForcedThermoOFFCommand	_001	_002	4	280	
1-01	Forced Thermostat OFF (status)	12583193	ForcedThermoOFFStatus	_001	_002	3	281	
1-01	Energy Efficiency Command (setting)	16777498	EnergyEfficiencyCommand	_001	_002	4	282	
1-01	Energy Efficiency Command (status)	12583195	EnergyEfficiencyStatus	_001	_002	3	283	
1-01	Thermostat Status	12583196	ThermoStatus	_001	_002	3	284	
1-01	Compressor Status	12583197	CompressorStatus	_001	_002	3	285	
1-01	Indoor Fan Status	12583198	IndoorFanStatus	_001	_002	3	286	
1-01	Heater Operation Status	12583199	HeaterStatus	_001	_002	3	287	
1-01	Ventilation Mode (setting)	58720544	VentilationModeCommand	_001	_002	14	288	
1-01	Ventilation Mode (status)	54526241	VentilationModeStatus	_001	_002	13	289	
1-01	Ventilation Amount (setting)	58720546	VentilationAmountCommand	_001	_002	14	290	
1-01	Ventilation Amount (status)	54526243	VentilationAmountStatus	_001	_002	13	291	
1-02	ON/OFF (setting)	16777729	StartStopCommand	_002	_003	4	513	set
1-02	ON/OFF (status)	12583426	StartStopStatus	_002	_003	3	514	Fb
1-02	Alarm Sign	12583427	Alarm	_002	_003	3	515	
1-02	Error Code	54526468	MalfunctionCode	_002	_003	13	516	
1-02	Operation Mode (setting)	58720773	AirConModeCommand	_002	_003	14	517	set
1-02	Operation Mode (status)	54526470	AirConModeStatus	_002	_003	13	518	Fb
1-02	Airflow Rate (setting)	58720775	AirFlowRateCommand	_002	_003	14	519	set
1-02	Airflow Rate (status)	54526472	AirFlowRateStatus	_002	_003	13	520	Fb
1-02	Measured Room Temperature	521	RoomTemp	_002	_003	0	521	
1-02	Set Room Temperature	8389130	TempAdjust	_002	_003	2	522	set
1-02	Filer Limit Sign	12583435	FilterSign	_002	_003	3	523	
1-02	Filter Limit Sign Reset	20972044	FilterSignReset	_002	_003	5	524	
1-02	Remote Control Operation (ON/OFF)	20972045	RemoteControlStart	_002	_003	5	525	
1-02	Remote Control Operation (Operation Mode)	20972046	RemoteControlAirConModeSet	_002	_003	5	526	
1-02	Remote Control Operation (Set Temperature)	20972048	RemoteControlTempAdjust	_002	_003	5	528	
1-02	Remote Control Operation (Sub Group Address Control Rejecti	20972049	CL_Rejection	_002	_003	5	529	
1-02	Elec Total Power	96469523	ElecTotalPower	_002	_003	23	531	
1-02	Communication Status	12583444	CommunicationStatus	_002	_003	3	532	
1-02	System Forced OFF	20972053	SystemForcedOff	_002	_003	5	533	
1-02	Air Direction (setting)	8389142	AirDirectionCommand	_002	_003	2	534	
1-02	Air Direction (status)	535	AirDirectionStatus	_002	_003	0	535	
1-02	Forced Thermostat OFF (setting)	16777752	ForcedThermoOFFCommand	_002	_003	4	536	
1-02	Forced Thermostat OFF (status)	12583449	ForcedThermoOFFStatus	_002	_003	3	537	
1-02	Energy Efficiency Command (setting)	16777754	EnergyEfficiencyCommand	_002	_003	4	538	
1-02	Energy Efficiency Command (status)	12583451	EnergyEfficiencyStatus	_002	_003	3	539	
1-02	Thermostat Status	12583452	ThermoStatus	_002	_003	3	540	
1-02	Compressor Status	12583453	CompressorStatus	_002	_003	3	541	
1-02	Indoor Fan Status	12583454	IndoorFanStatus	_002	_003	3	542	
1-02	Heater Operation Status	12583455	HeaterStatus	_002	_003	3	543	
1-02	Ventilation Mode (setting)	58720800	VentilationModeCommand	_002	_003	14	544	
1-02	Ventilation Mode (status)	54526497	VentilationModeStatus	_002	_003	13	545	
1-02	Ventilation Amount (setting)	58720802	VentilationAmountCommand	_002	_003	14	546	
1-02	Ventilation Amount (status)	54526499	VentilationAmountStatus	_002	_003	13	547	
1-03	ON/OFF (setting)	16777985	StartStopCommand	_003	_004	4	769	set
1-03	ON/OFF (status)	12583682	StartStopStatus	_003	_004	3	770	Fb
1-03	Alarm Sign	12583683	Alarm	_003	_004	3	771	
1-03	Error Code	54526724	MalfunctionCode	_003	_004	13	772	
1-03	Operation Mode (setting)	58721029	AirConModeCommand	_003	_004	14	773	set
1-03	Operation Mode (status)	54526726	AirConModeStatus	_003	_004	13	774	Fb
1-03	Airflow Rate (setting)	58721031	AirFlowRateCommand	_003	_004	14	775	set
1-03	Airflow Rate (status)	54526728	AirFlowRateStatus	_003	_004	13	776	Fb
1-03	Measured Room Temperature	777	RoomTemp	_003	_004	0	777	
1-03	Set Room Temperature	8389386	TempAdjust	_003	_004	2	778	set
1-03	Filer Limit Sign	12583691	FilterSign	_003	_004	3	779	

1-03	Filter Limit Sign Reset	20972300	FilterSignReset	_003	_004	5	780	
1-03	Remote Control Operation (ON/OFF)	20972301	RemoteControlStart	_003	_004	5	781	
1-03	Remote Control Operation (Operation Mode)	20972302	RemoteControlAirConModeSet	_003	_004	5	782	
1-03	Remote Control Operation (Set Temperature)	20972304	RemoteControlTempAdjust	_003	_004	5	784	
1-03	Remote Control Operation (Sub Group Address Control Rejecti	20972305	CL_Rejection	_003	_004	5	785	
1-03	Elec Total Power	96469779	ElecTotalPower	_003	_004	23	787	
1-03	Communication Status	12583700	CommunicationStatus	_003	_004	3	788	
1-03	System Forced OFF	20972309	SystemForcedOff	_003	_004	5	789	
1-03	Air Direction (setting)	8389398	AirDirectionCommand	_003	_004	2	790	
1-03	Air Direction (status)	791	AirDirectionStatus	_003	_004	0	791	
1-03	Forced Thermostat OFF (setting)	16778008	ForcedThermoOFFCommand	_003	_004	4	792	
1-03	Forced Thermostat OFF (status)	12583705	ForcedThermoOFFStatus	_003	_004	3	793	
1-03	Energy Efficiency Command (setting)	16778010	EnergyEfficiencyCommand	_003	_004	4	794	
1-03	Energy Efficiency Command (status)	12583707	EnergyEfficiencyStatus	_003	_004	3	795	
1-03	Thermostat Status	12583708	ThermoStatus	_003	_004	3	796	
1-03	Compressor Status	12583709	CompressorStatus	_003	_004	3	797	
1-03	Indoor Fan Status	12583710	IndoorFanStatus	_003	_004	3	798	
1-03	Heater Operation Status	12583711	HeaterStatus	_003	_004	3	799	
1-03	Ventilation Mode (setting)	58721056	VentilationModeCommand	_003	_004	14	800	
1-03	Ventilation Mode (status)	54526753	VentilationModeStatus	_003	_004	13	801	
1-03	Ventilation Amount (setting)	58721058	VentilationAmountCommand	_003	_004	14	802	
1-03	Ventilation Amount (status)	54526755	VentilationAmountStatus	_003	_004	13	803	
1-04	ON/OFF (setting)	16778241	StartStopCommand	_004	_005	4	1025	set
1-04	ON/OFF (status)	12583938	StartStopStatus	_004	_005	3	1026	Fb
1-04	Alarm Sign	12583939	Alarm	_004	_005	3	1027	
1-04	Error Code	54526980	MalfunctionCode	_004	_005	13	1028	
1-04	Operation Mode (setting)	58721285	AirConModeCommand	_004	_005	14	1029	set
1-04	Operation Mode (status)	54526982	AirConModeStatus	_004	_005	13	1030	Fb
1-04	Airflow Rate (setting)	58721287	AirFlowRateCommand	_004	_005	14	1031	set
1-04	Airflow Rate (status)	54526984	AirFlowRateStatus	_004	_005	13	1032	Fb
1-04	Measured Room Temperature	1033	RoomTemp	_004	_005	0	1033	
1-04	Set Room Temperature	8389642	TempAdjust	_004	_005	2	1034	set
1-04	Filer Limit Sign	12583947	FilterSign	_004	_005	3	1035	
1-04	Filter Limit Sign Reset	20972556	FilterSignReset	_004	_005	5	1036	
1-04	Remote Control Operation (ON/OFF)	20972557	RemoteControlStart	_004	_005	5	1037	
1-04	Remote Control Operation (Operation Mode)	20972558	RemoteControlAirConModeSet	_004	_005	5	1038	
1-04	Remote Control Operation (Set Temperature)	20972560	RemoteControlTempAdjust	_004	_005	5	1040	
1-04	Remote Control Operation (Sub Group Address Control Rejecti	20972561	CL_Rejection	_004	_005	5	1041	
1-04	Elec Total Power	96470035	ElecTotalPower	_004	_005	23	1043	
1-04	Communication Status	12583956	CommunicationStatus	_004	_005	3	1044	
1-04	System Forced OFF	20972565	SystemForcedOff	_004	_005	5	1045	
1-04	Air Direction (setting)	8389654	AirDirectionCommand	_004	_005	2	1046	
1-04	Air Direction (status)	1047	AirDirectionStatus	_004	_005	0	1047	
1-04	Forced Thermostat OFF (setting)	16778264	ForcedThermoOFFCommand	_004	_005	4	1048	
1-04	Forced Thermostat OFF (status)	12583961	ForcedThermoOFFStatus	_004	_005	3	1049	
1-04	Energy Efficiency Command (setting)	16778266	EnergyEfficiencyCommand	_004	_005	4	1050	
1-04	Energy Efficiency Command (status)	12583963	EnergyEfficiencyStatus	_004	_005	3	1051	
1-04	Thermostat Status	12583964	ThermoStatus	_004	_005	3	1052	
1-04	Compressor Status	12583965	CompressorStatus	_004	_005	3	1053	
1-04	Indoor Fan Status	12583966	IndoorFanStatus	_004	_005	3	1054	
1-04	Heater Operation Status	12583967	HeaterStatus	_004	_005	3	1055	
1-04	Ventilation Mode (setting)	58721312	VentilationModeCommand	_004	_005	14	1056	
1-04	Ventilation Mode (status)	54527009	VentilationModeStatus	_004	_005	13	1057	
1-04	Ventilation Amount (setting)	58721314	VentilationAmountCommand	_004	_005	14	1058	
1-04	Ventilation Amount (status)	54527011	VentilationAmountStatus	_004	_005	13	1059	
1-05	ON/OFF (setting)	16778497	StartStopCommand	_005	_006	4	1281	set
1-05	ON/OFF (status)	12584194	StartStopStatus	_005	_006	3	1282	Fb
1-05	Alarm Sign	12584195	Alarm	_005	_006	3	1283	
1-05	Error Code	54527236	MalfunctionCode	_005	_006	13	1284	
1-05	Operation Mode (setting)	58721541	AirConModeCommand	_005	_006	14	1285	set
1-05	Operation Mode (status)	54527238	AirConModeStatus	_005	_006	13	1286	Fb
1-05	Airflow Rate (setting)	58721543	AirFlowRateCommand	_005	_006	14	1287	set
1-05	Airflow Rate (status)	54527240	AirFlowRateStatus	_005	_006	13	1288	Fb
1-05	Measured Room Temperature	1289	RoomTemp	_005	_006	0	1289	
1-05	Set Room Temperature	8389898	TempAdjust	_005	_006	2	1290	set
1-05	Filer Limit Sign	12584203	FilterSign	_005	_006	3	1291	
1-05	Filter Limit Sign Reset	20972812	FilterSignReset	_005	_006	5	1292	
1-05	Remote Control Operation (ON/OFF)	20972813	RemoteControlStart	_005	_006	5	1293	
1-05	Remote Control Operation (Operation Mode)	20972814	RemoteControlAirConModeSet	_005	_006	5	1294	

1-05	Remote Control Operation (Set Temperature)	20972816	RemoteControlTempAdjust	_005	_006	5	1296	
1-05	Remote Control Operation (Sub Group Address Control Rejecti	20972817	CL_Rejection	_005	_006	5	1297	
1-05	Elec Total Power	96470291	ElecTotalPower	_005	_006	23	1299	
1-05	Communication Status	12584212	CommunicationStatus	_005	_006	3	1300	
1-05	System Forced OFF	20972821	SystemForcedOff	_005	_006	5	1301	
1-05	Air Direction (setting)	8389910	AirDirectionCommand	_005	_006	2	1302	
1-05	Air Direction (status)	1303	AirDirectionStatus	_005	_006	0	1303	
1-05	Forced Thermostat OFF (setting)	16778520	ForcedThermoOFFCommand	_005	_006	4	1304	
1-05	Forced Thermostat OFF (status)	12584217	ForcedThermoOFFStatus	_005	_006	3	1305	
1-05	Energy Efficiency Command (setting)	16778522	EnergyEfficiencyCommand	_005	_006	4	1306	
1-05	Energy Efficiency Command (status)	12584219	EnergyEfficiencyStatus	_005	_006	3	1307	
1-05	Thermostat Status	12584220	ThermoStatus	_005	_006	3	1308	
1-05	Compressor Status	12584221	CompressorStatus	_005	_006	3	1309	
1-05	Indoor Fan Status	12584222	IndoorFanStatus	_005	_006	3	1310	
1-05	Heater Operation Status	12584223	HeaterStatus	_005	_006	3	1311	
1-05	Ventilation Mode (setting)	58721568	VentilationModeCommand	_005	_006	14	1312	
1-05	Ventilation Mode (status)	54527265	VentilationModeStatus	_005	_006	13	1313	
1-05	Ventilation Amount (setting)	58721570	VentilationAmountCommand	_005	_006	14	1314	
1-05	Ventilation Amount (status)	54527267	VentilationAmountStatus	_005	_006	13	1315	
1-06	ON/OFF (setting)	16778753	StartStopCommand	_006	_007	4	1537	set
1-06	ON/OFF (status)	12584450	StartStopStatus	_006	_007	3	1538	Fb
1-06	Alarm Sign	12584451	Alarm	_006	_007	3	1539	
1-06	Error Code	54527492	MalfunctionCode	_006	_007	13	1540	
1-06	Operation Mode (setting)	58721797	AirConModeCommand	_006	_007	14	1541	set
1-06	Operation Mode (status)	54527494	AirConModeStatus	_006	_007	13	1542	Fb
1-06	Airflow Rate (setting)	58721799	AirFlowRateCommand	_006	_007	14	1543	set
1-06	Airflow Rate (status)	54527496	AirFlowRateStatus	_006	_007	13	1544	Fb
1-06	Measured Room Temperature	1545	RoomTemp	_006	_007	0	1545	
1-06	Set Room Temperature	8390154	TempAdjust	_006	_007	2	1546	set
1-06	Filer Limit Sign	12584459	FilterSign	_006	_007	3	1547	
1-06	Filter Limit Sign Reset	20973068	FilterSignReset	_006	_007	5	1548	
1-06	Remote Control Operation (ON/OFF)	20973069	RemoteControlStart	_006	_007	5	1549	
1-06	Remote Control Operation (Operation Mode)	20973070	RemoteControlAirConModeSet	_006	_007	5	1550	
1-06	Remote Control Operation (Set Temperature)	20973072	RemoteControlTempAdjust	_006	_007	5	1552	
1-06	Remote Control Operation (Sub Group Address Control Rejecti	20973073	CL_Rejection	_006	_007	5	1553	
1-06	Elec Total Power	96470547	ElecTotalPower	_006	_007	23	1555	
1-06	Communication Status	12584468	CommunicationStatus	_006	_007	3	1556	
1-06	System Forced OFF	20973077	SystemForcedOff	_006	_007	5	1557	
1-06	Air Direction (setting)	8390166	AirDirectionCommand	_006	_007	2	1558	
1-06	Air Direction (status)	1559	AirDirectionStatus	_006	_007	0	1559	
1-06	Forced Thermostat OFF (setting)	16778776	ForcedThermoOFFCommand	_006	_007	4	1560	
1-06	Forced Thermostat OFF (status)	12584473	ForcedThermoOFFStatus	_006	_007	3	1561	
1-06	Energy Efficiency Command (setting)	16778778	EnergyEfficiencyCommand	_006	_007	4	1562	
1-06	Energy Efficiency Command (status)	12584475	EnergyEfficiencyStatus	_006	_007	3	1563	
1-06	Thermostat Status	12584476	ThermoStatus	_006	_007	3	1564	
1-06	Compressor Status	12584477	CompressorStatus	_006	_007	3	1565	
1-06	Indoor Fan Status	12584478	IndoorFanStatus	_006	_007	3	1566	
1-06	Heater Operation Status	12584479	HeaterStatus	_006	_007	3	1567	
1-06	Ventilation Mode (setting)	58721824	VentilationModeCommand	_006	_007	14	1568	
1-06	Ventilation Mode (status)	54527521	VentilationModeStatus	_006	_007	13	1569	
1-06	Ventilation Amount (setting)	58721826	VentilationAmountCommand	_006	_007	14	1570	
1-06	Ventilation Amount (status)	54527523	VentilationAmountStatus	_006	_007	13	1571	
1-07	ON/OFF (setting)	16779009	StartStopCommand	_007	_008	4	1793	set
1-07	ON/OFF (status)	12584706	StartStopStatus	_007	_008	3	1794	Fb
1-07	Alarm Sign	12584707	Alarm	_007	_008	3	1795	
1-07	Error Code	54527748	MalfunctionCode	_007	_008	13	1796	
1-07	Operation Mode (setting)	58722053	AirConModeCommand	_007	_008	14	1797	set
1-07	Operation Mode (status)	54527750	AirConModeStatus	_007	_008	13	1798	Fb
1-07	Airflow Rate (setting)	58722055	AirFlowRateCommand	_007	_008	14	1799	set
1-07	Airflow Rate (status)	54527752	AirFlowRateStatus	_007	_008	13	1800	Fb
1-07	Measured Room Temperature	1801	RoomTemp	_007	_008	0	1801	
1-07	Set Room Temperature	8390410	TempAdjust	_007	_008	2	1802	set
1-07	Filer Limit Sign	12584715	FilterSign	_007	_008	3	1803	
1-07	Filter Limit Sign Reset	20973324	FilterSignReset	_007	_008	5	1804	
1-07	Remote Control Operation (ON/OFF)	20973325	RemoteControlStart	_007	_008	5	1805	
1-07	Remote Control Operation (Operation Mode)	20973326	RemoteControlAirConModeSet	_007	_008	5	1806	
1-07	Remote Control Operation (Set Temperature)	20973328	RemoteControlTempAdjust	_007	_008	5	1808	
1-07	Remote Control Operation (Sub Group Address Control Rejecti	20973329	CL_Rejection	_007	_008	5	1809	
1-07	Elec Total Power	96470803	ElecTotalPower	_007	_008	23	1811	

1-07	Communication Status	12584724	CommunicationStatus	_007	_008	3	1812	
1-07	System Forced OFF	20973333	SystemForcedOff	_007	_008	5	1813	
1-07	Air Direction (setting)	8390422	AirDirectionCommand	_007	_008	2	1814	
1-07	Air Direction (status)	1815	AirDirectionStatus	_007	_008	0	1815	
1-07	Forced Thermostat OFF (setting)	16779032	ForcedThermoOFFCommand	_007	_008	4	1816	
1-07	Forced Thermostat OFF (status)	12584729	ForcedThermoOFFStatus	_007	_008	3	1817	
1-07	Energy Efficiency Command (setting)	16779034	EnergyEfficiencyCommand	_007	_008	4	1818	
1-07	Energy Efficiency Command (status)	12584731	EnergyEfficiencyStatus	_007	_008	3	1819	
1-07	Thermostat Status	12584732	ThermoStatus	_007	_008	3	1820	
1-07	Compressor Status	12584733	CompressorStatus	_007	_008	3	1821	
1-07	Indoor Fan Status	12584734	IndoorFanStatus	_007	_008	3	1822	
1-07	Heater Operation Status	12584735	HeaterStatus	_007	_008	3	1823	
1-07	Ventilation Mode (setting)	58722080	VentilationModeCommand	_007	_008	14	1824	
1-07	Ventilation Mode (status)	54527777	VentilationModeStatus	_007	_008	13	1825	
1-07	Ventilation Amount (setting)	58722082	VentilationAmountCommand	_007	_008	14	1826	
1-07	Ventilation Amount (status)	54527779	VentilationAmountStatus	_007	_008	13	1827	
1-08	ON/OFF (setting)	16779265	StartStopCommand	_008	_009	4	2049	set
1-08	ON/OFF (status)	12584962	StartStopStatus	_008	_009	3	2050	Fb
1-08	Alarm Sign	12584963	Alarm	_008	_009	3	2051	
1-08	Error Code	54528004	MalfunctionCode	_008	_009	13	2052	
1-08	Operation Mode (setting)	58722309	AirConModeCommand	_008	_009	14	2053	set
1-08	Operation Mode (status)	54528006	AirConModeStatus	_008	_009	13	2054	Fb
1-08	Airflow Rate (setting)	58722311	AirFlowRateCommand	_008	_009	14	2055	set
1-08	Airflow Rate (status)	54528008	AirFlowRateStatus	_008	_009	13	2056	Fb
1-08	Measured Room Temperature	2057	RoomTemp	_008	_009	0	2057	
1-08	Set Room Temperature	8390666	TempAdjust	_008	_009	2	2058	set
1-08	Filer Limit Sign	12584971	FilterSign	_008	_009	3	2059	
1-08	Filter Limit Sign Reset	20973580	FilterSignReset	_008	_009	5	2060	
1-08	Remote Control Operation (ON/OFF)	20973581	RemoteControlStart	_008	_009	5	2061	
1-08	Remote Control Operation (Operation Mode)	20973582	RemoteControlAirConModeSet	_008	_009	5	2062	
1-08	Remote Control Operation (Set Temperature)	20973584	RemoteControlTempAdjust	_008	_009	5	2064	
1-08	Remote Control Operation (Sub Group Address Control Reject)	20973585	CL_Rejection	_008	_009	5	2065	
1-08	Elec Total Power	96471059	ElecTotalPower	_008	_009	23	2067	
1-08	Communication Status	12584980	CommunicationStatus	_008	_009	3	2068	
1-08	System Forced OFF	20973589	SystemForcedOff	_008	_009	5	2069	
1-08	Air Direction (setting)	8390678	AirDirectionCommand	_008	_009	2	2070	
1-08	Air Direction (status)	2071	AirDirectionStatus	_008	_009	0	2071	
1-08	Forced Thermostat OFF (setting)	16779288	ForcedThermoOFFCommand	_008	_009	4	2072	
1-08	Forced Thermostat OFF (status)	12584985	ForcedThermoOFFStatus	_008	_009	3	2073	
1-08	Energy Efficiency Command (setting)	16779290	EnergyEfficiencyCommand	_008	_009	4	2074	
1-08	Energy Efficiency Command (status)	12584987	EnergyEfficiencyStatus	_008	_009	3	2075	
1-08	Thermostat Status	12584988	ThermoStatus	_008	_009	3	2076	
1-08	Compressor Status	12584989	CompressorStatus	_008	_009	3	2077	
1-08	Indoor Fan Status	12584990	IndoorFanStatus	_008	_009	3	2078	
1-08	Heater Operation Status	12584991	HeaterStatus	_008	_009	3	2079	
1-08	Ventilation Mode (setting)	58722336	VentilationModeCommand	_008	_009	14	2080	
1-08	Ventilation Mode (status)	54528033	VentilationModeStatus	_008	_009	13	2081	
1-08	Ventilation Amount (setting)	58722338	VentilationAmountCommand	_008	_009	14	2082	
1-08	Ventilation Amount (status)	54528035	VentilationAmountStatus	_008	_009	13	2083	
1-09	ON/OFF (setting)	16779521	StartStopCommand	_009	_010	4	2305	set
1-09	ON/OFF (status)	12585218	StartStopStatus	_009	_010	3	2306	Fb
1-09	Alarm Sign	12585219	Alarm	_009	_010	3	2307	
1-09	Error Code	54528260	MalfunctionCode	_009	_010	13	2308	
1-09	Operation Mode (setting)	58722565	AirConModeCommand	_009	_010	14	2309	set
1-09	Operation Mode (status)	54528262	AirConModeStatus	_009	_010	13	2310	Fb
1-09	Airflow Rate (setting)	58722567	AirFlowRateCommand	_009	_010	14	2311	set
1-09	Airflow Rate (status)	54528264	AirFlowRateStatus	_009	_010	13	2312	Fb
1-09	Measured Room Temperature	2313	RoomTemp	_009	_010	0	2313	
1-09	Set Room Temperature	8390922	TempAdjust	_009	_010	2	2314	set
1-09	Filer Limit Sign	12585227	FilterSign	_009	_010	3	2315	
1-09	Filter Limit Sign Reset	20973836	FilterSignReset	_009	_010	5	2316	
1-09	Remote Control Operation (ON/OFF)	20973837	RemoteControlStart	_009	_010	5	2317	
1-09	Remote Control Operation (Operation Mode)	20973838	RemoteControlAirConModeSet	_009	_010	5	2318	
1-09	Remote Control Operation (Set Temperature)	20973840	RemoteControlTempAdjust	_009	_010	5	2320	
1-09	Remote Control Operation (Sub Group Address Control Reject)	20973841	CL_Rejection	_009	_010	5	2321	
1-09	Elec Total Power	96471315	ElecTotalPower	_009	_010	23	2323	
1-09	Communication Status	12585236	CommunicationStatus	_009	_010	3	2324	
1-09	System Forced OFF	20973845	SystemForcedOff	_009	_010	5	2325	
1-09	Air Direction (setting)	8390934	AirDirectionCommand	_009	_010	2	2326	

1-09	Air Direction (status)	2327	AirDirectionStatus	_009	_010	0	2327	
1-09	Forced Thermostat OFF (setting)	16779544	ForcedThermoOFFCommand	_009	_010	4	2328	
1-09	Forced Thermostat OFF (status)	12585241	ForcedThermoOFFStatus	_009	_010	3	2329	
1-09	Energy Efficiency Command (setting)	16779546	EnergyEfficiencyCommand	_009	_010	4	2330	
1-09	Energy Efficiency Command (status)	12585243	EnergyEfficiencyStatus	_009	_010	3	2331	
1-09	Thermostat Status	12585244	ThermoStatus	_009	_010	3	2332	
1-09	Compressor Status	12585245	CompressorStatus	_009	_010	3	2333	
1-09	Indoor Fan Status	12585246	IndoorFanStatus	_009	_010	3	2334	
1-09	Heater Operation Status	12585247	HeaterStatus	_009	_010	3	2335	
1-09	Ventilation Mode (setting)	58722592	VentilationModeCommand	_009	_010	14	2336	
1-09	Ventilation Mode (status)	54528289	VentilationModeStatus	_009	_010	13	2337	
1-09	Ventilation Amount (setting)	58722594	VentilationAmountCommand	_009	_010	14	2338	
1-09	Ventilation Amount (status)	54528291	VentilationAmountStatus	_009	_010	13	2339	
1-10	ON/OFF (setting)	16779777	StartStopCommand	_010	_011	4	2561	set
1-10	ON/OFF (status)	12585474	StartStopStatus	_010	_011	3	2562	Fb
1-10	Alarm Sign	12585475	Alarm	_010	_011	3	2563	
1-10	Error Code	54528516	MalfunctionCode	_010	_011	13	2564	
1-10	Operation Mode (setting)	58722821	AirConModeCommand	_010	_011	14	2565	set
1-10	Operation Mode (status)	54528518	AirConModeStatus	_010	_011	13	2566	Fb
1-10	Airflow Rate (setting)	58722823	AirFlowRateCommand	_010	_011	14	2567	set
1-10	Airflow Rate (status)	54528520	AirFlowRateStatus	_010	_011	13	2568	Fb
1-10	Measured Room Temperature	2569	RoomTemp	_010	_011	0	2569	
1-10	Set Room Temperature	8391178	TempAdjust	_010	_011	2	2570	set
1-10	Filer Limit Sign	12585483	FilterSign	_010	_011	3	2571	
1-10	Filter Limit Sign Reset	20974092	FilterSignReset	_010	_011	5	2572	
1-10	Remote Control Operation (ON/OFF)	20974093	RemoteControlStart	_010	_011	5	2573	
1-10	Remote Control Operation (Operation Mode)	20974094	RemoteControlAirConModeSet	_010	_011	5	2574	
1-10	Remote Control Operation (Set Temperature)	20974096	RemoteControlTempAdjust	_010	_011	5	2576	
1-10	Remote Control Operation (Sub Group Address Control Reject)	20974097	CL_Rejection	_010	_011	5	2577	
1-10	Elec Total Power	96471571	ElecTotalPower	_010	_011	23	2579	
1-10	Communication Status	12585492	CommunicationStatus	_010	_011	3	2580	
1-10	System Forced OFF	20974101	SystemForcedOff	_010	_011	5	2581	
1-10	Air Direction (setting)	8391190	AirDirectionCommand	_010	_011	2	2582	
1-10	Air Direction (status)	2583	AirDirectionStatus	_010	_011	0	2583	
1-10	Forced Thermostat OFF (setting)	16779800	ForcedThermoOFFCommand	_010	_011	4	2584	
1-10	Forced Thermostat OFF (status)	12585497	ForcedThermoOFFStatus	_010	_011	3	2585	
1-10	Energy Efficiency Command (setting)	16779802	EnergyEfficiencyCommand	_010	_011	4	2586	
1-10	Energy Efficiency Command (status)	12585499	EnergyEfficiencyStatus	_010	_011	3	2587	
1-10	Thermostat Status	12585500	ThermoStatus	_010	_011	3	2588	
1-10	Compressor Status	12585501	CompressorStatus	_010	_011	3	2589	
1-10	Indoor Fan Status	12585502	IndoorFanStatus	_010	_011	3	2590	
1-10	Heater Operation Status	12585503	HeaterStatus	_010	_011	3	2591	
1-10	Ventilation Mode (setting)	58722848	VentilationModeCommand	_010	_011	14	2592	
1-10	Ventilation Mode (status)	54528545	VentilationModeStatus	_010	_011	13	2593	
1-10	Ventilation Amount (setting)	58722850	VentilationAmountCommand	_010	_011	14	2594	
1-10	Ventilation Amount (status)	54528547	VentilationAmountStatus	_010	_011	13	2595	
1-11	ON/OFF (setting)	16780033	StartStopCommand	_011	_012	4	2817	set
1-11	ON/OFF (status)	12585730	StartStopStatus	_011	_012	3	2818	Fb
1-11	Alarm Sign	12585731	Alarm	_011	_012	3	2819	
1-11	Error Code	54528772	MalfunctionCode	_011	_012	13	2820	
1-11	Operation Mode (setting)	58723077	AirConModeCommand	_011	_012	14	2821	set
1-11	Operation Mode (status)	54528774	AirConModeStatus	_011	_012	13	2822	Fb
1-11	Airflow Rate (setting)	58723079	AirFlowRateCommand	_011	_012	14	2823	set
1-11	Airflow Rate (status)	54528776	AirFlowRateStatus	_011	_012	13	2824	Fb
1-11	Measured Room Temperature	2825	RoomTemp	_011	_012	0	2825	
1-11	Set Room Temperature	8391434	TempAdjust	_011	_012	2	2826	set
1-11	Filer Limit Sign	12585739	FilterSign	_011	_012	3	2827	
1-11	Filter Limit Sign Reset	20974348	FilterSignReset	_011	_012	5	2828	
1-11	Remote Control Operation (ON/OFF)	20974349	RemoteControlStart	_011	_012	5	2829	
1-11	Remote Control Operation (Operation Mode)	20974350	RemoteControlAirConModeSet	_011	_012	5	2830	
1-11	Remote Control Operation (Set Temperature)	20974352	RemoteControlTempAdjust	_011	_012	5	2832	
1-11	Remote Control Operation (Sub Group Address Control Reject)	20974353	CL_Rejection	_011	_012	5	2833	
1-11	Elec Total Power	96471827	ElecTotalPower	_011	_012	23	2835	
1-11	Communication Status	12585748	CommunicationStatus	_011	_012	3	2836	
1-11	System Forced OFF	20974357	SystemForcedOff	_011	_012	5	2837	
1-11	Air Direction (setting)	8391446	AirDirectionCommand	_011	_012	2	2838	
1-11	Air Direction (status)	2839	AirDirectionStatus	_011	_012	0	2839	
1-11	Forced Thermostat OFF (setting)	16780056	ForcedThermoOFFCommand	_011	_012	4	2840	
1-11	Forced Thermostat OFF (status)	12585753	ForcedThermoOFFStatus	_011	_012	3	2841	

1-11	Energy Efficiency Command (setting)	16780058	EnergyEfficiencyCommand	_011	_012	4	2842	
1-11	Energy Efficiency Command (status)	12585755	EnergyEfficiencyStatus	_011	_012	3	2843	
1-11	Thermostat Status	12585756	ThermoStatus	_011	_012	3	2844	
1-11	Compressor Status	12585757	CompressorStatus	_011	_012	3	2845	
1-11	Indoor Fan Status	12585758	IndoorFanStatus	_011	_012	3	2846	
1-11	Heater Operation Status	12585759	HeaterStatus	_011	_012	3	2847	
1-11	Ventilation Mode (setting)	58723104	VentilationModeCommand	_011	_012	14	2848	
1-11	Ventilation Mode (status)	54528801	VentilationModeStatus	_011	_012	13	2849	
1-11	Ventilation Amount (setting)	58723106	VentilationAmountCommand	_011	_012	14	2850	
1-11	Ventilation Amount (status)	54528803	VentilationAmountStatus	_011	_012	13	2851	
1-12	ON/OFF (setting)	16780289	StartStopCommand	_012	_013	4	3073	set
1-12	ON/OFF (status)	12585986	StartStopStatus	_012	_013	3	3074	Fb
1-12	Alarm Sign	12585987	Alarm	_012	_013	3	3075	
1-12	Error Code	54529028	MalfunctionCode	_012	_013	13	3076	
1-12	Operation Mode (setting)	58723333	AirConModeCommand	_012	_013	14	3077	set
1-12	Operation Mode (status)	54529030	AirConModeStatus	_012	_013	13	3078	Fb
1-12	Airflow Rate (setting)	58723335	AirFlowRateCommand	_012	_013	14	3079	set
1-12	Airflow Rate (status)	54529032	AirFlowRateStatus	_012	_013	13	3080	Fb
1-12	Measured Room Temperature	3081	RoomTemp	_012	_013	0	3081	
1-12	Set Room Temperature	8391690	TempAdjust	_012	_013	2	3082	set
1-12	Filer Limit Sign	12585995	FilterSign	_012	_013	3	3083	
1-12	Filter Limit Sign Reset	20974604	FilterSignReset	_012	_013	5	3084	
1-12	Remote Control Operation (ON/OFF)	20974605	RemoteControlStart	_012	_013	5	3085	
1-12	Remote Control Operation (Operation Mode)	20974606	RemoteControlAirConModeSet	_012	_013	5	3086	
1-12	Remote Control Operation (Set Temperature)	20974608	RemoteControlTempAdjust	_012	_013	5	3088	
1-12	Remote Control Operation (Sub Group Address Control Reject)	20974609	CL_Rejection	_012	_013	5	3089	
1-12	Elec Total Power	96472083	ElecTotalPower	_012	_013	23	3091	
1-12	Communication Status	12586004	CommunicationStatus	_012	_013	3	3092	
1-12	System Forced OFF	20974613	SystemForcedOff	_012	_013	5	3093	
1-12	Air Direction (setting)	8391702	AirDirectionCommand	_012	_013	2	3094	
1-12	Air Direction (status)	3095	AirDirectionStatus	_012	_013	0	3095	
1-12	Forced Thermostat OFF (setting)	16780312	ForcedThermoOFFCommand	_012	_013	4	3096	
1-12	Forced Thermostat OFF (status)	12586009	ForcedThermoOFFStatus	_012	_013	3	3097	
1-12	Energy Efficiency Command (setting)	16780314	EnergyEfficiencyCommand	_012	_013	4	3098	
1-12	Energy Efficiency Command (status)	12586011	EnergyEfficiencyStatus	_012	_013	3	3099	
1-12	Thermostat Status	12586012	ThermoStatus	_012	_013	3	3100	
1-12	Compressor Status	12586013	CompressorStatus	_012	_013	3	3101	
1-12	Indoor Fan Status	12586014	IndoorFanStatus	_012	_013	3	3102	
1-12	Heater Operation Status	12586015	HeaterStatus	_012	_013	3	3103	
1-12	Ventilation Mode (setting)	58723360	VentilationModeCommand	_012	_013	14	3104	
1-12	Ventilation Mode (status)	54529057	VentilationModeStatus	_012	_013	13	3105	
1-12	Ventilation Amount (setting)	58723362	VentilationAmountCommand	_012	_013	14	3106	
1-12	Ventilation Amount (status)	54529059	VentilationAmountStatus	_012	_013	13	3107	
1-13	ON/OFF (setting)	16780545	StartStopCommand	_013	_014	4	3329	set
1-13	ON/OFF (status)	12586242	StartStopStatus	_013	_014	3	3330	Fb
1-13	Alarm Sign	12586243	Alarm	_013	_014	3	3331	
1-13	Error Code	54529284	MalfunctionCode	_013	_014	13	3332	
1-13	Operation Mode (setting)	58723589	AirConModeCommand	_013	_014	14	3333	set
1-13	Operation Mode (status)	54529286	AirConModeStatus	_013	_014	13	3334	Fb
1-13	Airflow Rate (setting)	58723591	AirFlowRateCommand	_013	_014	14	3335	set
1-13	Airflow Rate (status)	54529288	AirFlowRateStatus	_013	_014	13	3336	Fb
1-13	Measured Room Temperature	3337	RoomTemp	_013	_014	0	3337	
1-13	Set Room Temperature	8391946	TempAdjust	_013	_014	2	3338	set
1-13	Filer Limit Sign	12586251	FilterSign	_013	_014	3	3339	
1-13	Filter Limit Sign Reset	20974860	FilterSignReset	_013	_014	5	3340	
1-13	Remote Control Operation (ON/OFF)	20974861	RemoteControlStart	_013	_014	5	3341	
1-13	Remote Control Operation (Operation Mode)	20974862	RemoteControlAirConModeSet	_013	_014	5	3342	
1-13	Remote Control Operation (Set Temperature)	20974864	RemoteControlTempAdjust	_013	_014	5	3344	
1-13	Remote Control Operation (Sub Group Address Control Reject)	20974865	CL_Rejection	_013	_014	5	3345	
1-13	Elec Total Power	96472339	ElecTotalPower	_013	_014	23	3347	
1-13	Communication Status	12586260	CommunicationStatus	_013	_014	3	3348	
1-13	System Forced OFF	20974869	SystemForcedOff	_013	_014	5	3349	
1-13	Air Direction (setting)	8391958	AirDirectionCommand	_013	_014	2	3350	
1-13	Air Direction (status)	3351	AirDirectionStatus	_013	_014	0	3351	
1-13	Forced Thermostat OFF (setting)	16780568	ForcedThermoOFFCommand	_013	_014	4	3352	
1-13	Forced Thermostat OFF (status)	12586265	ForcedThermoOFFStatus	_013	_014	3	3353	
1-13	Energy Efficiency Command (setting)	16780570	EnergyEfficiencyCommand	_013	_014	4	3354	
1-13	Energy Efficiency Command (status)	12586267	EnergyEfficiencyStatus	_013	_014	3	3355	
1-13	Thermostat Status	12586268	ThermoStatus	_013	_014	3	3356	

1-13	Compressor Status	12586269	CompressorStatus	_013	_014	3	3357	
1-13	Indoor Fan Status	12586270	IndoorFanStatus	_013	_014	3	3358	
1-13	Heater Operation Status	12586271	HeaterStatus	_013	_014	3	3359	
1-13	Ventilation Mode (setting)	58723616	VentilationModeCommand	_013	_014	14	3360	
1-13	Ventilation Mode (status)	54529313	VentilationModeStatus	_013	_014	13	3361	
1-13	Ventilation Amount (setting)	58723618	VentilationAmountCommand	_013	_014	14	3362	
1-13	Ventilation Amount (status)	54529315	VentilationAmountStatus	_013	_014	13	3363	
1-14	ON/OFF (setting)	16780801	StartStopCommand	_014	_015	4	3585	set
1-14	ON/OFF (status)	12586498	StartStopStatus	_014	_015	3	3586	Fb
1-14	Alarm Sign	12586499	Alarm	_014	_015	3	3587	
1-14	Error Code	54529540	MalfunctionCode	_014	_015	13	3588	
1-14	Operation Mode (setting)	58723845	AirConModeCommand	_014	_015	14	3589	set
1-14	Operation Mode (status)	54529542	AirConModeStatus	_014	_015	13	3590	Fb
1-14	Airflow Rate (setting)	58723847	AirFlowRateCommand	_014	_015	14	3591	set
1-14	Airflow Rate (status)	54529544	AirFlowRateStatus	_014	_015	13	3592	Fb
1-14	Measured Room Temperature	3593	RoomTemp	_014	_015	0	3593	
1-14	Set Room Temperature	8392202	TempAdjust	_014	_015	2	3594	set
1-14	Filer Limit Sign	12586507	FilterSign	_014	_015	3	3595	
1-14	Filter Limit Sign Reset	20975116	FilterSignReset	_014	_015	5	3596	
1-14	Remote Control Operation (ON/OFF)	20975117	RemoteControlStart	_014	_015	5	3597	
1-14	Remote Control Operation (Operation Mode)	20975118	RemoteControlAirConModeSet	_014	_015	5	3598	
1-14	Remote Control Operation (Set Temperature)	20975120	RemoteControlTempAdjust	_014	_015	5	3600	
1-14	Remote Control Operation (Sub Group Address Control Reject)	20975121	CL_Rejection	_014	_015	5	3601	
1-14	Elec Total Power	96472595	ElecTotalPower	_014	_015	23	3603	
1-14	Communication Status	12586516	CommunicationStatus	_014	_015	3	3604	
1-14	System Forced OFF	20975125	SystemForcedOff	_014	_015	5	3605	
1-14	Air Direction (setting)	8392214	AirDirectionCommand	_014	_015	2	3606	
1-14	Air Direction (status)	3607	AirDirectionStatus	_014	_015	0	3607	
1-14	Forced Thermostat OFF (setting)	16780824	ForcedThermoOFFCommand	_014	_015	4	3608	
1-14	Forced Thermostat OFF (status)	12586521	ForcedThermoOFFStatus	_014	_015	3	3609	
1-14	Energy Efficiency Command (setting)	16780826	EnergyEfficiencyCommand	_014	_015	4	3610	
1-14	Energy Efficiency Command (status)	12586523	EnergyEfficiencyStatus	_014	_015	3	3611	
1-14	Thermostat Status	12586524	ThermoStatus	_014	_015	3	3612	
1-14	Compressor Status	12586525	CompressorStatus	_014	_015	3	3613	
1-14	Indoor Fan Status	12586526	IndoorFanStatus	_014	_015	3	3614	
1-14	Heater Operation Status	12586527	HeaterStatus	_014	_015	3	3615	
1-14	Ventilation Mode (setting)	58723872	VentilationModeCommand	_014	_015	14	3616	
1-14	Ventilation Mode (status)	54529569	VentilationModeStatus	_014	_015	13	3617	
1-14	Ventilation Amount (setting)	58723874	VentilationAmountCommand	_014	_015	14	3618	
1-14	Ventilation Amount (status)	54529571	VentilationAmountStatus	_014	_015	13	3619	
1-15	ON/OFF (setting)	16781057	StartStopCommand	_015	_016	4	3841	set
1-15	ON/OFF (status)	12586754	StartStopStatus	_015	_016	3	3842	Fb
1-15	Alarm Sign	12586755	Alarm	_015	_016	3	3843	
1-15	Error Code	54529796	MalfunctionCode	_015	_016	13	3844	
1-15	Operation Mode (setting)	58724101	AirConModeCommand	_015	_016	14	3845	set
1-15	Operation Mode (status)	54529798	AirConModeStatus	_015	_016	13	3846	Fb
1-15	Airflow Rate (setting)	58724103	AirFlowRateCommand	_015	_016	14	3847	set
1-15	Airflow Rate (status)	54529800	AirFlowRateStatus	_015	_016	13	3848	Fb
1-15	Measured Room Temperature	3849	RoomTemp	_015	_016	0	3849	
1-15	Set Room Temperature	8392458	TempAdjust	_015	_016	2	3850	set
1-15	Filer Limit Sign	12586763	FilterSign	_015	_016	3	3851	
1-15	Filter Limit Sign Reset	20975372	FilterSignReset	_015	_016	5	3852	
1-15	Remote Control Operation (ON/OFF)	20975373	RemoteControlStart	_015	_016	5	3853	
1-15	Remote Control Operation (Operation Mode)	20975374	RemoteControlAirConModeSet	_015	_016	5	3854	
1-15	Remote Control Operation (Set Temperature)	20975376	RemoteControlTempAdjust	_015	_016	5	3856	
1-15	Remote Control Operation (Sub Group Address Control Reject)	20975377	CL_Rejection	_015	_016	5	3857	
1-15	Elec Total Power	96472851	ElecTotalPower	_015	_016	23	3859	
1-15	Communication Status	12586772	CommunicationStatus	_015	_016	3	3860	
1-15	System Forced OFF	20975381	SystemForcedOff	_015	_016	5	3861	
1-15	Air Direction (setting)	8392470	AirDirectionCommand	_015	_016	2	3862	
1-15	Air Direction (status)	3863	AirDirectionStatus	_015	_016	0	3863	
1-15	Forced Thermostat OFF (setting)	16781080	ForcedThermoOFFCommand	_015	_016	4	3864	
1-15	Forced Thermostat OFF (status)	12586777	ForcedThermoOFFStatus	_015	_016	3	3865	
1-15	Energy Efficiency Command (setting)	16781082	EnergyEfficiencyCommand	_015	_016	4	3866	
1-15	Energy Efficiency Command (status)	12586779	EnergyEfficiencyStatus	_015	_016	3	3867	
1-15	Thermostat Status	12586780	ThermoStatus	_015	_016	3	3868	
1-15	Compressor Status	12586781	CompressorStatus	_015	_016	3	3869	
1-15	Indoor Fan Status	12586782	IndoorFanStatus	_015	_016	3	3870	
1-15	Heater Operation Status	12586783	HeaterStatus	_015	_016	3	3871	



1-15	Ventilation Mode (setting)	58724128	VentilationModeCommand	_015	_016	14	3872	
1-15	Ventilation Mode (status)	54529825	VentilationModeStatus	_015	_016	13	3873	
1-15	Ventilation Amount (setting)	58724130	VentilationAmountCommand	_015	_016	14	3874	
1-15	Ventilation Amount (status)	54529827	VentilationAmountStatus	_015	_016	13	3875	
2-00	ON/OFF (setting)	16781313	StartStopCommand	_016	_017	4	4097	set
2-00	ON/OFF (status)	12587010	StartStopStatus	_016	_017	3	4098	Fb
2-00	Alarm Sign	12587011	Alarm	_016	_017	3	4099	
2-00	Error Code	54530052	MalfunctionCode	_016	_017	13	4100	
2-00	Operation Mode (setting)	58724357	AirConModeCommand	_016	_017	14	4101	set
2-00	Operation Mode (status)	54530054	AirConModeStatus	_016	_017	13	4102	Fb
2-00	Airflow Rate (setting)	58724359	AirFlowRateCommand	_016	_017	14	4103	set
2-00	Airflow Rate (status)	54530056	AirFlowRateStatus	_016	_017	13	4104	Fb
2-00	Measured Room Temperature	4105	RoomTemp	_016	_017	0	4105	
2-00	Set Room Temperature	8392714	TempAdjust	_016	_017	2	4106	set
2-00	Filer Limit Sign	12587019	FilterSign	_016	_017	3	4107	
2-00	Filter Limit Sign Reset	20975628	FilterSignReset	_016	_017	5	4108	
2-00	Remote Control Operation (ON/OFF)	20975629	RemoteControlStart	_016	_017	5	4109	
2-00	Remote Control Operation (Operation Mode)	20975630	RemoteControlAirConModeSet	_016	_017	5	4110	
2-00	Remote Control Operation (Set Temperature)	20975632	RemoteControlTempAdjust	_016	_017	5	4112	
2-00	Remote Control Operation (Sub Group Address Control Reject)	20975633	CL_Rejection	_016	_017	5	4113	
2-00	Elec Total Power	96473107	ElecTotalPower	_016	_017	23	4115	
2-00	Communication Status	12587028	CommunicationStatus	_016	_017	3	4116	
2-00	System Forced OFF	20975637	SystemForcedOff	_016	_017	5	4117	
2-00	Air Direction (setting)	8392726	AirDirectionCommand	_016	_017	2	4118	
2-00	Air Direction (status)	4119	AirDirectionStatus	_016	_017	0	4119	
2-00	Forced Thermostat OFF (setting)	16781336	ForcedThermoOFFCommand	_016	_017	4	4120	
2-00	Forced Thermostat OFF (status)	12587033	ForcedThermoOFFStatus	_016	_017	3	4121	
2-00	Energy Efficiency Command (setting)	16781338	EnergyEfficiencyCommand	_016	_017	4	4122	
2-00	Energy Efficiency Command (status)	12587035	EnergyEfficiencyStatus	_016	_017	3	4123	
2-00	Thermostat Status	12587036	ThermoStatus	_016	_017	3	4124	
2-00	Compressor Status	12587037	CompressorStatus	_016	_017	3	4125	
2-00	Indoor Fan Status	12587038	IndoorFanStatus	_016	_017	3	4126	
2-00	Heater Operation Status	12587039	HeaterStatus	_016	_017	3	4127	
2-00	Ventilation Mode (setting)	58724384	VentilationModeCommand	_016	_017	14	4128	
2-00	Ventilation Mode (status)	54530081	VentilationModeStatus	_016	_017	13	4129	
2-00	Ventilation Amount (setting)	58724386	VentilationAmountCommand	_016	_017	14	4130	
2-00	Ventilation Amount (status)	54530083	VentilationAmountStatus	_016	_017	13	4131	
2-01	ON/OFF (setting)	16781569	StartStopCommand	_017	_018	4	4353	set
2-01	ON/OFF (status)	12587266	StartStopStatus	_017	_018	3	4354	Fb
2-01	Alarm Sign	12587267	Alarm	_017	_018	3	4355	
2-01	Error Code	54530308	MalfunctionCode	_017	_018	13	4356	
2-01	Operation Mode (setting)	58724613	AirConModeCommand	_017	_018	14	4357	set
2-01	Operation Mode (status)	54530310	AirConModeStatus	_017	_018	13	4358	Fb
2-01	Airflow Rate (setting)	58724615	AirFlowRateCommand	_017	_018	14	4359	set
2-01	Airflow Rate (status)	54530312	AirFlowRateStatus	_017	_018	13	4360	Fb
2-01	Measured Room Temperature	4361	RoomTemp	_017	_018	0	4361	
2-01	Set Room Temperature	8392970	TempAdjust	_017	_018	2	4362	set
2-01	Filer Limit Sign	12587275	FilterSign	_017	_018	3	4363	
2-01	Filter Limit Sign Reset	20975884	FilterSignReset	_017	_018	5	4364	
2-01	Remote Control Operation (ON/OFF)	20975885	RemoteControlStart	_017	_018	5	4365	
2-01	Remote Control Operation (Operation Mode)	20975886	RemoteControlAirConModeSet	_017	_018	5	4366	
2-01	Remote Control Operation (Set Temperature)	20975888	RemoteControlTempAdjust	_017	_018	5	4368	
2-01	Remote Control Operation (Sub Group Address Control Reject)	20975889	CL_Rejection	_017	_018	5	4369	
2-01	Elec Total Power	96473363	ElecTotalPower	_017	_018	23	4371	
2-01	Communication Status	12587284	CommunicationStatus	_017	_018	3	4372	
2-01	System Forced OFF	20975893	SystemForcedOff	_017	_018	5	4373	
2-01	Air Direction (setting)	8392982	AirDirectionCommand	_017	_018	2	4374	
2-01	Air Direction (status)	4375	AirDirectionStatus	_017	_018	0	4375	
2-01	Forced Thermostat OFF (setting)	16781592	ForcedThermoOFFCommand	_017	_018	4	4376	
2-01	Forced Thermostat OFF (status)	12587289	ForcedThermoOFFStatus	_017	_018	3	4377	
2-01	Energy Efficiency Command (setting)	16781594	EnergyEfficiencyCommand	_017	_018	4	4378	
2-01	Energy Efficiency Command (status)	12587291	EnergyEfficiencyStatus	_017	_018	3	4379	
2-01	Thermostat Status	12587292	ThermoStatus	_017	_018	3	4380	
2-01	Compressor Status	12587293	CompressorStatus	_017	_018	3	4381	
2-01	Indoor Fan Status	12587294	IndoorFanStatus	_017	_018	3	4382	
2-01	Heater Operation Status	12587295	HeaterStatus	_017	_018	3	4383	
2-01	Ventilation Mode (setting)	58724640	VentilationModeCommand	_017	_018	14	4384	
2-01	Ventilation Mode (status)	54530337	VentilationModeStatus	_017	_018	13	4385	
2-01	Ventilation Amount (setting)	58724642	VentilationAmountCommand	_017	_018	14	4386	

2-01	Ventilation Amount (status)	54530339	VentilationAmountStatus	_017	_018	13	4387	
2-02	ON/OFF (setting)	16781825	StartStopCommand	_018	_019	4	4609	set
2-02	ON/OFF (status)	12587522	StartStopStatus	_018	_019	3	4610	Fb
2-02	Alarm Sign	12587523	Alarm	_018	_019	3	4611	
2-02	Error Code	54530564	MalfunctionCode	_018	_019	13	4612	
2-02	Operation Mode (setting)	58724869	AirConModeCommand	_018	_019	14	4613	set
2-02	Operation Mode (status)	54530566	AirConModeStatus	_018	_019	13	4614	Fb
2-02	Airflow Rate (setting)	58724871	AirFlowRateCommand	_018	_019	14	4615	set
2-02	Airflow Rate (status)	54530568	AirFlowRateStatus	_018	_019	13	4616	Fb
2-02	Measured Room Temperature	4617	RoomTemp	_018	_019	0	4617	
2-02	Set Room Temperature	8393226	TempAdjust	_018	_019	2	4618	set
2-02	Filer Limit Sign	12587531	FilterSign	_018	_019	3	4619	
2-02	Filter Limit Sign Reset	20976140	FilterSignReset	_018	_019	5	4620	
2-02	Remote Control Operation (ON/OFF)	20976141	RemoteControlStart	_018	_019	5	4621	
2-02	Remote Control Operation (Operation Mode)	20976142	RemoteControlAirConModeSet	_018	_019	5	4622	
2-02	Remote Control Operation (Set Temperature)	20976144	RemoteControlTempAdjust	_018	_019	5	4624	
2-02	Remote Control Operation (Sub Group Address Control Reject)	20976145	CL_Rejection	_018	_019	5	4625	
2-02	Elec Total Power	96473619	ElecTotalPower	_018	_019	23	4627	
2-02	Communication Status	12587540	CommunicationStatus	_018	_019	3	4628	
2-02	System Forced OFF	20976149	SystemForcedOff	_018	_019	5	4629	
2-02	Air Direction (setting)	8393238	AirDirectionCommand	_018	_019	2	4630	
2-02	Air Direction (status)	4631	AirDirectionStatus	_018	_019	0	4631	
2-02	Forced Thermostat OFF (setting)	16781848	ForcedThermoOFFCommand	_018	_019	4	4632	
2-02	Forced Thermostat OFF (status)	12587545	ForcedThermoOFFStatus	_018	_019	3	4633	
2-02	Energy Efficiency Command (setting)	16781850	EnergyEfficiencyCommand	_018	_019	4	4634	
2-02	Energy Efficiency Command (status)	12587547	EnergyEfficiencyStatus	_018	_019	3	4635	
2-02	Thermostat Status	12587548	ThermoStatus	_018	_019	3	4636	
2-02	Compressor Status	12587549	CompressorStatus	_018	_019	3	4637	
2-02	Indoor Fan Status	12587550	IndoorFanStatus	_018	_019	3	4638	
2-02	Heater Operation Status	12587551	HeaterStatus	_018	_019	3	4639	
2-02	Ventilation Mode (setting)	58724896	VentilationModeCommand	_018	_019	14	4640	
2-02	Ventilation Mode (status)	54530593	VentilationModeStatus	_018	_019	13	4641	
2-02	Ventilation Amount (setting)	58724898	VentilationAmountCommand	_018	_019	14	4642	
2-02	Ventilation Amount (status)	54530595	VentilationAmountStatus	_018	_019	13	4643	
2-03	ON/OFF (setting)	16782081	StartStopCommand	_019	_020	4	4865	set
2-03	ON/OFF (status)	12587778	StartStopStatus	_019	_020	3	4866	Fb
2-03	Alarm Sign	12587779	Alarm	_019	_020	3	4867	
2-03	Error Code	54530820	MalfunctionCode	_019	_020	13	4868	
2-03	Operation Mode (setting)	58725125	AirConModeCommand	_019	_020	14	4869	set
2-03	Operation Mode (status)	54530822	AirConModeStatus	_019	_020	13	4870	Fb
2-03	Airflow Rate (setting)	58725127	AirFlowRateCommand	_019	_020	14	4871	set
2-03	Airflow Rate (status)	54530824	AirFlowRateStatus	_019	_020	13	4872	Fb
2-03	Measured Room Temperature	4873	RoomTemp	_019	_020	0	4873	
2-03	Set Room Temperature	8393482	TempAdjust	_019	_020	2	4874	set
2-03	Filer Limit Sign	12587787	FilterSign	_019	_020	3	4875	
2-03	Filter Limit Sign Reset	20976396	FilterSignReset	_019	_020	5	4876	
2-03	Remote Control Operation (ON/OFF)	20976397	RemoteControlStart	_019	_020	5	4877	
2-03	Remote Control Operation (Operation Mode)	20976398	RemoteControlAirConModeSet	_019	_020	5	4878	
2-03	Remote Control Operation (Set Temperature)	20976400	RemoteControlTempAdjust	_019	_020	5	4880	
2-03	Remote Control Operation (Sub Group Address Control Reject)	20976401	CL_Rejection	_019	_020	5	4881	
2-03	Elec Total Power	96473875	ElecTotalPower	_019	_020	23	4883	
2-03	Communication Status	12587796	CommunicationStatus	_019	_020	3	4884	
2-03	System Forced OFF	20976405	SystemForcedOff	_019	_020	5	4885	
2-03	Air Direction (setting)	8393494	AirDirectionCommand	_019	_020	2	4886	
2-03	Air Direction (status)	4887	AirDirectionStatus	_019	_020	0	4887	
2-03	Forced Thermostat OFF (setting)	16782104	ForcedThermoOFFCommand	_019	_020	4	4888	
2-03	Forced Thermostat OFF (status)	12587801	ForcedThermoOFFStatus	_019	_020	3	4889	
2-03	Energy Efficiency Command (setting)	16782106	EnergyEfficiencyCommand	_019	_020	4	4890	
2-03	Energy Efficiency Command (status)	12587803	EnergyEfficiencyStatus	_019	_020	3	4891	
2-03	Thermostat Status	12587804	ThermoStatus	_019	_020	3	4892	
2-03	Compressor Status	12587805	CompressorStatus	_019	_020	3	4893	
2-03	Indoor Fan Status	12587806	IndoorFanStatus	_019	_020	3	4894	
2-03	Heater Operation Status	12587807	HeaterStatus	_019	_020	3	4895	
2-03	Ventilation Mode (setting)	58725152	VentilationModeCommand	_019	_020	14	4896	
2-03	Ventilation Mode (status)	54530849	VentilationModeStatus	_019	_020	13	4897	
2-03	Ventilation Amount (setting)	58725154	VentilationAmountCommand	_019	_020	14	4898	
2-03	Ventilation Amount (status)	54530851	VentilationAmountStatus	_019	_020	13	4899	
2-04	ON/OFF (setting)	16782337	StartStopCommand	_020	_021	4	5121	set
2-04	ON/OFF (status)	12588034	StartStopStatus	_020	_021	3	5122	Fb

2-04	Alarm Sign	12588035	Alarm	_020	_021	3	5123	
2-04	Error Code	54531076	MalfunctionCode	_020	_021	13	5124	
2-04	Operation Mode (setting)	58725381	AirConModeCommand	_020	_021	14	5125	set
2-04	Operation Mode (status)	54531078	AirConModeStatus	_020	_021	13	5126	Fb
2-04	Airflow Rate (setting)	58725383	AirFlowRateCommand	_020	_021	14	5127	set
2-04	Airflow Rate (status)	54531080	AirFlowRateStatus	_020	_021	13	5128	Fb
2-04	Measured Room Temperature	5129	RoomTemp	_020	_021	0	5129	
2-04	Set Room Temperature	8393738	TempAdjust	_020	_021	2	5130	set
2-04	Filer Limit Sign	12588043	FilterSign	_020	_021	3	5131	
2-04	Filter Limit Sign Reset	20976652	FilterSignReset	_020	_021	5	5132	
2-04	Remote Control Operation (ON/OFF)	20976653	RemoteControlStart	_020	_021	5	5133	
2-04	Remote Control Operation (Operation Mode)	20976654	RemoteControlAirConModeSet	_020	_021	5	5134	
2-04	Remote Control Operation (Set Temperature)	20976656	RemoteControlTempAdjust	_020	_021	5	5136	
2-04	Remote Control Operation (Sub Group Address Control Reject)	20976657	CL_Rejection	_020	_021	5	5137	
2-04	Elec Total Power	96474131	ElecTotalPower	_020	_021	23	5139	
2-04	Communication Status	12588052	CommunicationStatus	_020	_021	3	5140	
2-04	System Forced OFF	20976661	SystemForcedOff	_020	_021	5	5141	
2-04	Air Direction (setting)	8393750	AirDirectionCommand	_020	_021	2	5142	
2-04	Air Direction (status)	5143	AirDirectionStatus	_020	_021	0	5143	
2-04	Forced Thermostat OFF (setting)	16782360	ForcedThermoOFFCommand	_020	_021	4	5144	
2-04	Forced Thermostat OFF (status)	12588057	ForcedThermoOFFStatus	_020	_021	3	5145	
2-04	Energy Efficiency Command (setting)	16782362	EnergyEfficiencyCommand	_020	_021	4	5146	
2-04	Energy Efficiency Command (status)	12588059	EnergyEfficiencyStatus	_020	_021	3	5147	
2-04	Thermostat Status	12588060	ThermoStatus	_020	_021	3	5148	
2-04	Compressor Status	12588061	CompressorStatus	_020	_021	3	5149	
2-04	Indoor Fan Status	12588062	IndoorFanStatus	_020	_021	3	5150	
2-04	Heater Operation Status	12588063	HeaterStatus	_020	_021	3	5151	
2-04	Ventilation Mode (setting)	58725408	VentilationModeCommand	_020	_021	14	5152	
2-04	Ventilation Mode (status)	54531105	VentilationModeStatus	_020	_021	13	5153	
2-04	Ventilation Amount (setting)	58725410	VentilationAmountCommand	_020	_021	14	5154	
2-04	Ventilation Amount (status)	54531107	VentilationAmountStatus	_020	_021	13	5155	
2-05	ON/OFF (setting)	16782593	StartStopCommand	_021	_022	4	5377	set
2-05	ON/OFF (status)	12588290	StartStopStatus	_021	_022	3	5378	Fb
2-05	Alarm Sign	12588291	Alarm	_021	_022	3	5379	
2-05	Error Code	54531332	MalfunctionCode	_021	_022	13	5380	
2-05	Operation Mode (setting)	58725637	AirConModeCommand	_021	_022	14	5381	set
2-05	Operation Mode (status)	54531334	AirConModeStatus	_021	_022	13	5382	Fb
2-05	Airflow Rate (setting)	58725639	AirFlowRateCommand	_021	_022	14	5383	set
2-05	Airflow Rate (status)	54531336	AirFlowRateStatus	_021	_022	13	5384	Fb
2-05	Measured Room Temperature	5385	RoomTemp	_021	_022	0	5385	
2-05	Set Room Temperature	8393994	TempAdjust	_021	_022	2	5386	set
2-05	Filer Limit Sign	12588299	FilterSign	_021	_022	3	5387	
2-05	Filter Limit Sign Reset	20976908	FilterSignReset	_021	_022	5	5388	
2-05	Remote Control Operation (ON/OFF)	20976909	RemoteControlStart	_021	_022	5	5389	
2-05	Remote Control Operation (Operation Mode)	20976910	RemoteControlAirConModeSet	_021	_022	5	5390	
2-05	Remote Control Operation (Set Temperature)	20976912	RemoteControlTempAdjust	_021	_022	5	5392	
2-05	Remote Control Operation (Sub Group Address Control Reject)	20976913	CL_Rejection	_021	_022	5	5393	
2-05	Elec Total Power	96474387	ElecTotalPower	_021	_022	23	5395	
2-05	Communication Status	12588308	CommunicationStatus	_021	_022	3	5396	
2-05	System Forced OFF	20976917	SystemForcedOff	_021	_022	5	5397	
2-05	Air Direction (setting)	8394006	AirDirectionCommand	_021	_022	2	5398	
2-05	Air Direction (status)	5399	AirDirectionStatus	_021	_022	0	5399	
2-05	Forced Thermostat OFF (setting)	16782616	ForcedThermoOFFCommand	_021	_022	4	5400	
2-05	Forced Thermostat OFF (status)	12588313	ForcedThermoOFFStatus	_021	_022	3	5401	
2-05	Energy Efficiency Command (setting)	16782618	EnergyEfficiencyCommand	_021	_022	4	5402	
2-05	Energy Efficiency Command (status)	12588315	EnergyEfficiencyStatus	_021	_022	3	5403	
2-05	Thermostat Status	12588316	ThermoStatus	_021	_022	3	5404	
2-05	Compressor Status	12588317	CompressorStatus	_021	_022	3	5405	
2-05	Indoor Fan Status	12588318	IndoorFanStatus	_021	_022	3	5406	
2-05	Heater Operation Status	12588319	HeaterStatus	_021	_022	3	5407	
2-05	Ventilation Mode (setting)	58725664	VentilationModeCommand	_021	_022	14	5408	
2-05	Ventilation Mode (status)	54531361	VentilationModeStatus	_021	_022	13	5409	
2-05	Ventilation Amount (setting)	58725666	VentilationAmountCommand	_021	_022	14	5410	
2-05	Ventilation Amount (status)	54531363	VentilationAmountStatus	_021	_022	13	5411	
2-06	ON/OFF (setting)	16782849	StartStopCommand	_022	_023	4	5633	set
2-06	ON/OFF (status)	12588546	StartStopStatus	_022	_023	3	5634	Fb
2-06	Alarm Sign	12588547	Alarm	_022	_023	3	5635	
2-06	Error Code	54531588	MalfunctionCode	_022	_023	13	5636	
2-06	Operation Mode (setting)	58725893	AirConModeCommand	_022	_023	14	5637	set

2-06	Operation Mode (status)	54531590	AirConModeStatus	_022	_023	13	5638	Fb
2-06	Airflow Rate (setting)	58725895	AirFlowRateCommand	_022	_023	14	5639	set
2-06	Airflow Rate (status)	54531592	AirFlowRateStatus	_022	_023	13	5640	Fb
2-06	Measured Room Temperature	5641	RoomTemp	_022	_023	0	5641	
2-06	Set Room Temperature	8394250	TempAdjust	_022	_023	2	5642	set
2-06	Filer Limit Sign	12588555	FilterSign	_022	_023	3	5643	
2-06	Filter Limit Sign Reset	20977164	FilterSignReset	_022	_023	5	5644	
2-06	Remote Control Operation (ON/OFF)	20977165	RemoteControlStart	_022	_023	5	5645	
2-06	Remote Control Operation (Operation Mode)	20977166	RemoteControlAirConModeSet	_022	_023	5	5646	
2-06	Remote Control Operation (Set Temperature)	20977168	RemoteControlTempAdjust	_022	_023	5	5648	
2-06	Remote Control Operation (Sub Group Address Control Reject)	20977169	CL_Rejection	_022	_023	5	5649	
2-06	Elec Total Power	96474643	ElecTotalPower	_022	_023	23	5651	
2-06	Communication Status	12588564	CommunicationStatus	_022	_023	3	5652	
2-06	System Forced OFF	20977173	SystemForcedOff	_022	_023	5	5653	
2-06	Air Direction (setting)	8394262	AirDirectionCommand	_022	_023	2	5654	
2-06	Air Direction (status)	5655	AirDirectionStatus	_022	_023	0	5655	
2-06	Forced Thermostat OFF (setting)	16782872	ForcedThermoOFFCommand	_022	_023	4	5656	
2-06	Forced Thermostat OFF (status)	12588569	ForcedThermoOFFStatus	_022	_023	3	5657	
2-06	Energy Efficiency Command (setting)	16782874	EnergyEfficiencyCommand	_022	_023	4	5658	
2-06	Energy Efficiency Command (status)	12588571	EnergyEfficiencyStatus	_022	_023	3	5659	
2-06	Thermostat Status	12588572	ThermoStatus	_022	_023	3	5660	
2-06	Compressor Status	12588573	CompressorStatus	_022	_023	3	5661	
2-06	Indoor Fan Status	12588574	IndoorFanStatus	_022	_023	3	5662	
2-06	Heater Operation Status	12588575	HeaterStatus	_022	_023	3	5663	
2-06	Ventilation Mode (setting)	58725920	VentilationModeCommand	_022	_023	14	5664	
2-06	Ventilation Mode (status)	54531617	VentilationModeStatus	_022	_023	13	5665	
2-06	Ventilation Amount (setting)	58725922	VentilationAmountCommand	_022	_023	14	5666	
2-06	Ventilation Amount (status)	54531619	VentilationAmountStatus	_022	_023	13	5667	
2-07	ON/OFF (setting)	16783105	StartStopCommand	_023	_024	4	5889	set
2-07	ON/OFF (status)	12588802	StartStopStatus	_023	_024	3	5890	Fb
2-07	Alarm Sign	12588803	Alarm	_023	_024	3	5891	
2-07	Error Code	54531844	MalfunctionCode	_023	_024	13	5892	
2-07	Operation Mode (setting)	58726149	AirConModeCommand	_023	_024	14	5893	set
2-07	Operation Mode (status)	54531846	AirConModeStatus	_023	_024	13	5894	Fb
2-07	Airflow Rate (setting)	58726151	AirFlowRateCommand	_023	_024	14	5895	set
2-07	Airflow Rate (status)	54531848	AirFlowRateStatus	_023	_024	13	5896	Fb
2-07	Measured Room Temperature	5897	RoomTemp	_023	_024	0	5897	
2-07	Set Room Temperature	8394506	TempAdjust	_023	_024	2	5898	set
2-07	Filer Limit Sign	12588811	FilterSign	_023	_024	3	5899	
2-07	Filter Limit Sign Reset	20977420	FilterSignReset	_023	_024	5	5900	
2-07	Remote Control Operation (ON/OFF)	20977421	RemoteControlStart	_023	_024	5	5901	
2-07	Remote Control Operation (Operation Mode)	20977422	RemoteControlAirConModeSet	_023	_024	5	5902	
2-07	Remote Control Operation (Set Temperature)	20977424	RemoteControlTempAdjust	_023	_024	5	5904	
2-07	Remote Control Operation (Sub Group Address Control Reject)	20977425	CL_Rejection	_023	_024	5	5905	
2-07	Elec Total Power	96474899	ElecTotalPower	_023	_024	23	5907	
2-07	Communication Status	12588820	CommunicationStatus	_023	_024	3	5908	
2-07	System Forced OFF	20977429	SystemForcedOff	_023	_024	5	5909	
2-07	Air Direction (setting)	8394518	AirDirectionCommand	_023	_024	2	5910	
2-07	Air Direction (status)	5911	AirDirectionStatus	_023	_024	0	5911	
2-07	Forced Thermostat OFF (setting)	16783128	ForcedThermoOFFCommand	_023	_024	4	5912	
2-07	Forced Thermostat OFF (status)	12588825	ForcedThermoOFFStatus	_023	_024	3	5913	
2-07	Energy Efficiency Command (setting)	16783130	EnergyEfficiencyCommand	_023	_024	4	5914	
2-07	Energy Efficiency Command (status)	12588827	EnergyEfficiencyStatus	_023	_024	3	5915	
2-07	Thermostat Status	12588828	ThermoStatus	_023	_024	3	5916	
2-07	Compressor Status	12588829	CompressorStatus	_023	_024	3	5917	
2-07	Indoor Fan Status	12588830	IndoorFanStatus	_023	_024	3	5918	
2-07	Heater Operation Status	12588831	HeaterStatus	_023	_024	3	5919	
2-07	Ventilation Mode (setting)	58726176	VentilationModeCommand	_023	_024	14	5920	
2-07	Ventilation Mode (status)	54531873	VentilationModeStatus	_023	_024	13	5921	
2-07	Ventilation Amount (setting)	58726178	VentilationAmountCommand	_023	_024	14	5922	
2-07	Ventilation Amount (status)	54531875	VentilationAmountStatus	_023	_024	13	5923	
2-08	ON/OFF (setting)	16783361	StartStopCommand	_024	_025	4	6145	set
2-08	ON/OFF (status)	12589058	StartStopStatus	_024	_025	3	6146	Fb
2-08	Alarm Sign	12589059	Alarm	_024	_025	3	6147	
2-08	Error Code	54532100	MalfunctionCode	_024	_025	13	6148	
2-08	Operation Mode (setting)	58726405	AirConModeCommand	_024	_025	14	6149	set
2-08	Operation Mode (status)	54532102	AirConModeStatus	_024	_025	13	6150	Fb
2-08	Airflow Rate (setting)	58726407	AirFlowRateCommand	_024	_025	14	6151	set
2-08	Airflow Rate (status)	54532104	AirFlowRateStatus	_024	_025	13	6152	Fb

2-08	Measured Room Temperature	6153	RoomTemp	_024	_025	0	6153	
2-08	Set Room Temperature	8394762	TempAdjust	_024	_025	2	6154	set
2-08	Filer Limit Sign	12589067	FilterSign	_024	_025	3	6155	
2-08	Filter Limit Sign Reset	20977676	FilterSignReset	_024	_025	5	6156	
2-08	Remote Control Operation (ON/OFF)	20977677	RemoteControlStart	_024	_025	5	6157	
2-08	Remote Control Operation (Operation Mode)	20977678	RemoteControlAirConModeSet	_024	_025	5	6158	
2-08	Remote Control Operation (Set Temperature)	20977680	RemoteControlTempAdjust	_024	_025	5	6160	
2-08	Remote Control Operation (Sub Group Address Control Rejecti	20977681	CL_Rejection	_024	_025	5	6161	
2-08	Elec Total Power	96475155	ElecTotalPower	_024	_025	23	6163	
2-08	Communication Status	12589076	CommunicationStatus	_024	_025	3	6164	
2-08	System Forced OFF	20977685	SystemForcedOff	_024	_025	5	6165	
2-08	Air Direction (setting)	8394774	AirDirectionCommand	_024	_025	2	6166	
2-08	Air Direction (status)	6167	AirDirectionStatus	_024	_025	0	6167	
2-08	Forced Thermostat OFF (setting)	16783384	ForcedThermoOFFCommand	_024	_025	4	6168	
2-08	Forced Thermostat OFF (status)	12589081	ForcedThermoOFFStatus	_024	_025	3	6169	
2-08	Energy Efficiency Command (setting)	16783386	EnergyEfficiencyCommand	_024	_025	4	6170	
2-08	Energy Efficiency Command (status)	12589083	EnergyEfficiencyStatus	_024	_025	3	6171	
2-08	Thermostat Status	12589084	ThermoStatus	_024	_025	3	6172	
2-08	Compressor Status	12589085	CompressorStatus	_024	_025	3	6173	
2-08	Indoor Fan Status	12589086	IndoorFanStatus	_024	_025	3	6174	
2-08	Heater Operation Status	12589087	HeaterStatus	_024	_025	3	6175	
2-08	Ventilation Mode (setting)	58726432	VentilationModeCommand	_024	_025	14	6176	
2-08	Ventilation Mode (status)	54532129	VentilationModeStatus	_024	_025	13	6177	
2-08	Ventilation Amount (setting)	58726434	VentilationAmountCommand	_024	_025	14	6178	
2-08	Ventilation Amount (status)	54532131	VentilationAmountStatus	_024	_025	13	6179	
2-09	ON/OFF (setting)	16783617	StartStopCommand	_025	_026	4	6401	set
2-09	ON/OFF (status)	12589314	StartStopStatus	_025	_026	3	6402	Fb
2-09	Alarm Sign	12589315	Alarm	_025	_026	3	6403	
2-09	Error Code	54532356	MalfunctionCode	_025	_026	13	6404	
2-09	Operation Mode (setting)	58726661	AirConModeCommand	_025	_026	14	6405	set
2-09	Operation Mode (status)	54532358	AirConModeStatus	_025	_026	13	6406	Fb
2-09	Airflow Rate (setting)	58726663	AirFlowRateCommand	_025	_026	14	6407	set
2-09	Airflow Rate (status)	54532360	AirFlowRateStatus	_025	_026	13	6408	Fb
2-09	Measured Room Temperature	6409	RoomTemp	_025	_026	0	6409	
2-09	Set Room Temperature	8395018	TempAdjust	_025	_026	2	6410	set
2-09	Filer Limit Sign	12589323	FilterSign	_025	_026	3	6411	
2-09	Filter Limit Sign Reset	20977932	FilterSignReset	_025	_026	5	6412	
2-09	Remote Control Operation (ON/OFF)	20977933	RemoteControlStart	_025	_026	5	6413	
2-09	Remote Control Operation (Operation Mode)	20977934	RemoteControlAirConModeSet	_025	_026	5	6414	
2-09	Remote Control Operation (Set Temperature)	20977936	RemoteControlTempAdjust	_025	_026	5	6416	
2-09	Remote Control Operation (Sub Group Address Control Rejecti	20977937	CL_Rejection	_025	_026	5	6417	
2-09	Elec Total Power	96475411	ElecTotalPower	_025	_026	23	6419	
2-09	Communication Status	12589332	CommunicationStatus	_025	_026	3	6420	
2-09	System Forced OFF	20977941	SystemForcedOff	_025	_026	5	6421	
2-09	Air Direction (setting)	8395030	AirDirectionCommand	_025	_026	2	6422	
2-09	Air Direction (status)	6423	AirDirectionStatus	_025	_026	0	6423	
2-09	Forced Thermostat OFF (setting)	16783640	ForcedThermoOFFCommand	_025	_026	4	6424	
2-09	Forced Thermostat OFF (status)	12589337	ForcedThermoOFFStatus	_025	_026	3	6425	
2-09	Energy Efficiency Command (setting)	16783642	EnergyEfficiencyCommand	_025	_026	4	6426	
2-09	Energy Efficiency Command (status)	12589339	EnergyEfficiencyStatus	_025	_026	3	6427	
2-09	Thermostat Status	12589340	ThermoStatus	_025	_026	3	6428	
2-09	Compressor Status	12589341	CompressorStatus	_025	_026	3	6429	
2-09	Indoor Fan Status	12589342	IndoorFanStatus	_025	_026	3	6430	
2-09	Heater Operation Status	12589343	HeaterStatus	_025	_026	3	6431	
2-09	Ventilation Mode (setting)	58726688	VentilationModeCommand	_025	_026	14	6432	
2-09	Ventilation Mode (status)	54532385	VentilationModeStatus	_025	_026	13	6433	
2-09	Ventilation Amount (setting)	58726690	VentilationAmountCommand	_025	_026	14	6434	
2-09	Ventilation Amount (status)	54532387	VentilationAmountStatus	_025	_026	13	6435	
2-10	ON/OFF (setting)	16783873	StartStopCommand	_026	_027	4	6657	set
2-10	ON/OFF (status)	12589570	StartStopStatus	_026	_027	3	6658	Fb
2-10	Alarm Sign	12589571	Alarm	_026	_027	3	6659	
2-10	Error Code	54532612	MalfunctionCode	_026	_027	13	6660	
2-10	Operation Mode (setting)	58726917	AirConModeCommand	_026	_027	14	6661	set
2-10	Operation Mode (status)	54532614	AirConModeStatus	_026	_027	13	6662	Fb
2-10	Airflow Rate (setting)	58726919	AirFlowRateCommand	_026	_027	14	6663	set
2-10	Airflow Rate (status)	54532616	AirFlowRateStatus	_026	_027	13	6664	Fb
2-10	Measured Room Temperature	6665	RoomTemp	_026	_027	0	6665	
2-10	Set Room Temperature	8395274	TempAdjust	_026	_027	2	6666	set
2-10	Filer Limit Sign	12589579	FilterSign	_026	_027	3	6667	

2-10	Filter Limit Sign Reset	20978188	FilterSignReset	_026	_027	5	6668	
2-10	Remote Control Operation (ON/OFF)	20978189	RemoteControlStart	_026	_027	5	6669	
2-10	Remote Control Operation (Operation Mode)	20978190	RemoteControlAirConModeSet	_026	_027	5	6670	
2-10	Remote Control Operation (Set Temperature)	20978192	RemoteControlTempAdjust	_026	_027	5	6672	
2-10	Remote Control Operation (Sub Group Address Control Rejecti	20978193	CL_Rejection	_026	_027	5	6673	
2-10	Elec Total Power	96475667	ElecTotalPower	_026	_027	23	6675	
2-10	Communication Status	12589588	CommunicationStatus	_026	_027	3	6676	
2-10	System Forced OFF	20978197	SystemForcedOff	_026	_027	5	6677	
2-10	Air Direction (setting)	8395286	AirDirectionCommand	_026	_027	2	6678	
2-10	Air Direction (status)	6679	AirDirectionStatus	_026	_027	0	6679	
2-10	Forced Thermostat OFF (setting)	16783896	ForcedThermoOFFCommand	_026	_027	4	6680	
2-10	Forced Thermostat OFF (status)	12589593	ForcedThermoOFFStatus	_026	_027	3	6681	
2-10	Energy Efficiency Command (setting)	16783898	EnergyEfficiencyCommand	_026	_027	4	6682	
2-10	Energy Efficiency Command (status)	12589595	EnergyEfficiencyStatus	_026	_027	3	6683	
2-10	Thermostat Status	12589596	ThermoStatus	_026	_027	3	6684	
2-10	Compressor Status	12589597	CompressorStatus	_026	_027	3	6685	
2-10	Indoor Fan Status	12589598	IndoorFanStatus	_026	_027	3	6686	
2-10	Heater Operation Status	12589599	HeaterStatus	_026	_027	3	6687	
2-10	Ventilation Mode (setting)	58726944	VentilationModeCommand	_026	_027	14	6688	
2-10	Ventilation Mode (status)	54532641	VentilationModeStatus	_026	_027	13	6689	
2-10	Ventilation Amount (setting)	58726946	VentilationAmountCommand	_026	_027	14	6690	
2-10	Ventilation Amount (status)	54532643	VentilationAmountStatus	_026	_027	13	6691	
2-11	ON/OFF (setting)	16784129	StartStopCommand	_027	_028	4	6913	set
2-11	ON/OFF (status)	12589826	StartStopStatus	_027	_028	3	6914	Fb
2-11	Alarm Sign	12589827	Alarm	_027	_028	3	6915	
2-11	Error Code	54532868	MalfunctionCode	_027	_028	13	6916	
2-11	Operation Mode (setting)	58727173	AirConModeCommand	_027	_028	14	6917	set
2-11	Operation Mode (status)	54532870	AirConModeStatus	_027	_028	13	6918	Fb
2-11	Airflow Rate (setting)	58727175	AirFlowRateCommand	_027	_028	14	6919	set
2-11	Airflow Rate (status)	54532872	AirFlowRateStatus	_027	_028	13	6920	Fb
2-11	Measured Room Temperature	6921	RoomTemp	_027	_028	0	6921	
2-11	Set Room Temperature	8395530	TempAdjust	_027	_028	2	6922	set
2-11	Filer Limit Sign	12589835	FilterSign	_027	_028	3	6923	
2-11	Filter Limit Sign Reset	20978444	FilterSignReset	_027	_028	5	6924	
2-11	Remote Control Operation (ON/OFF)	20978445	RemoteControlStart	_027	_028	5	6925	
2-11	Remote Control Operation (Operation Mode)	20978446	RemoteControlAirConModeSet	_027	_028	5	6926	
2-11	Remote Control Operation (Set Temperature)	20978448	RemoteControlTempAdjust	_027	_028	5	6928	
2-11	Remote Control Operation (Sub Group Address Control Rejecti	20978449	CL_Rejection	_027	_028	5	6929	
2-11	Elec Total Power	96475923	ElecTotalPower	_027	_028	23	6931	
2-11	Communication Status	12589844	CommunicationStatus	_027	_028	3	6932	
2-11	System Forced OFF	20978453	SystemForcedOff	_027	_028	5	6933	
2-11	Air Direction (setting)	8395542	AirDirectionCommand	_027	_028	2	6934	
2-11	Air Direction (status)	6935	AirDirectionStatus	_027	_028	0	6935	
2-11	Forced Thermostat OFF (setting)	16784152	ForcedThermoOFFCommand	_027	_028	4	6936	
2-11	Forced Thermostat OFF (status)	12589849	ForcedThermoOFFStatus	_027	_028	3	6937	
2-11	Energy Efficiency Command (setting)	16784154	EnergyEfficiencyCommand	_027	_028	4	6938	
2-11	Energy Efficiency Command (status)	12589851	EnergyEfficiencyStatus	_027	_028	3	6939	
2-11	Thermostat Status	12589852	ThermoStatus	_027	_028	3	6940	
2-11	Compressor Status	12589853	CompressorStatus	_027	_028	3	6941	
2-11	Indoor Fan Status	12589854	IndoorFanStatus	_027	_028	3	6942	
2-11	Heater Operation Status	12589855	HeaterStatus	_027	_028	3	6943	
2-11	Ventilation Mode (setting)	58727200	VentilationModeCommand	_027	_028	14	6944	
2-11	Ventilation Mode (status)	54532897	VentilationModeStatus	_027	_028	13	6945	
2-11	Ventilation Amount (setting)	58727202	VentilationAmountCommand	_027	_028	14	6946	
2-11	Ventilation Amount (status)	54532899	VentilationAmountStatus	_027	_028	13	6947	
2-12	ON/OFF (setting)	16784385	StartStopCommand	_028	_029	4	7169	set
2-12	ON/OFF (status)	12590082	StartStopStatus	_028	_029	3	7170	Fb
2-12	Alarm Sign	12590083	Alarm	_028	_029	3	7171	
2-12	Error Code	54533124	MalfunctionCode	_028	_029	13	7172	
2-12	Operation Mode (setting)	58727429	AirConModeCommand	_028	_029	14	7173	set
2-12	Operation Mode (status)	54533126	AirConModeStatus	_028	_029	13	7174	Fb
2-12	Airflow Rate (setting)	58727431	AirFlowRateCommand	_028	_029	14	7175	set
2-12	Airflow Rate (status)	54533128	AirFlowRateStatus	_028	_029	13	7176	Fb
2-12	Measured Room Temperature	7177	RoomTemp	_028	_029	0	7177	
2-12	Set Room Temperature	8395786	TempAdjust	_028	_029	2	7178	set
2-12	Filer Limit Sign	12590091	FilterSign	_028	_029	3	7179	
2-12	Filter Limit Sign Reset	20978700	FilterSignReset	_028	_029	5	7180	
2-12	Remote Control Operation (ON/OFF)	20978701	RemoteControlStart	_028	_029	5	7181	
2-12	Remote Control Operation (Operation Mode)	20978702	RemoteControlAirConModeSet	_028	_029	5	7182	

2-12	Remote Control Operation (Set Temperature)	20978704	RemoteControlTempAdjust	_028	_029	5	7184	
2-12	Remote Control Operation (Sub Group Address Control Rejecti	20978705	CL_Rejection	_028	_029	5	7185	
2-12	Elec Total Power	96476179	ElecTotalPower	_028	_029	23	7187	
2-12	Communication Status	12590100	CommunicationStatus	_028	_029	3	7188	
2-12	System Forced OFF	20978709	SystemForcedOff	_028	_029	5	7189	
2-12	Air Direction (setting)	8395798	AirDirectionCommand	_028	_029	2	7190	
2-12	Air Direction (status)	7191	AirDirectionStatus	_028	_029	0	7191	
2-12	Forced Thermostat OFF (setting)	16784408	ForcedThermoOFFCommand	_028	_029	4	7192	
2-12	Forced Thermostat OFF (status)	12590105	ForcedThermoOFFStatus	_028	_029	3	7193	
2-12	Energy Efficiency Command (setting)	16784410	EnergyEfficiencyCommand	_028	_029	4	7194	
2-12	Energy Efficiency Command (status)	12590107	EnergyEfficiencyStatus	_028	_029	3	7195	
2-12	Thermostat Status	12590108	ThermoStatus	_028	_029	3	7196	
2-12	Compressor Status	12590109	CompressorStatus	_028	_029	3	7197	
2-12	Indoor Fan Status	12590110	IndoorFanStatus	_028	_029	3	7198	
2-12	Heater Operation Status	12590111	HeaterStatus	_028	_029	3	7199	
2-12	Ventilation Mode (setting)	58727456	VentilationModeCommand	_028	_029	14	7200	
2-12	Ventilation Mode (status)	54533153	VentilationModeStatus	_028	_029	13	7201	
2-12	Ventilation Amount (setting)	58727458	VentilationAmountCommand	_028	_029	14	7202	
2-12	Ventilation Amount (status)	54533155	VentilationAmountStatus	_028	_029	13	7203	
2-13	ON/OFF (setting)	16784641	StartStopCommand	_029	_030	4	7425	set
2-13	ON/OFF (status)	12590338	StartStopStatus	_029	_030	3	7426	Fb
2-13	Alarm Sign	12590339	Alarm	_029	_030	3	7427	
2-13	Error Code	54533380	MalfunctionCode	_029	_030	13	7428	
2-13	Operation Mode (setting)	58727685	AirConModeCommand	_029	_030	14	7429	set
2-13	Operation Mode (status)	54533382	AirConModeStatus	_029	_030	13	7430	Fb
2-13	Airflow Rate (setting)	58727687	AirFlowRateCommand	_029	_030	14	7431	set
2-13	Airflow Rate (status)	54533384	AirFlowRateStatus	_029	_030	13	7432	Fb
2-13	Measured Room Temperature	7433	RoomTemp	_029	_030	0	7433	
2-13	Set Room Temperature	8396042	TempAdjust	_029	_030	2	7434	set
2-13	Filer Limit Sign	12590347	FilterSign	_029	_030	3	7435	
2-13	Filter Limit Sign Reset	20978956	FilterSignReset	_029	_030	5	7436	
2-13	Remote Control Operation (ON/OFF)	20978957	RemoteControlStart	_029	_030	5	7437	
2-13	Remote Control Operation (Operation Mode)	20978958	RemoteControlAirConModeSet	_029	_030	5	7438	
2-13	Remote Control Operation (Set Temperature)	20978960	RemoteControlTempAdjust	_029	_030	5	7440	
2-13	Remote Control Operation (Sub Group Address Control Rejecti	20978961	CL_Rejection	_029	_030	5	7441	
2-13	Elec Total Power	96476435	ElecTotalPower	_029	_030	23	7443	
2-13	Communication Status	12590356	CommunicationStatus	_029	_030	3	7444	
2-13	System Forced OFF	20978965	SystemForcedOff	_029	_030	5	7445	
2-13	Air Direction (setting)	8396054	AirDirectionCommand	_029	_030	2	7446	
2-13	Air Direction (status)	7447	AirDirectionStatus	_029	_030	0	7447	
2-13	Forced Thermostat OFF (setting)	16784664	ForcedThermoOFFCommand	_029	_030	4	7448	
2-13	Forced Thermostat OFF (status)	12590361	ForcedThermoOFFStatus	_029	_030	3	7449	
2-13	Energy Efficiency Command (setting)	16784666	EnergyEfficiencyCommand	_029	_030	4	7450	
2-13	Energy Efficiency Command (status)	12590363	EnergyEfficiencyStatus	_029	_030	3	7451	
2-13	Thermostat Status	12590364	ThermoStatus	_029	_030	3	7452	
2-13	Compressor Status	12590365	CompressorStatus	_029	_030	3	7453	
2-13	Indoor Fan Status	12590366	IndoorFanStatus	_029	_030	3	7454	
2-13	Heater Operation Status	12590367	HeaterStatus	_029	_030	3	7455	
2-13	Ventilation Mode (setting)	58727712	VentilationModeCommand	_029	_030	14	7456	
2-13	Ventilation Mode (status)	54533409	VentilationModeStatus	_029	_030	13	7457	
2-13	Ventilation Amount (setting)	58727714	VentilationAmountCommand	_029	_030	14	7458	
2-13	Ventilation Amount (status)	54533411	VentilationAmountStatus	_029	_030	13	7459	
2-14	ON/OFF (setting)	16784897	StartStopCommand	_030	_031	4	7681	set
2-14	ON/OFF (status)	12590594	StartStopStatus	_030	_031	3	7682	Fb
2-14	Alarm Sign	12590595	Alarm	_030	_031	3	7683	
2-14	Error Code	54533636	MalfunctionCode	_030	_031	13	7684	
2-14	Operation Mode (setting)	58727941	AirConModeCommand	_030	_031	14	7685	set
2-14	Operation Mode (status)	54533638	AirConModeStatus	_030	_031	13	7686	Fb
2-14	Airflow Rate (setting)	58727943	AirFlowRateCommand	_030	_031	14	7687	set
2-14	Airflow Rate (status)	54533640	AirFlowRateStatus	_030	_031	13	7688	Fb
2-14	Measured Room Temperature	7689	RoomTemp	_030	_031	0	7689	
2-14	Set Room Temperature	8396298	TempAdjust	_030	_031	2	7690	set
2-14	Filer Limit Sign	12590603	FilterSign	_030	_031	3	7691	
2-14	Filter Limit Sign Reset	20979212	FilterSignReset	_030	_031	5	7692	
2-14	Remote Control Operation (ON/OFF)	20979213	RemoteControlStart	_030	_031	5	7693	
2-14	Remote Control Operation (Operation Mode)	20979214	RemoteControlAirConModeSet	_030	_031	5	7694	
2-14	Remote Control Operation (Set Temperature)	20979216	RemoteControlTempAdjust	_030	_031	5	7696	
2-14	Remote Control Operation (Sub Group Address Control Rejecti	20979217	CL_Rejection	_030	_031	5	7697	
2-14	Elec Total Power	96476691	ElecTotalPower	_030	_031	23	7699	

2-14	Communication Status	12590612	CommunicationStatus	_030	_031	3	7700	
2-14	System Forced OFF	20979221	SystemForcedOff	_030	_031	5	7701	
2-14	Air Direction (setting)	8396310	AirDirectionCommand	_030	_031	2	7702	
2-14	Air Direction (status)	7703	AirDirectionStatus	_030	_031	0	7703	
2-14	Forced Thermostat OFF (setting)	16784920	ForcedThermoOFFCommand	_030	_031	4	7704	
2-14	Forced Thermostat OFF (status)	12590617	ForcedThermoOFFStatus	_030	_031	3	7705	
2-14	Energy Efficiency Command (setting)	16784922	EnergyEfficiencyCommand	_030	_031	4	7706	
2-14	Energy Efficiency Command (status)	12590619	EnergyEfficiencyStatus	_030	_031	3	7707	
2-14	Thermostat Status	12590620	ThermoStatus	_030	_031	3	7708	
2-14	Compressor Status	12590621	CompressorStatus	_030	_031	3	7709	
2-14	Indoor Fan Status	12590622	IndoorFanStatus	_030	_031	3	7710	
2-14	Heater Operation Status	12590623	HeaterStatus	_030	_031	3	7711	
2-14	Ventilation Mode (setting)	58727968	VentilationModeCommand	_030	_031	14	7712	
2-14	Ventilation Mode (status)	54533665	VentilationModeStatus	_030	_031	13	7713	
2-14	Ventilation Amount (setting)	58727970	VentilationAmountCommand	_030	_031	14	7714	
2-14	Ventilation Amount (status)	54533667	VentilationAmountStatus	_030	_031	13	7715	
2-15	ON/OFF (setting)	16785153	StartStopCommand	_031	_032	4	7937	set
2-15	ON/OFF (status)	12590850	StartStopStatus	_031	_032	3	7938	Fb
2-15	Alarm Sign	12590851	Alarm	_031	_032	3	7939	
2-15	Error Code	54533892	MalfunctionCode	_031	_032	13	7940	
2-15	Operation Mode (setting)	58728197	AirConModeCommand	_031	_032	14	7941	set
2-15	Operation Mode (status)	54533894	AirConModeStatus	_031	_032	13	7942	Fb
2-15	Airflow Rate (setting)	58728199	AirFlowRateCommand	_031	_032	14	7943	set
2-15	Airflow Rate (status)	54533896	AirFlowRateStatus	_031	_032	13	7944	Fb
2-15	Measured Room Temperature	7945	RoomTemp	_031	_032	0	7945	
2-15	Set Room Temperature	8396554	TempAdjust	_031	_032	2	7946	set
2-15	Filer Limit Sign	12590859	FilterSign	_031	_032	3	7947	
2-15	Filter Limit Sign Reset	20979468	FilterSignReset	_031	_032	5	7948	
2-15	Remote Control Operation (ON/OFF)	20979469	RemoteControlStart	_031	_032	5	7949	
2-15	Remote Control Operation (Operation Mode)	20979470	RemoteControlAirConModeSet	_031	_032	5	7950	
2-15	Remote Control Operation (Set Temperature)	20979472	RemoteControlTempAdjust	_031	_032	5	7952	
2-15	Remote Control Operation (Sub Group Address Control Reject)	20979473	CL_Rejection	_031	_032	5	7953	
2-15	Elec Total Power	96476947	ElecTotalPower	_031	_032	23	7955	
2-15	Communication Status	12590868	CommunicationStatus	_031	_032	3	7956	
2-15	System Forced OFF	20979477	SystemForcedOff	_031	_032	5	7957	
2-15	Air Direction (setting)	8396566	AirDirectionCommand	_031	_032	2	7958	
2-15	Air Direction (status)	7959	AirDirectionStatus	_031	_032	0	7959	
2-15	Forced Thermostat OFF (setting)	16785176	ForcedThermoOFFCommand	_031	_032	4	7960	
2-15	Forced Thermostat OFF (status)	12590873	ForcedThermoOFFStatus	_031	_032	3	7961	
2-15	Energy Efficiency Command (setting)	16785178	EnergyEfficiencyCommand	_031	_032	4	7962	
2-15	Energy Efficiency Command (status)	12590875	EnergyEfficiencyStatus	_031	_032	3	7963	
2-15	Thermostat Status	12590876	ThermoStatus	_031	_032	3	7964	
2-15	Compressor Status	12590877	CompressorStatus	_031	_032	3	7965	
2-15	Indoor Fan Status	12590878	IndoorFanStatus	_031	_032	3	7966	
2-15	Heater Operation Status	12590879	HeaterStatus	_031	_032	3	7967	
2-15	Ventilation Mode (setting)	58728224	VentilationModeCommand	_031	_032	14	7968	
2-15	Ventilation Mode (status)	54533921	VentilationModeStatus	_031	_032	13	7969	
2-15	Ventilation Amount (setting)	58728226	VentilationAmountCommand	_031	_032	14	7970	
2-15	Ventilation Amount (status)	54533923	VentilationAmountStatus	_031	_032	13	7971	
3-00	ON/OFF (setting)	16785409	StartStopCommand	_032	_033	4	8193	set
3-00	ON/OFF (status)	12591106	StartStopStatus	_032	_033	3	8194	Fb
3-00	Alarm Sign	12591107	Alarm	_032	_033	3	8195	
3-00	Error Code	54534148	MalfunctionCode	_032	_033	13	8196	
3-00	Operation Mode (setting)	58728453	AirConModeCommand	_032	_033	14	8197	set
3-00	Operation Mode (status)	54534150	AirConModeStatus	_032	_033	13	8198	Fb
3-00	Airflow Rate (setting)	58728455	AirFlowRateCommand	_032	_033	14	8199	set
3-00	Airflow Rate (status)	54534152	AirFlowRateStatus	_032	_033	13	8200	Fb
3-00	Measured Room Temperature	8201	RoomTemp	_032	_033	0	8201	
3-00	Set Room Temperature	8396810	TempAdjust	_032	_033	2	8202	set
3-00	Filer Limit Sign	12591115	FilterSign	_032	_033	3	8203	
3-00	Filter Limit Sign Reset	20979724	FilterSignReset	_032	_033	5	8204	
3-00	Remote Control Operation (ON/OFF)	20979725	RemoteControlStart	_032	_033	5	8205	
3-00	Remote Control Operation (Operation Mode)	20979726	RemoteControlAirConModeSet	_032	_033	5	8206	
3-00	Remote Control Operation (Set Temperature)	20979728	RemoteControlTempAdjust	_032	_033	5	8208	
3-00	Remote Control Operation (Sub Group Address Control Reject)	20979729	CL_Rejection	_032	_033	5	8209	
3-00	Elec Total Power	96477203	ElecTotalPower	_032	_033	23	8211	
3-00	Communication Status	12591124	CommunicationStatus	_032	_033	3	8212	
3-00	System Forced OFF	20979733	SystemForcedOff	_032	_033	5	8213	
3-00	Air Direction (setting)	8396822	AirDirectionCommand	_032	_033	2	8214	



3-00	Air Direction (status)	8215	AirDirectionStatus	_032	_033	0	8215	
3-00	Forced Thermostat OFF (setting)	16785432	ForcedThermoOFFCommand	_032	_033	4	8216	
3-00	Forced Thermostat OFF (status)	12591129	ForcedThermoOFFStatus	_032	_033	3	8217	
3-00	Energy Efficiency Command (setting)	16785434	EnergyEfficiencyCommand	_032	_033	4	8218	
3-00	Energy Efficiency Command (status)	12591131	EnergyEfficiencyStatus	_032	_033	3	8219	
3-00	Thermostat Status	12591132	ThermoStatus	_032	_033	3	8220	
3-00	Compressor Status	12591133	CompressorStatus	_032	_033	3	8221	
3-00	Indoor Fan Status	12591134	IndoorFanStatus	_032	_033	3	8222	
3-00	Heater Operation Status	12591135	HeaterStatus	_032	_033	3	8223	
3-00	Ventilation Mode (setting)	58728480	VentilationModeCommand	_032	_033	14	8224	
3-00	Ventilation Mode (status)	54534177	VentilationModeStatus	_032	_033	13	8225	
3-00	Ventilation Amount (setting)	58728482	VentilationAmountCommand	_032	_033	14	8226	
3-00	Ventilation Amount (status)	54534179	VentilationAmountStatus	_032	_033	13	8227	
3-01	ON/OFF (setting)	16785665	StartStopCommand	_033	_034	4	8449	set
3-01	ON/OFF (status)	12591362	StartStopStatus	_033	_034	3	8450	Fb
3-01	Alarm Sign	12591363	Alarm	_033	_034	3	8451	
3-01	Error Code	54534404	MalfunctionCode	_033	_034	13	8452	
3-01	Operation Mode (setting)	58728709	AirConModeCommand	_033	_034	14	8453	set
3-01	Operation Mode (status)	54534406	AirConModeStatus	_033	_034	13	8454	Fb
3-01	Airflow Rate (setting)	58728711	AirFlowRateCommand	_033	_034	14	8455	set
3-01	Airflow Rate (status)	54534408	AirFlowRateStatus	_033	_034	13	8456	Fb
3-01	Measured Room Temperature	8457	RoomTemp	_033	_034	0	8457	
3-01	Set Room Temperature	8397066	TempAdjust	_033	_034	2	8458	set
3-01	Filer Limit Sign	12591371	FilterSign	_033	_034	3	8459	
3-01	Filter Limit Sign Reset	20979980	FilterSignReset	_033	_034	5	8460	
3-01	Remote Control Operation (ON/OFF)	20979981	RemoteControlStart	_033	_034	5	8461	
3-01	Remote Control Operation (Operation Mode)	20979982	RemoteControlAirConModeSet	_033	_034	5	8462	
3-01	Remote Control Operation (Set Temperature)	20979984	RemoteControlTempAdjust	_033	_034	5	8464	
3-01	Remote Control Operation (Sub Group Address Control Reject)	20979985	CL_Rejection	_033	_034	5	8465	
3-01	Elec Total Power	96477459	ElecTotalPower	_033	_034	23	8467	
3-01	Communication Status	12591380	CommunicationStatus	_033	_034	3	8468	
3-01	System Forced OFF	20979989	SystemForcedOff	_033	_034	5	8469	
3-01	Air Direction (setting)	8397078	AirDirectionCommand	_033	_034	2	8470	
3-01	Air Direction (status)	8471	AirDirectionStatus	_033	_034	0	8471	
3-01	Forced Thermostat OFF (setting)	16785688	ForcedThermoOFFCommand	_033	_034	4	8472	
3-01	Forced Thermostat OFF (status)	12591385	ForcedThermoOFFStatus	_033	_034	3	8473	
3-01	Energy Efficiency Command (setting)	16785690	EnergyEfficiencyCommand	_033	_034	4	8474	
3-01	Energy Efficiency Command (status)	12591387	EnergyEfficiencyStatus	_033	_034	3	8475	
3-01	Thermostat Status	12591388	ThermoStatus	_033	_034	3	8476	
3-01	Compressor Status	12591389	CompressorStatus	_033	_034	3	8477	
3-01	Indoor Fan Status	12591390	IndoorFanStatus	_033	_034	3	8478	
3-01	Heater Operation Status	12591391	HeaterStatus	_033	_034	3	8479	
3-01	Ventilation Mode (setting)	58728736	VentilationModeCommand	_033	_034	14	8480	
3-01	Ventilation Mode (status)	54534433	VentilationModeStatus	_033	_034	13	8481	
3-01	Ventilation Amount (setting)	58728738	VentilationAmountCommand	_033	_034	14	8482	
3-01	Ventilation Amount (status)	54534435	VentilationAmountStatus	_033	_034	13	8483	
3-02	ON/OFF (setting)	16785921	StartStopCommand	_034	_035	4	8705	set
3-02	ON/OFF (status)	12591618	StartStopStatus	_034	_035	3	8706	Fb
3-02	Alarm Sign	12591619	Alarm	_034	_035	3	8707	
3-02	Error Code	54534660	MalfunctionCode	_034	_035	13	8708	
3-02	Operation Mode (setting)	58728965	AirConModeCommand	_034	_035	14	8709	set
3-02	Operation Mode (status)	54534662	AirConModeStatus	_034	_035	13	8710	Fb
3-02	Airflow Rate (setting)	58728967	AirFlowRateCommand	_034	_035	14	8711	set
3-02	Airflow Rate (status)	54534664	AirFlowRateStatus	_034	_035	13	8712	Fb
3-02	Measured Room Temperature	8713	RoomTemp	_034	_035	0	8713	
3-02	Set Room Temperature	8397322	TempAdjust	_034	_035	2	8714	set
3-02	Filer Limit Sign	12591627	FilterSign	_034	_035	3	8715	
3-02	Filter Limit Sign Reset	20980236	FilterSignReset	_034	_035	5	8716	
3-02	Remote Control Operation (ON/OFF)	20980237	RemoteControlStart	_034	_035	5	8717	
3-02	Remote Control Operation (Operation Mode)	20980238	RemoteControlAirConModeSet	_034	_035	5	8718	
3-02	Remote Control Operation (Set Temperature)	20980240	RemoteControlTempAdjust	_034	_035	5	8720	
3-02	Remote Control Operation (Sub Group Address Control Reject)	20980241	CL_Rejection	_034	_035	5	8721	
3-02	Elec Total Power	96477715	ElecTotalPower	_034	_035	23	8723	
3-02	Communication Status	12591636	CommunicationStatus	_034	_035	3	8724	
3-02	System Forced OFF	20980245	SystemForcedOff	_034	_035	5	8725	
3-02	Air Direction (setting)	8397334	AirDirectionCommand	_034	_035	2	8726	
3-02	Air Direction (status)	8727	AirDirectionStatus	_034	_035	0	8727	
3-02	Forced Thermostat OFF (setting)	16785944	ForcedThermoOFFCommand	_034	_035	4	8728	
3-02	Forced Thermostat OFF (status)	12591641	ForcedThermoOFFStatus	_034	_035	3	8729	

3-02	Energy Efficiency Command (setting)	16785946	EnergyEfficiencyCommand	_034	_035	4	8730	
3-02	Energy Efficiency Command (status)	12591643	EnergyEfficiencyStatus	_034	_035	3	8731	
3-02	Thermostat Status	12591644	ThermoStatus	_034	_035	3	8732	
3-02	Compressor Status	12591645	CompressorStatus	_034	_035	3	8733	
3-02	Indoor Fan Status	12591646	IndoorFanStatus	_034	_035	3	8734	
3-02	Heater Operation Status	12591647	HeaterStatus	_034	_035	3	8735	
3-02	Ventilation Mode (setting)	58728992	VentilationModeCommand	_034	_035	14	8736	
3-02	Ventilation Mode (status)	54534689	VentilationModeStatus	_034	_035	13	8737	
3-02	Ventilation Amount (setting)	58728994	VentilationAmountCommand	_034	_035	14	8738	
3-02	Ventilation Amount (status)	54534691	VentilationAmountStatus	_034	_035	13	8739	
3-03	ON/OFF (setting)	16786177	StartStopCommand	_035	_036	4	8961	set
3-03	ON/OFF (status)	12591874	StartStopStatus	_035	_036	3	8962	Fb
3-03	Alarm Sign	12591875	Alarm	_035	_036	3	8963	
3-03	Error Code	54534916	MalfunctionCode	_035	_036	13	8964	
3-03	Operation Mode (setting)	58729221	AirConModeCommand	_035	_036	14	8965	set
3-03	Operation Mode (status)	54534918	AirConModeStatus	_035	_036	13	8966	Fb
3-03	Airflow Rate (setting)	58729223	AirFlowRateCommand	_035	_036	14	8967	set
3-03	Airflow Rate (status)	54534920	AirFlowRateStatus	_035	_036	13	8968	Fb
3-03	Measured Room Temperature	8969	RoomTemp	_035	_036	0	8969	
3-03	Set Room Temperature	8397578	TempAdjust	_035	_036	2	8970	set
3-03	Filer Limit Sign	12591883	FilterSign	_035	_036	3	8971	
3-03	Filter Limit Sign Reset	20980492	FilterSignReset	_035	_036	5	8972	
3-03	Remote Control Operation (ON/OFF)	20980493	RemoteControlStart	_035	_036	5	8973	
3-03	Remote Control Operation (Operation Mode)	20980494	RemoteControlAirConModeSet	_035	_036	5	8974	
3-03	Remote Control Operation (Set Temperature)	20980496	RemoteControlTempAdjust	_035	_036	5	8976	
3-03	Remote Control Operation (Sub Group Address Control Reject)	20980497	CL_Rejection	_035	_036	5	8977	
3-03	Elec Total Power	96477971	ElecTotalPower	_035	_036	23	8979	
3-03	Communication Status	12591892	CommunicationStatus	_035	_036	3	8980	
3-03	System Forced OFF	20980501	SystemForcedOff	_035	_036	5	8981	
3-03	Air Direction (setting)	8397590	AirDirectionCommand	_035	_036	2	8982	
3-03	Air Direction (status)	8983	AirDirectionStatus	_035	_036	0	8983	
3-03	Forced Thermostat OFF (setting)	16786200	ForcedThermoOFFCommand	_035	_036	4	8984	
3-03	Forced Thermostat OFF (status)	12591897	ForcedThermoOFFStatus	_035	_036	3	8985	
3-03	Energy Efficiency Command (setting)	16786202	EnergyEfficiencyCommand	_035	_036	4	8986	
3-03	Energy Efficiency Command (status)	12591899	EnergyEfficiencyStatus	_035	_036	3	8987	
3-03	Thermostat Status	12591900	ThermoStatus	_035	_036	3	8988	
3-03	Compressor Status	12591901	CompressorStatus	_035	_036	3	8989	
3-03	Indoor Fan Status	12591902	IndoorFanStatus	_035	_036	3	8990	
3-03	Heater Operation Status	12591903	HeaterStatus	_035	_036	3	8991	
3-03	Ventilation Mode (setting)	58729248	VentilationModeCommand	_035	_036	14	8992	
3-03	Ventilation Mode (status)	54534945	VentilationModeStatus	_035	_036	13	8993	
3-03	Ventilation Amount (setting)	58729250	VentilationAmountCommand	_035	_036	14	8994	
3-03	Ventilation Amount (status)	54534947	VentilationAmountStatus	_035	_036	13	8995	
3-04	ON/OFF (setting)	16786433	StartStopCommand	_036	_037	4	9217	set
3-04	ON/OFF (status)	12592130	StartStopStatus	_036	_037	3	9218	Fb
3-04	Alarm Sign	12592131	Alarm	_036	_037	3	9219	
3-04	Error Code	54535172	MalfunctionCode	_036	_037	13	9220	
3-04	Operation Mode (setting)	58729477	AirConModeCommand	_036	_037	14	9221	set
3-04	Operation Mode (status)	54535174	AirConModeStatus	_036	_037	13	9222	Fb
3-04	Airflow Rate (setting)	58729479	AirFlowRateCommand	_036	_037	14	9223	set
3-04	Airflow Rate (status)	54535176	AirFlowRateStatus	_036	_037	13	9224	Fb
3-04	Measured Room Temperature	9225	RoomTemp	_036	_037	0	9225	
3-04	Set Room Temperature	8397834	TempAdjust	_036	_037	2	9226	set
3-04	Filer Limit Sign	12592139	FilterSign	_036	_037	3	9227	
3-04	Filter Limit Sign Reset	20980748	FilterSignReset	_036	_037	5	9228	
3-04	Remote Control Operation (ON/OFF)	20980749	RemoteControlStart	_036	_037	5	9229	
3-04	Remote Control Operation (Operation Mode)	20980750	RemoteControlAirConModeSet	_036	_037	5	9230	
3-04	Remote Control Operation (Set Temperature)	20980752	RemoteControlTempAdjust	_036	_037	5	9232	
3-04	Remote Control Operation (Sub Group Address Control Reject)	20980753	CL_Rejection	_036	_037	5	9233	
3-04	Elec Total Power	96478227	ElecTotalPower	_036	_037	23	9235	
3-04	Communication Status	12592148	CommunicationStatus	_036	_037	3	9236	
3-04	System Forced OFF	20980757	SystemForcedOff	_036	_037	5	9237	
3-04	Air Direction (setting)	8397846	AirDirectionCommand	_036	_037	2	9238	
3-04	Air Direction (status)	9239	AirDirectionStatus	_036	_037	0	9239	
3-04	Forced Thermostat OFF (setting)	16786456	ForcedThermoOFFCommand	_036	_037	4	9240	
3-04	Forced Thermostat OFF (status)	12592153	ForcedThermoOFFStatus	_036	_037	3	9241	
3-04	Energy Efficiency Command (setting)	16786458	EnergyEfficiencyCommand	_036	_037	4	9242	
3-04	Energy Efficiency Command (status)	12592155	EnergyEfficiencyStatus	_036	_037	3	9243	
3-04	Thermostat Status	12592156	ThermoStatus	_036	_037	3	9244	

3-04	Compressor Status	12592157	CompressorStatus	_036	_037	3	9245	
3-04	Indoor Fan Status	12592158	IndoorFanStatus	_036	_037	3	9246	
3-04	Heater Operation Status	12592159	HeaterStatus	_036	_037	3	9247	
3-04	Ventilation Mode (setting)	58729504	VentilationModeCommand	_036	_037	14	9248	
3-04	Ventilation Mode (status)	54535201	VentilationModeStatus	_036	_037	13	9249	
3-04	Ventilation Amount (setting)	58729506	VentilationAmountCommand	_036	_037	14	9250	
3-04	Ventilation Amount (status)	54535203	VentilationAmountStatus	_036	_037	13	9251	
3-05	ON/OFF (setting)	16786689	StartStopCommand	_037	_038	4	9473	set
3-05	ON/OFF (status)	12592386	StartStopStatus	_037	_038	3	9474	Fb
3-05	Alarm Sign	12592387	Alarm	_037	_038	3	9475	
3-05	Error Code	54535428	MalfunctionCode	_037	_038	13	9476	
3-05	Operation Mode (setting)	58729733	AirConModeCommand	_037	_038	14	9477	set
3-05	Operation Mode (status)	54535430	AirConModeStatus	_037	_038	13	9478	Fb
3-05	Airflow Rate (setting)	58729735	AirFlowRateCommand	_037	_038	14	9479	set
3-05	Airflow Rate (status)	54535432	AirFlowRateStatus	_037	_038	13	9480	Fb
3-05	Measured Room Temperature	9481	RoomTemp	_037	_038	0	9481	
3-05	Set Room Temperature	8398090	TempAdjust	_037	_038	2	9482	set
3-05	Filer Limit Sign	12592395	FilterSign	_037	_038	3	9483	
3-05	Filter Limit Sign Reset	20981004	FilterSignReset	_037	_038	5	9484	
3-05	Remote Control Operation (ON/OFF)	20981005	RemoteControlStart	_037	_038	5	9485	
3-05	Remote Control Operation (Operation Mode)	20981006	RemoteControlAirConModeSet	_037	_038	5	9486	
3-05	Remote Control Operation (Set Temperature)	20981008	RemoteControlTempAdjust	_037	_038	5	9488	
3-05	Remote Control Operation (Sub Group Address Control Reject)	20981009	CL_Rejection	_037	_038	5	9489	
3-05	Elec Total Power	96478483	ElecTotalPower	_037	_038	23	9491	
3-05	Communication Status	12592404	CommunicationStatus	_037	_038	3	9492	
3-05	System Forced OFF	20981013	SystemForcedOff	_037	_038	5	9493	
3-05	Air Direction (setting)	8398102	AirDirectionCommand	_037	_038	2	9494	
3-05	Air Direction (status)	9495	AirDirectionStatus	_037	_038	0	9495	
3-05	Forced Thermostat OFF (setting)	16786712	ForcedThermoOFFCommand	_037	_038	4	9496	
3-05	Forced Thermostat OFF (status)	12592409	ForcedThermoOFFStatus	_037	_038	3	9497	
3-05	Energy Efficiency Command (setting)	16786714	EnergyEfficiencyCommand	_037	_038	4	9498	
3-05	Energy Efficiency Command (status)	12592411	EnergyEfficiencyStatus	_037	_038	3	9499	
3-05	Thermostat Status	12592412	ThermoStatus	_037	_038	3	9500	
3-05	Compressor Status	12592413	CompressorStatus	_037	_038	3	9501	
3-05	Indoor Fan Status	12592414	IndoorFanStatus	_037	_038	3	9502	
3-05	Heater Operation Status	12592415	HeaterStatus	_037	_038	3	9503	
3-05	Ventilation Mode (setting)	58729760	VentilationModeCommand	_037	_038	14	9504	
3-05	Ventilation Mode (status)	54535457	VentilationModeStatus	_037	_038	13	9505	
3-05	Ventilation Amount (setting)	58729762	VentilationAmountCommand	_037	_038	14	9506	
3-05	Ventilation Amount (status)	54535459	VentilationAmountStatus	_037	_038	13	9507	
3-06	ON/OFF (setting)	16786945	StartStopCommand	_038	_039	4	9729	set
3-06	ON/OFF (status)	12592642	StartStopStatus	_038	_039	3	9730	Fb
3-06	Alarm Sign	12592643	Alarm	_038	_039	3	9731	
3-06	Error Code	54535684	MalfunctionCode	_038	_039	13	9732	
3-06	Operation Mode (setting)	58729989	AirConModeCommand	_038	_039	14	9733	set
3-06	Operation Mode (status)	54535686	AirConModeStatus	_038	_039	13	9734	Fb
3-06	Airflow Rate (setting)	58729991	AirFlowRateCommand	_038	_039	14	9735	set
3-06	Airflow Rate (status)	54535688	AirFlowRateStatus	_038	_039	13	9736	Fb
3-06	Measured Room Temperature	9737	RoomTemp	_038	_039	0	9737	
3-06	Set Room Temperature	8398346	TempAdjust	_038	_039	2	9738	set
3-06	Filer Limit Sign	12592651	FilterSign	_038	_039	3	9739	
3-06	Filter Limit Sign Reset	20981260	FilterSignReset	_038	_039	5	9740	
3-06	Remote Control Operation (ON/OFF)	20981261	RemoteControlStart	_038	_039	5	9741	
3-06	Remote Control Operation (Operation Mode)	20981262	RemoteControlAirConModeSet	_038	_039	5	9742	
3-06	Remote Control Operation (Set Temperature)	20981264	RemoteControlTempAdjust	_038	_039	5	9744	
3-06	Remote Control Operation (Sub Group Address Control Reject)	20981265	CL_Rejection	_038	_039	5	9745	
3-06	Elec Total Power	96478739	ElecTotalPower	_038	_039	23	9747	
3-06	Communication Status	12592660	CommunicationStatus	_038	_039	3	9748	
3-06	System Forced OFF	20981269	SystemForcedOff	_038	_039	5	9749	
3-06	Air Direction (setting)	8398358	AirDirectionCommand	_038	_039	2	9750	
3-06	Air Direction (status)	9751	AirDirectionStatus	_038	_039	0	9751	
3-06	Forced Thermostat OFF (setting)	16786968	ForcedThermoOFFCommand	_038	_039	4	9752	
3-06	Forced Thermostat OFF (status)	12592665	ForcedThermoOFFStatus	_038	_039	3	9753	
3-06	Energy Efficiency Command (setting)	16786970	EnergyEfficiencyCommand	_038	_039	4	9754	
3-06	Energy Efficiency Command (status)	12592667	EnergyEfficiencyStatus	_038	_039	3	9755	
3-06	Thermostat Status	12592668	ThermoStatus	_038	_039	3	9756	
3-06	Compressor Status	12592669	CompressorStatus	_038	_039	3	9757	
3-06	Indoor Fan Status	12592670	IndoorFanStatus	_038	_039	3	9758	
3-06	Heater Operation Status	12592671	HeaterStatus	_038	_039	3	9759	

3-06	Ventilation Mode (setting)	58730016	VentilationModeCommand	_038	_039	14	9760	
3-06	Ventilation Mode (status)	54535713	VentilationModeStatus	_038	_039	13	9761	
3-06	Ventilation Amount (setting)	58730018	VentilationAmountCommand	_038	_039	14	9762	
3-06	Ventilation Amount (status)	54535715	VentilationAmountStatus	_038	_039	13	9763	
3-07	ON/OFF (setting)	16787201	StartStopCommand	_039	_040	4	9985	set
3-07	ON/OFF (status)	12592898	StartStopStatus	_039	_040	3	9986	Fb
3-07	Alarm Sign	12592899	Alarm	_039	_040	3	9987	
3-07	Error Code	54535940	MalfunctionCode	_039	_040	13	9988	
3-07	Operation Mode (setting)	58730245	AirConModeCommand	_039	_040	14	9989	set
3-07	Operation Mode (status)	54535942	AirConModeStatus	_039	_040	13	9990	Fb
3-07	Airflow Rate (setting)	58730247	AirFlowRateCommand	_039	_040	14	9991	set
3-07	Airflow Rate (status)	54535944	AirFlowRateStatus	_039	_040	13	9992	Fb
3-07	Measured Room Temperature	9993	RoomTemp	_039	_040	0	9993	
3-07	Set Room Temperature	8398602	TempAdjust	_039	_040	2	9994	set
3-07	Filer Limit Sign	12592907	FilterSign	_039	_040	3	9995	
3-07	Filter Limit Sign Reset	20981516	FilterSignReset	_039	_040	5	9996	
3-07	Remote Control Operation (ON/OFF)	20981517	RemoteControlStart	_039	_040	5	9997	
3-07	Remote Control Operation (Operation Mode)	20981518	RemoteControlAirConModeSet	_039	_040	5	9998	
3-07	Remote Control Operation (Set Temperature)	20981520	RemoteControlTempAdjust	_039	_040	5	10000	
3-07	Remote Control Operation (Sub Group Address Control Reject)	20981521	CL_Rejection	_039	_040	5	10001	
3-07	Elec Total Power	96478995	ElecTotalPower	_039	_040	23	10003	
3-07	Communication Status	12592916	CommunicationStatus	_039	_040	3	10004	
3-07	System Forced OFF	20981525	SystemForcedOff	_039	_040	5	10005	
3-07	Air Direction (setting)	8398614	AirDirectionCommand	_039	_040	2	10006	
3-07	Air Direction (status)	10007	AirDirectionStatus	_039	_040	0	10007	
3-07	Forced Thermostat OFF (setting)	16787224	ForcedThermoOFFCommand	_039	_040	4	10008	
3-07	Forced Thermostat OFF (status)	12592921	ForcedThermoOFFStatus	_039	_040	3	10009	
3-07	Energy Efficiency Command (setting)	16787226	EnergyEfficiencyCommand	_039	_040	4	10010	
3-07	Energy Efficiency Command (status)	12592923	EnergyEfficiencyStatus	_039	_040	3	10011	
3-07	Thermostat Status	12592924	ThermoStatus	_039	_040	3	10012	
3-07	Compressor Status	12592925	CompressorStatus	_039	_040	3	10013	
3-07	Indoor Fan Status	12592926	IndoorFanStatus	_039	_040	3	10014	
3-07	Heater Operation Status	12592927	HeaterStatus	_039	_040	3	10015	
3-07	Ventilation Mode (setting)	58730272	VentilationModeCommand	_039	_040	14	10016	
3-07	Ventilation Mode (status)	54535969	VentilationModeStatus	_039	_040	13	10017	
3-07	Ventilation Amount (setting)	58730274	VentilationAmountCommand	_039	_040	14	10018	
3-07	Ventilation Amount (status)	54535971	VentilationAmountStatus	_039	_040	13	10019	
3-08	ON/OFF (setting)	16787457	StartStopCommand	_040	_041	4	10241	set
3-08	ON/OFF (status)	12593154	StartStopStatus	_040	_041	3	10242	Fb
3-08	Alarm Sign	12593155	Alarm	_040	_041	3	10243	
3-08	Error Code	54536196	MalfunctionCode	_040	_041	13	10244	
3-08	Operation Mode (setting)	58730501	AirConModeCommand	_040	_041	14	10245	set
3-08	Operation Mode (status)	54536198	AirConModeStatus	_040	_041	13	10246	Fb
3-08	Airflow Rate (setting)	58730503	AirFlowRateCommand	_040	_041	14	10247	set
3-08	Airflow Rate (status)	54536200	AirFlowRateStatus	_040	_041	13	10248	Fb
3-08	Measured Room Temperature	10249	RoomTemp	_040	_041	0	10249	
3-08	Set Room Temperature	8398858	TempAdjust	_040	_041	2	10250	set
3-08	Filer Limit Sign	12593163	FilterSign	_040	_041	3	10251	
3-08	Filter Limit Sign Reset	20981772	FilterSignReset	_040	_041	5	10252	
3-08	Remote Control Operation (ON/OFF)	20981773	RemoteControlStart	_040	_041	5	10253	
3-08	Remote Control Operation (Operation Mode)	20981774	RemoteControlAirConModeSet	_040	_041	5	10254	
3-08	Remote Control Operation (Set Temperature)	20981776	RemoteControlTempAdjust	_040	_041	5	10256	
3-08	Remote Control Operation (Sub Group Address Control Reject)	20981777	CL_Rejection	_040	_041	5	10257	
3-08	Elec Total Power	96479251	ElecTotalPower	_040	_041	23	10259	
3-08	Communication Status	12593172	CommunicationStatus	_040	_041	3	10260	
3-08	System Forced OFF	20981781	SystemForcedOff	_040	_041	5	10261	
3-08	Air Direction (setting)	8398870	AirDirectionCommand	_040	_041	2	10262	
3-08	Air Direction (status)	10263	AirDirectionStatus	_040	_041	0	10263	
3-08	Forced Thermostat OFF (setting)	16787480	ForcedThermoOFFCommand	_040	_041	4	10264	
3-08	Forced Thermostat OFF (status)	12593177	ForcedThermoOFFStatus	_040	_041	3	10265	
3-08	Energy Efficiency Command (setting)	16787482	EnergyEfficiencyCommand	_040	_041	4	10266	
3-08	Energy Efficiency Command (status)	12593179	EnergyEfficiencyStatus	_040	_041	3	10267	
3-08	Thermostat Status	12593180	ThermoStatus	_040	_041	3	10268	
3-08	Compressor Status	12593181	CompressorStatus	_040	_041	3	10269	
3-08	Indoor Fan Status	12593182	IndoorFanStatus	_040	_041	3	10270	
3-08	Heater Operation Status	12593183	HeaterStatus	_040	_041	3	10271	
3-08	Ventilation Mode (setting)	58730528	VentilationModeCommand	_040	_041	14	10272	
3-08	Ventilation Mode (status)	54536225	VentilationModeStatus	_040	_041	13	10273	
3-08	Ventilation Amount (setting)	58730530	VentilationAmountCommand	_040	_041	14	10274	

3-08	Ventilation Amount (status)	54536227	VentilationAmountStatus	_040	_041	13	10275	
3-09	ON/OFF (setting)	16787713	StartStopCommand	_041	_042	4	10497	set
3-09	ON/OFF (status)	12593410	StartStopStatus	_041	_042	3	10498	Fb
3-09	Alarm Sign	12593411	Alarm	_041	_042	3	10499	
3-09	Error Code	54536452	MalfunctionCode	_041	_042	13	10500	
3-09	Operation Mode (setting)	58730757	AirConModeCommand	_041	_042	14	10501	set
3-09	Operation Mode (status)	54536454	AirConModeStatus	_041	_042	13	10502	Fb
3-09	Airflow Rate (setting)	58730759	AirFlowRateCommand	_041	_042	14	10503	set
3-09	Airflow Rate (status)	54536456	AirFlowRateStatus	_041	_042	13	10504	Fb
3-09	Measured Room Temperature	10505	RoomTemp	_041	_042	0	10505	
3-09	Set Room Temperature	8399114	TempAdjust	_041	_042	2	10506	set
3-09	Filer Limit Sign	12593419	FilterSign	_041	_042	3	10507	
3-09	Filter Limit Sign Reset	20982028	FilterSignReset	_041	_042	5	10508	
3-09	Remote Control Operation (ON/OFF)	20982029	RemoteControlStart	_041	_042	5	10509	
3-09	Remote Control Operation (Operation Mode)	20982030	RemoteControlAirConModeSet	_041	_042	5	10510	
3-09	Remote Control Operation (Set Temperature)	20982032	RemoteControlTempAdjust	_041	_042	5	10512	
3-09	Remote Control Operation (Sub Group Address Control Reject)	20982033	CL_Rejection	_041	_042	5	10513	
3-09	Elec Total Power	96479507	ElecTotalPower	_041	_042	23	10515	
3-09	Communication Status	12593428	CommunicationStatus	_041	_042	3	10516	
3-09	System Forced OFF	20982037	SystemForcedOff	_041	_042	5	10517	
3-09	Air Direction (setting)	8399126	AirDirectionCommand	_041	_042	2	10518	
3-09	Air Direction (status)	10519	AirDirectionStatus	_041	_042	0	10519	
3-09	Forced Thermostat OFF (setting)	16787736	ForcedThermoOFFCommand	_041	_042	4	10520	
3-09	Forced Thermostat OFF (status)	12593433	ForcedThermoOFFStatus	_041	_042	3	10521	
3-09	Energy Efficiency Command (setting)	16787738	EnergyEfficiencyCommand	_041	_042	4	10522	
3-09	Energy Efficiency Command (status)	12593435	EnergyEfficiencyStatus	_041	_042	3	10523	
3-09	Thermostat Status	12593436	ThermoStatus	_041	_042	3	10524	
3-09	Compressor Status	12593437	CompressorStatus	_041	_042	3	10525	
3-09	Indoor Fan Status	12593438	IndoorFanStatus	_041	_042	3	10526	
3-09	Heater Operation Status	12593439	HeaterStatus	_041	_042	3	10527	
3-09	Ventilation Mode (setting)	58730784	VentilationModeCommand	_041	_042	14	10528	
3-09	Ventilation Mode (status)	54536481	VentilationModeStatus	_041	_042	13	10529	
3-09	Ventilation Amount (setting)	58730786	VentilationAmountCommand	_041	_042	14	10530	
3-09	Ventilation Amount (status)	54536483	VentilationAmountStatus	_041	_042	13	10531	
3-10	ON/OFF (setting)	16787969	StartStopCommand	_042	_043	4	10753	set
3-10	ON/OFF (status)	12593666	StartStopStatus	_042	_043	3	10754	Fb
3-10	Alarm Sign	12593667	Alarm	_042	_043	3	10755	
3-10	Error Code	54536708	MalfunctionCode	_042	_043	13	10756	
3-10	Operation Mode (setting)	58731013	AirConModeCommand	_042	_043	14	10757	set
3-10	Operation Mode (status)	54536710	AirConModeStatus	_042	_043	13	10758	Fb
3-10	Airflow Rate (setting)	58731015	AirFlowRateCommand	_042	_043	14	10759	set
3-10	Airflow Rate (status)	54536712	AirFlowRateStatus	_042	_043	13	10760	Fb
3-10	Measured Room Temperature	10761	RoomTemp	_042	_043	0	10761	
3-10	Set Room Temperature	8399370	TempAdjust	_042	_043	2	10762	set
3-10	Filer Limit Sign	12593675	FilterSign	_042	_043	3	10763	
3-10	Filter Limit Sign Reset	20982284	FilterSignReset	_042	_043	5	10764	
3-10	Remote Control Operation (ON/OFF)	20982285	RemoteControlStart	_042	_043	5	10765	
3-10	Remote Control Operation (Operation Mode)	20982286	RemoteControlAirConModeSet	_042	_043	5	10766	
3-10	Remote Control Operation (Set Temperature)	20982288	RemoteControlTempAdjust	_042	_043	5	10768	
3-10	Remote Control Operation (Sub Group Address Control Reject)	20982289	CL_Rejection	_042	_043	5	10769	
3-10	Elec Total Power	96479763	ElecTotalPower	_042	_043	23	10771	
3-10	Communication Status	12593684	CommunicationStatus	_042	_043	3	10772	
3-10	System Forced OFF	20982293	SystemForcedOff	_042	_043	5	10773	
3-10	Air Direction (setting)	8399382	AirDirectionCommand	_042	_043	2	10774	
3-10	Air Direction (status)	10775	AirDirectionStatus	_042	_043	0	10775	
3-10	Forced Thermostat OFF (setting)	16787992	ForcedThermoOFFCommand	_042	_043	4	10776	
3-10	Forced Thermostat OFF (status)	12593689	ForcedThermoOFFStatus	_042	_043	3	10777	
3-10	Energy Efficiency Command (setting)	16787994	EnergyEfficiencyCommand	_042	_043	4	10778	
3-10	Energy Efficiency Command (status)	12593691	EnergyEfficiencyStatus	_042	_043	3	10779	
3-10	Thermostat Status	12593692	ThermoStatus	_042	_043	3	10780	
3-10	Compressor Status	12593693	CompressorStatus	_042	_043	3	10781	
3-10	Indoor Fan Status	12593694	IndoorFanStatus	_042	_043	3	10782	
3-10	Heater Operation Status	12593695	HeaterStatus	_042	_043	3	10783	
3-10	Ventilation Mode (setting)	58731040	VentilationModeCommand	_042	_043	14	10784	
3-10	Ventilation Mode (status)	54536737	VentilationModeStatus	_042	_043	13	10785	
3-10	Ventilation Amount (setting)	58731042	VentilationAmountCommand	_042	_043	14	10786	
3-10	Ventilation Amount (status)	54536739	VentilationAmountStatus	_042	_043	13	10787	
3-11	ON/OFF (setting)	16788225	StartStopCommand	_043	_044	4	11009	set
3-11	ON/OFF (status)	12593922	StartStopStatus	_043	_044	3	11010	Fb

3-11	Alarm Sign	12593923	Alarm	_043	_044	3	11011	
3-11	Error Code	54536964	MalfunctionCode	_043	_044	13	11012	
3-11	Operation Mode (setting)	58731269	AirConModeCommand	_043	_044	14	11013	set
3-11	Operation Mode (status)	54536966	AirConModeStatus	_043	_044	13	11014	Fb
3-11	Airflow Rate (setting)	58731271	AirFlowRateCommand	_043	_044	14	11015	set
3-11	Airflow Rate (status)	54536968	AirFlowRateStatus	_043	_044	13	11016	Fb
3-11	Measured Room Temperature	11017	RoomTemp	_043	_044	0	11017	
3-11	Set Room Temperature	8399626	TempAdjust	_043	_044	2	11018	set
3-11	Filer Limit Sign	12593931	FilterSign	_043	_044	3	11019	
3-11	Filter Limit Sign Reset	20982540	FilterSignReset	_043	_044	5	11020	
3-11	Remote Control Operation (ON/OFF)	20982541	RemoteControlStart	_043	_044	5	11021	
3-11	Remote Control Operation (Operation Mode)	20982542	RemoteControlAirConModeSet	_043	_044	5	11022	
3-11	Remote Control Operation (Set Temperature)	20982544	RemoteControlTempAdjust	_043	_044	5	11024	
3-11	Remote Control Operation (Sub Group Address Control Reject)	20982545	CL_Rejection	_043	_044	5	11025	
3-11	Elec Total Power	96480019	ElecTotalPower	_043	_044	23	11027	
3-11	Communication Status	12593940	CommunicationStatus	_043	_044	3	11028	
3-11	System Forced OFF	20982549	SystemForcedOff	_043	_044	5	11029	
3-11	Air Direction (setting)	8399638	AirDirectionCommand	_043	_044	2	11030	
3-11	Air Direction (status)	11031	AirDirectionStatus	_043	_044	0	11031	
3-11	Forced Thermostat OFF (setting)	16788248	ForcedThermoOFFCommand	_043	_044	4	11032	
3-11	Forced Thermostat OFF (status)	12593945	ForcedThermoOFFStatus	_043	_044	3	11033	
3-11	Energy Efficiency Command (setting)	16788250	EnergyEfficiencyCommand	_043	_044	4	11034	
3-11	Energy Efficiency Command (status)	12593947	EnergyEfficiencyStatus	_043	_044	3	11035	
3-11	Thermostat Status	12593948	ThermoStatus	_043	_044	3	11036	
3-11	Compressor Status	12593949	CompressorStatus	_043	_044	3	11037	
3-11	Indoor Fan Status	12593950	IndoorFanStatus	_043	_044	3	11038	
3-11	Heater Operation Status	12593951	HeaterStatus	_043	_044	3	11039	
3-11	Ventilation Mode (setting)	58731296	VentilationModeCommand	_043	_044	14	11040	
3-11	Ventilation Mode (status)	54536993	VentilationModeStatus	_043	_044	13	11041	
3-11	Ventilation Amount (setting)	58731298	VentilationAmountCommand	_043	_044	14	11042	
3-11	Ventilation Amount (status)	54536995	VentilationAmountStatus	_043	_044	13	11043	
3-12	ON/OFF (setting)	16788481	StartStopCommand	_044	_045	4	11265	set
3-12	ON/OFF (status)	12594178	StartStopStatus	_044	_045	3	11266	Fb
3-12	Alarm Sign	12594179	Alarm	_044	_045	3	11267	
3-12	Error Code	54537220	MalfunctionCode	_044	_045	13	11268	
3-12	Operation Mode (setting)	58731525	AirConModeCommand	_044	_045	14	11269	set
3-12	Operation Mode (status)	54537222	AirConModeStatus	_044	_045	13	11270	Fb
3-12	Airflow Rate (setting)	58731527	AirFlowRateCommand	_044	_045	14	11271	set
3-12	Airflow Rate (status)	54537224	AirFlowRateStatus	_044	_045	13	11272	Fb
3-12	Measured Room Temperature	11273	RoomTemp	_044	_045	0	11273	
3-12	Set Room Temperature	8399882	TempAdjust	_044	_045	2	11274	set
3-12	Filer Limit Sign	12594187	FilterSign	_044	_045	3	11275	
3-12	Filter Limit Sign Reset	20982796	FilterSignReset	_044	_045	5	11276	
3-12	Remote Control Operation (ON/OFF)	20982797	RemoteControlStart	_044	_045	5	11277	
3-12	Remote Control Operation (Operation Mode)	20982798	RemoteControlAirConModeSet	_044	_045	5	11278	
3-12	Remote Control Operation (Set Temperature)	20982800	RemoteControlTempAdjust	_044	_045	5	11280	
3-12	Remote Control Operation (Sub Group Address Control Reject)	20982801	CL_Rejection	_044	_045	5	11281	
3-12	Elec Total Power	96480275	ElecTotalPower	_044	_045	23	11283	
3-12	Communication Status	12594196	CommunicationStatus	_044	_045	3	11284	
3-12	System Forced OFF	20982805	SystemForcedOff	_044	_045	5	11285	
3-12	Air Direction (setting)	8399894	AirDirectionCommand	_044	_045	2	11286	
3-12	Air Direction (status)	11287	AirDirectionStatus	_044	_045	0	11287	
3-12	Forced Thermostat OFF (setting)	16788504	ForcedThermoOFFCommand	_044	_045	4	11288	
3-12	Forced Thermostat OFF (status)	12594201	ForcedThermoOFFStatus	_044	_045	3	11289	
3-12	Energy Efficiency Command (setting)	16788506	EnergyEfficiencyCommand	_044	_045	4	11290	
3-12	Energy Efficiency Command (status)	12594203	EnergyEfficiencyStatus	_044	_045	3	11291	
3-12	Thermostat Status	12594204	ThermoStatus	_044	_045	3	11292	
3-12	Compressor Status	12594205	CompressorStatus	_044	_045	3	11293	
3-12	Indoor Fan Status	12594206	IndoorFanStatus	_044	_045	3	11294	
3-12	Heater Operation Status	12594207	HeaterStatus	_044	_045	3	11295	
3-12	Ventilation Mode (setting)	58731552	VentilationModeCommand	_044	_045	14	11296	
3-12	Ventilation Mode (status)	54537249	VentilationModeStatus	_044	_045	13	11297	
3-12	Ventilation Amount (setting)	58731554	VentilationAmountCommand	_044	_045	14	11298	
3-12	Ventilation Amount (status)	54537251	VentilationAmountStatus	_044	_045	13	11299	
3-13	ON/OFF (setting)	16788737	StartStopCommand	_045	_046	4	11521	set
3-13	ON/OFF (status)	12594434	StartStopStatus	_045	_046	3	11522	Fb
3-13	Alarm Sign	12594435	Alarm	_045	_046	3	11523	
3-13	Error Code	54537476	MalfunctionCode	_045	_046	13	11524	
3-13	Operation Mode (setting)	58731781	AirConModeCommand	_045	_046	14	11525	set

3-13	Operation Mode (status)	54537478	AirConModeStatus	_045	_046	13	11526	Fb
3-13	Airflow Rate (setting)	58731783	AirFlowRateCommand	_045	_046	14	11527	set
3-13	Airflow Rate (status)	54537480	AirFlowRateStatus	_045	_046	13	11528	Fb
3-13	Measured Room Temperature	11529	RoomTemp	_045	_046	0	11529	
3-13	Set Room Temperature	8400138	TempAdjust	_045	_046	2	11530	set
3-13	Filer Limit Sign	12594443	FilterSign	_045	_046	3	11531	
3-13	Filter Limit Sign Reset	20983052	FilterSignReset	_045	_046	5	11532	
3-13	Remote Control Operation (ON/OFF)	20983053	RemoteControlStart	_045	_046	5	11533	
3-13	Remote Control Operation (Operation Mode)	20983054	RemoteControlAirConModeSet	_045	_046	5	11534	
3-13	Remote Control Operation (Set Temperature)	20983056	RemoteControlTempAdjust	_045	_046	5	11536	
3-13	Remote Control Operation (Sub Group Address Control Reject)	20983057	CL_Rejection	_045	_046	5	11537	
3-13	Elec Total Power	96480531	ElecTotalPower	_045	_046	23	11539	
3-13	Communication Status	12594452	CommunicationStatus	_045	_046	3	11540	
3-13	System Forced OFF	20983061	SystemForcedOff	_045	_046	5	11541	
3-13	Air Direction (setting)	8400150	AirDirectionCommand	_045	_046	2	11542	
3-13	Air Direction (status)	11543	AirDirectionStatus	_045	_046	0	11543	
3-13	Forced Thermostat OFF (setting)	16788760	ForcedThermoOFFCommand	_045	_046	4	11544	
3-13	Forced Thermostat OFF (status)	12594457	ForcedThermoOFFStatus	_045	_046	3	11545	
3-13	Energy Efficiency Command (setting)	16788762	EnergyEfficiencyCommand	_045	_046	4	11546	
3-13	Energy Efficiency Command (status)	12594459	EnergyEfficiencyStatus	_045	_046	3	11547	
3-13	Thermostat Status	12594460	ThermoStatus	_045	_046	3	11548	
3-13	Compressor Status	12594461	CompressorStatus	_045	_046	3	11549	
3-13	Indoor Fan Status	12594462	IndoorFanStatus	_045	_046	3	11550	
3-13	Heater Operation Status	12594463	HeaterStatus	_045	_046	3	11551	
3-13	Ventilation Mode (setting)	58731808	VentilationModeCommand	_045	_046	14	11552	
3-13	Ventilation Mode (status)	54537505	VentilationModeStatus	_045	_046	13	11553	
3-13	Ventilation Amount (setting)	58731810	VentilationAmountCommand	_045	_046	14	11554	
3-13	Ventilation Amount (status)	54537507	VentilationAmountStatus	_045	_046	13	11555	
3-14	ON/OFF (setting)	16788993	StartStopCommand	_046	_047	4	11777	set
3-14	ON/OFF (status)	12594690	StartStopStatus	_046	_047	3	11778	Fb
3-14	Alarm Sign	12594691	Alarm	_046	_047	3	11779	
3-14	Error Code	54537732	MalfunctionCode	_046	_047	13	11780	
3-14	Operation Mode (setting)	58732037	AirConModeCommand	_046	_047	14	11781	set
3-14	Operation Mode (status)	54537734	AirConModeStatus	_046	_047	13	11782	Fb
3-14	Airflow Rate (setting)	58732039	AirFlowRateCommand	_046	_047	14	11783	set
3-14	Airflow Rate (status)	54537736	AirFlowRateStatus	_046	_047	13	11784	Fb
3-14	Measured Room Temperature	11785	RoomTemp	_046	_047	0	11785	
3-14	Set Room Temperature	8400394	TempAdjust	_046	_047	2	11786	set
3-14	Filer Limit Sign	12594699	FilterSign	_046	_047	3	11787	
3-14	Filter Limit Sign Reset	20983308	FilterSignReset	_046	_047	5	11788	
3-14	Remote Control Operation (ON/OFF)	20983309	RemoteControlStart	_046	_047	5	11789	
3-14	Remote Control Operation (Operation Mode)	20983310	RemoteControlAirConModeSet	_046	_047	5	11790	
3-14	Remote Control Operation (Set Temperature)	20983312	RemoteControlTempAdjust	_046	_047	5	11792	
3-14	Remote Control Operation (Sub Group Address Control Reject)	20983313	CL_Rejection	_046	_047	5	11793	
3-14	Elec Total Power	96480787	ElecTotalPower	_046	_047	23	11795	
3-14	Communication Status	12594708	CommunicationStatus	_046	_047	3	11796	
3-14	System Forced OFF	20983317	SystemForcedOff	_046	_047	5	11797	
3-14	Air Direction (setting)	8400406	AirDirectionCommand	_046	_047	2	11798	
3-14	Air Direction (status)	11799	AirDirectionStatus	_046	_047	0	11799	
3-14	Forced Thermostat OFF (setting)	16789016	ForcedThermoOFFCommand	_046	_047	4	11800	
3-14	Forced Thermostat OFF (status)	12594713	ForcedThermoOFFStatus	_046	_047	3	11801	
3-14	Energy Efficiency Command (setting)	16789018	EnergyEfficiencyCommand	_046	_047	4	11802	
3-14	Energy Efficiency Command (status)	12594715	EnergyEfficiencyStatus	_046	_047	3	11803	
3-14	Thermostat Status	12594716	ThermoStatus	_046	_047	3	11804	
3-14	Compressor Status	12594717	CompressorStatus	_046	_047	3	11805	
3-14	Indoor Fan Status	12594718	IndoorFanStatus	_046	_047	3	11806	
3-14	Heater Operation Status	12594719	HeaterStatus	_046	_047	3	11807	
3-14	Ventilation Mode (setting)	58732064	VentilationModeCommand	_046	_047	14	11808	
3-14	Ventilation Mode (status)	54537761	VentilationModeStatus	_046	_047	13	11809	
3-14	Ventilation Amount (setting)	58732066	VentilationAmountCommand	_046	_047	14	11810	
3-14	Ventilation Amount (status)	54537763	VentilationAmountStatus	_046	_047	13	11811	
3-15	ON/OFF (setting)	16789249	StartStopCommand	_047	_048	4	12033	set
3-15	ON/OFF (status)	12594946	StartStopStatus	_047	_048	3	12034	Fb
3-15	Alarm Sign	12594947	Alarm	_047	_048	3	12035	
3-15	Error Code	54537988	MalfunctionCode	_047	_048	13	12036	
3-15	Operation Mode (setting)	58732293	AirConModeCommand	_047	_048	14	12037	set
3-15	Operation Mode (status)	54537990	AirConModeStatus	_047	_048	13	12038	Fb
3-15	Airflow Rate (setting)	58732295	AirFlowRateCommand	_047	_048	14	12039	set
3-15	Airflow Rate (status)	54537992	AirFlowRateStatus	_047	_048	13	12040	Fb

3-15	Measured Room Temperature	12041	RoomTemp	_047	_048	0	12041	
3-15	Set Room Temperature	8400650	TempAdjust	_047	_048	2	12042	set
3-15	Filer Limit Sign	12594955	FilterSign	_047	_048	3	12043	
3-15	Filter Limit Sign Reset	20983564	FilterSignReset	_047	_048	5	12044	
3-15	Remote Control Operation (ON/OFF)	20983565	RemoteControlStart	_047	_048	5	12045	
3-15	Remote Control Operation (Operation Mode)	20983566	RemoteControlAirConModeSet	_047	_048	5	12046	
3-15	Remote Control Operation (Set Temperature)	20983568	RemoteControlTempAdjust	_047	_048	5	12048	
3-15	Remote Control Operation (Sub Group Address Control Rejecti	20983569	CL_Rejection	_047	_048	5	12049	
3-15	Elec Total Power	96481043	ElecTotalPower	_047	_048	23	12051	
3-15	Communication Status	12594964	CommunicationStatus	_047	_048	3	12052	
3-15	System Forced OFF	20983573	SystemForcedOff	_047	_048	5	12053	
3-15	Air Direction (setting)	8400662	AirDirectionCommand	_047	_048	2	12054	
3-15	Air Direction (status)	12055	AirDirectionStatus	_047	_048	0	12055	
3-15	Forced Thermostat OFF (setting)	16789272	ForcedThermoOFFCommand	_047	_048	4	12056	
3-15	Forced Thermostat OFF (status)	12594969	ForcedThermoOFFStatus	_047	_048	3	12057	
3-15	Energy Efficiency Command (setting)	16789274	EnergyEfficiencyCommand	_047	_048	4	12058	
3-15	Energy Efficiency Command (status)	12594971	EnergyEfficiencyStatus	_047	_048	3	12059	
3-15	Thermostat Status	12594972	ThermoStatus	_047	_048	3	12060	
3-15	Compressor Status	12594973	CompressorStatus	_047	_048	3	12061	
3-15	Indoor Fan Status	12594974	IndoorFanStatus	_047	_048	3	12062	
3-15	Heater Operation Status	12594975	HeaterStatus	_047	_048	3	12063	
3-15	Ventilation Mode (setting)	58732320	VentilationModeCommand	_047	_048	14	12064	
3-15	Ventilation Mode (status)	54538017	VentilationModeStatus	_047	_048	13	12065	
3-15	Ventilation Amount (setting)	58732322	VentilationAmountCommand	_047	_048	14	12066	
3-15	Ventilation Amount (status)	54538019	VentilationAmountStatus	_047	_048	13	12067	
4-00	ON/OFF (setting)	16789505	StartStopCommand	_048	_049	4	12289	set
4-00	ON/OFF (status)	12595202	StartStopStatus	_048	_049	3	12290	Fb
4-00	Alarm Sign	12595203	Alarm	_048	_049	3	12291	
4-00	Error Code	54538244	MalfunctionCode	_048	_049	13	12292	
4-00	Operation Mode (setting)	58732549	AirConModeCommand	_048	_049	14	12293	set
4-00	Operation Mode (status)	54538246	AirConModeStatus	_048	_049	13	12294	Fb
4-00	Airflow Rate (setting)	58732551	AirFlowRateCommand	_048	_049	14	12295	set
4-00	Airflow Rate (status)	54538248	AirFlowRateStatus	_048	_049	13	12296	Fb
4-00	Measured Room Temperature	12297	RoomTemp	_048	_049	0	12297	
4-00	Set Room Temperature	8400906	TempAdjust	_048	_049	2	12298	set
4-00	Filer Limit Sign	12595211	FilterSign	_048	_049	3	12299	
4-00	Filter Limit Sign Reset	20983820	FilterSignReset	_048	_049	5	12300	
4-00	Remote Control Operation (ON/OFF)	20983821	RemoteControlStart	_048	_049	5	12301	
4-00	Remote Control Operation (Operation Mode)	20983822	RemoteControlAirConModeSet	_048	_049	5	12302	
4-00	Remote Control Operation (Set Temperature)	20983824	RemoteControlTempAdjust	_048	_049	5	12304	
4-00	Remote Control Operation (Sub Group Address Control Rejecti	20983825	CL_Rejection	_048	_049	5	12305	
4-00	Elec Total Power	96481299	ElecTotalPower	_048	_049	23	12307	
4-00	Communication Status	12595220	CommunicationStatus	_048	_049	3	12308	
4-00	System Forced OFF	20983829	SystemForcedOff	_048	_049	5	12309	
4-00	Air Direction (setting)	8400918	AirDirectionCommand	_048	_049	2	12310	
4-00	Air Direction (status)	12311	AirDirectionStatus	_048	_049	0	12311	
4-00	Forced Thermostat OFF (setting)	16789528	ForcedThermoOFFCommand	_048	_049	4	12312	
4-00	Forced Thermostat OFF (status)	12595225	ForcedThermoOFFStatus	_048	_049	3	12313	
4-00	Energy Efficiency Command (setting)	16789530	EnergyEfficiencyCommand	_048	_049	4	12314	
4-00	Energy Efficiency Command (status)	12595227	EnergyEfficiencyStatus	_048	_049	3	12315	
4-00	Thermostat Status	12595228	ThermoStatus	_048	_049	3	12316	
4-00	Compressor Status	12595229	CompressorStatus	_048	_049	3	12317	
4-00	Indoor Fan Status	12595230	IndoorFanStatus	_048	_049	3	12318	
4-00	Heater Operation Status	12595231	HeaterStatus	_048	_049	3	12319	
4-00	Ventilation Mode (setting)	58732576	VentilationModeCommand	_048	_049	14	12320	
4-00	Ventilation Mode (status)	54538273	VentilationModeStatus	_048	_049	13	12321	
4-00	Ventilation Amount (setting)	58732578	VentilationAmountCommand	_048	_049	14	12322	
4-00	Ventilation Amount (status)	54538275	VentilationAmountStatus	_048	_049	13	12323	
4-01	ON/OFF (setting)	16789761	StartStopCommand	_049	_050	4	12545	set
4-01	ON/OFF (status)	12595458	StartStopStatus	_049	_050	3	12546	Fb
4-01	Alarm Sign	12595459	Alarm	_049	_050	3	12547	
4-01	Error Code	54538500	MalfunctionCode	_049	_050	13	12548	
4-01	Operation Mode (setting)	58732805	AirConModeCommand	_049	_050	14	12549	set
4-01	Operation Mode (status)	54538502	AirConModeStatus	_049	_050	13	12550	Fb
4-01	Airflow Rate (setting)	58732807	AirFlowRateCommand	_049	_050	14	12551	set
4-01	Airflow Rate (status)	54538504	AirFlowRateStatus	_049	_050	13	12552	Fb
4-01	Measured Room Temperature	12553	RoomTemp	_049	_050	0	12553	
4-01	Set Room Temperature	8401162	TempAdjust	_049	_050	2	12554	set
4-01	Filer Limit Sign	12595467	FilterSign	_049	_050	3	12555	



4-01	Filter Limit Sign Reset	20984076	FilterSignReset	_049	_050	5	12556	
4-01	Remote Control Operation (ON/OFF)	20984077	RemoteControlStart	_049	_050	5	12557	
4-01	Remote Control Operation (Operation Mode)	20984078	RemoteControlAirConModeSet	_049	_050	5	12558	
4-01	Remote Control Operation (Set Temperature)	20984080	RemoteControlTempAdjust	_049	_050	5	12560	
4-01	Remote Control Operation (Sub Group Address Control Rejecti	20984081	CL_Rejection	_049	_050	5	12561	
4-01	Elec Total Power	96481555	ElecTotalPower	_049	_050	23	12563	
4-01	Communication Status	12595476	CommunicationStatus	_049	_050	3	12564	
4-01	System Forced OFF	20984085	SystemForcedOff	_049	_050	5	12565	
4-01	Air Direction (setting)	8401174	AirDirectionCommand	_049	_050	2	12566	
4-01	Air Direction (status)	12567	AirDirectionStatus	_049	_050	0	12567	
4-01	Forced Thermostat OFF (setting)	16789784	ForcedThermoOFFCommand	_049	_050	4	12568	
4-01	Forced Thermostat OFF (status)	12595481	ForcedThermoOFFStatus	_049	_050	3	12569	
4-01	Energy Efficiency Command (setting)	16789786	EnergyEfficiencyCommand	_049	_050	4	12570	
4-01	Energy Efficiency Command (status)	12595483	EnergyEfficiencyStatus	_049	_050	3	12571	
4-01	Thermostat Status	12595484	ThermoStatus	_049	_050	3	12572	
4-01	Compressor Status	12595485	CompressorStatus	_049	_050	3	12573	
4-01	Indoor Fan Status	12595486	IndoorFanStatus	_049	_050	3	12574	
4-01	Heater Operation Status	12595487	HeaterStatus	_049	_050	3	12575	
4-01	Ventilation Mode (setting)	58732832	VentilationModeCommand	_049	_050	14	12576	
4-01	Ventilation Mode (status)	54538529	VentilationModeStatus	_049	_050	13	12577	
4-01	Ventilation Amount (setting)	58732834	VentilationAmountCommand	_049	_050	14	12578	
4-01	Ventilation Amount (status)	54538531	VentilationAmountStatus	_049	_050	13	12579	
4-02	ON/OFF (setting)	16790017	StartStopCommand	_050	_051	4	12801	set
4-02	ON/OFF (status)	12595714	StartStopStatus	_050	_051	3	12802	Fb
4-02	Alarm Sign	12595715	Alarm	_050	_051	3	12803	
4-02	Error Code	54538756	MalfunctionCode	_050	_051	13	12804	
4-02	Operation Mode (setting)	58733061	AirConModeCommand	_050	_051	14	12805	set
4-02	Operation Mode (status)	54538758	AirConModeStatus	_050	_051	13	12806	Fb
4-02	Airflow Rate (setting)	58733063	AirFlowRateCommand	_050	_051	14	12807	set
4-02	Airflow Rate (status)	54538760	AirFlowRateStatus	_050	_051	13	12808	Fb
4-02	Measured Room Temperature	12809	RoomTemp	_050	_051	0	12809	
4-02	Set Room Temperature	8401418	TempAdjust	_050	_051	2	12810	set
4-02	Filer Limit Sign	12595723	FilterSign	_050	_051	3	12811	
4-02	Filter Limit Sign Reset	20984332	FilterSignReset	_050	_051	5	12812	
4-02	Remote Control Operation (ON/OFF)	20984333	RemoteControlStart	_050	_051	5	12813	
4-02	Remote Control Operation (Operation Mode)	20984334	RemoteControlAirConModeSet	_050	_051	5	12814	
4-02	Remote Control Operation (Set Temperature)	20984336	RemoteControlTempAdjust	_050	_051	5	12816	
4-02	Remote Control Operation (Sub Group Address Control Rejecti	20984337	CL_Rejection	_050	_051	5	12817	
4-02	Elec Total Power	96481811	ElecTotalPower	_050	_051	23	12819	
4-02	Communication Status	12595732	CommunicationStatus	_050	_051	3	12820	
4-02	System Forced OFF	20984341	SystemForcedOff	_050	_051	5	12821	
4-02	Air Direction (setting)	8401430	AirDirectionCommand	_050	_051	2	12822	
4-02	Air Direction (status)	12823	AirDirectionStatus	_050	_051	0	12823	
4-02	Forced Thermostat OFF (setting)	16790040	ForcedThermoOFFCommand	_050	_051	4	12824	
4-02	Forced Thermostat OFF (status)	12595737	ForcedThermoOFFStatus	_050	_051	3	12825	
4-02	Energy Efficiency Command (setting)	16790042	EnergyEfficiencyCommand	_050	_051	4	12826	
4-02	Energy Efficiency Command (status)	12595739	EnergyEfficiencyStatus	_050	_051	3	12827	
4-02	Thermostat Status	12595740	ThermoStatus	_050	_051	3	12828	
4-02	Compressor Status	12595741	CompressorStatus	_050	_051	3	12829	
4-02	Indoor Fan Status	12595742	IndoorFanStatus	_050	_051	3	12830	
4-02	Heater Operation Status	12595743	HeaterStatus	_050	_051	3	12831	
4-02	Ventilation Mode (setting)	58733088	VentilationModeCommand	_050	_051	14	12832	
4-02	Ventilation Mode (status)	54538785	VentilationModeStatus	_050	_051	13	12833	
4-02	Ventilation Amount (setting)	58733090	VentilationAmountCommand	_050	_051	14	12834	
4-02	Ventilation Amount (status)	54538787	VentilationAmountStatus	_050	_051	13	12835	
4-03	ON/OFF (setting)	16790273	StartStopCommand	_051	_052	4	13057	set
4-03	ON/OFF (status)	12595970	StartStopStatus	_051	_052	3	13058	Fb
4-03	Alarm Sign	12595971	Alarm	_051	_052	3	13059	
4-03	Error Code	54539012	MalfunctionCode	_051	_052	13	13060	
4-03	Operation Mode (setting)	58733317	AirConModeCommand	_051	_052	14	13061	set
4-03	Operation Mode (status)	54539014	AirConModeStatus	_051	_052	13	13062	Fb
4-03	Airflow Rate (setting)	58733319	AirFlowRateCommand	_051	_052	14	13063	set
4-03	Airflow Rate (status)	54539016	AirFlowRateStatus	_051	_052	13	13064	Fb
4-03	Measured Room Temperature	13065	RoomTemp	_051	_052	0	13065	
4-03	Set Room Temperature	8401674	TempAdjust	_051	_052	2	13066	set
4-03	Filer Limit Sign	12595979	FilterSign	_051	_052	3	13067	
4-03	Filter Limit Sign Reset	20984588	FilterSignReset	_051	_052	5	13068	
4-03	Remote Control Operation (ON/OFF)	20984589	RemoteControlStart	_051	_052	5	13069	
4-03	Remote Control Operation (Operation Mode)	20984590	RemoteControlAirConModeSet	_051	_052	5	13070	

4-03	Remote Control Operation (Set Temperature)	20984592	RemoteControlTempAdjust	_051	_052	5	13072	
4-03	Remote Control Operation (Sub Group Address Control Rejecti	20984593	CL_Rejection	_051	_052	5	13073	
4-03	Elec Total Power	96482067	ElecTotalPower	_051	_052	23	13075	
4-03	Communication Status	12595988	CommunicationStatus	_051	_052	3	13076	
4-03	System Forced OFF	20984597	SystemForcedOff	_051	_052	5	13077	
4-03	Air Direction (setting)	8401686	AirDirectionCommand	_051	_052	2	13078	
4-03	Air Direction (status)	13079	AirDirectionStatus	_051	_052	0	13079	
4-03	Forced Thermostat OFF (setting)	16790296	ForcedThermoOFFCommand	_051	_052	4	13080	
4-03	Forced Thermostat OFF (status)	12595993	ForcedThermoOFFStatus	_051	_052	3	13081	
4-03	Energy Efficiency Command (setting)	16790298	EnergyEfficiencyCommand	_051	_052	4	13082	
4-03	Energy Efficiency Command (status)	12595995	EnergyEfficiencyStatus	_051	_052	3	13083	
4-03	Thermostat Status	12595996	ThermoStatus	_051	_052	3	13084	
4-03	Compressor Status	12595997	CompressorStatus	_051	_052	3	13085	
4-03	Indoor Fan Status	12595998	IndoorFanStatus	_051	_052	3	13086	
4-03	Heater Operation Status	12595999	HeaterStatus	_051	_052	3	13087	
4-03	Ventilation Mode (setting)	58733344	VentilationModeCommand	_051	_052	14	13088	
4-03	Ventilation Mode (status)	54539041	VentilationModeStatus	_051	_052	13	13089	
4-03	Ventilation Amount (setting)	58733346	VentilationAmountCommand	_051	_052	14	13090	
4-03	Ventilation Amount (status)	54539043	VentilationAmountStatus	_051	_052	13	13091	
4-04	ON/OFF (setting)	16790529	StartStopCommand	_052	_053	4	13313	set
4-04	ON/OFF (status)	12596226	StartStopStatus	_052	_053	3	13314	Fb
4-04	Alarm Sign	12596227	Alarm	_052	_053	3	13315	
4-04	Error Code	54539268	MalfunctionCode	_052	_053	13	13316	
4-04	Operation Mode (setting)	58733573	AirConModeCommand	_052	_053	14	13317	set
4-04	Operation Mode (status)	54539270	AirConModeStatus	_052	_053	13	13318	Fb
4-04	Airflow Rate (setting)	58733575	AirFlowRateCommand	_052	_053	14	13319	set
4-04	Airflow Rate (status)	54539272	AirFlowRateStatus	_052	_053	13	13320	Fb
4-04	Measured Room Temperature	13321	RoomTemp	_052	_053	0	13321	
4-04	Set Room Temperature	8401930	TempAdjust	_052	_053	2	13322	set
4-04	Filer Limit Sign	12596235	FilterSign	_052	_053	3	13323	
4-04	Filter Limit Sign Reset	20984844	FilterSignReset	_052	_053	5	13324	
4-04	Remote Control Operation (ON/OFF)	20984845	RemoteControlStart	_052	_053	5	13325	
4-04	Remote Control Operation (Operation Mode)	20984846	RemoteControlAirConModeSet	_052	_053	5	13326	
4-04	Remote Control Operation (Set Temperature)	20984848	RemoteControlTempAdjust	_052	_053	5	13328	
4-04	Remote Control Operation (Sub Group Address Control Rejecti	20984849	CL_Rejection	_052	_053	5	13329	
4-04	Elec Total Power	96482323	ElecTotalPower	_052	_053	23	13331	
4-04	Communication Status	12596244	CommunicationStatus	_052	_053	3	13332	
4-04	System Forced OFF	20984853	SystemForcedOff	_052	_053	5	13333	
4-04	Air Direction (setting)	8401942	AirDirectionCommand	_052	_053	2	13334	
4-04	Air Direction (status)	13335	AirDirectionStatus	_052	_053	0	13335	
4-04	Forced Thermostat OFF (setting)	16790552	ForcedThermoOFFCommand	_052	_053	4	13336	
4-04	Forced Thermostat OFF (status)	12596249	ForcedThermoOFFStatus	_052	_053	3	13337	
4-04	Energy Efficiency Command (setting)	16790554	EnergyEfficiencyCommand	_052	_053	4	13338	
4-04	Energy Efficiency Command (status)	12596251	EnergyEfficiencyStatus	_052	_053	3	13339	
4-04	Thermostat Status	12596252	ThermoStatus	_052	_053	3	13340	
4-04	Compressor Status	12596253	CompressorStatus	_052	_053	3	13341	
4-04	Indoor Fan Status	12596254	IndoorFanStatus	_052	_053	3	13342	
4-04	Heater Operation Status	12596255	HeaterStatus	_052	_053	3	13343	
4-04	Ventilation Mode (setting)	58733600	VentilationModeCommand	_052	_053	14	13344	
4-04	Ventilation Mode (status)	54539297	VentilationModeStatus	_052	_053	13	13345	
4-04	Ventilation Amount (setting)	58733602	VentilationAmountCommand	_052	_053	14	13346	
4-04	Ventilation Amount (status)	54539299	VentilationAmountStatus	_052	_053	13	13347	
4-05	ON/OFF (setting)	16790785	StartStopCommand	_053	_054	4	13569	set
4-05	ON/OFF (status)	12596482	StartStopStatus	_053	_054	3	13570	Fb
4-05	Alarm Sign	12596483	Alarm	_053	_054	3	13571	
4-05	Error Code	54539524	MalfunctionCode	_053	_054	13	13572	
4-05	Operation Mode (setting)	58733829	AirConModeCommand	_053	_054	14	13573	set
4-05	Operation Mode (status)	54539526	AirConModeStatus	_053	_054	13	13574	Fb
4-05	Airflow Rate (setting)	58733831	AirFlowRateCommand	_053	_054	14	13575	set
4-05	Airflow Rate (status)	54539528	AirFlowRateStatus	_053	_054	13	13576	Fb
4-05	Measured Room Temperature	13577	RoomTemp	_053	_054	0	13577	
4-05	Set Room Temperature	8402186	TempAdjust	_053	_054	2	13578	set
4-05	Filer Limit Sign	12596491	FilterSign	_053	_054	3	13579	
4-05	Filter Limit Sign Reset	20985100	FilterSignReset	_053	_054	5	13580	
4-05	Remote Control Operation (ON/OFF)	20985101	RemoteControlStart	_053	_054	5	13581	
4-05	Remote Control Operation (Operation Mode)	20985102	RemoteControlAirConModeSet	_053	_054	5	13582	
4-05	Remote Control Operation (Set Temperature)	20985104	RemoteControlTempAdjust	_053	_054	5	13584	
4-05	Remote Control Operation (Sub Group Address Control Rejecti	20985105	CL_Rejection	_053	_054	5	13585	
4-05	Elec Total Power	96482579	ElecTotalPower	_053	_054	23	13587	

4-05	Communication Status	12596500	CommunicationStatus	_053	_054	3	13588	
4-05	System Forced OFF	20985109	SystemForcedOff	_053	_054	5	13589	
4-05	Air Direction (setting)	8402198	AirDirectionCommand	_053	_054	2	13590	
4-05	Air Direction (status)	13591	AirDirectionStatus	_053	_054	0	13591	
4-05	Forced Thermostat OFF (setting)	16790808	ForcedThermoOFFCommand	_053	_054	4	13592	
4-05	Forced Thermostat OFF (status)	12596505	ForcedThermoOFFStatus	_053	_054	3	13593	
4-05	Energy Efficiency Command (setting)	16790810	EnergyEfficiencyCommand	_053	_054	4	13594	
4-05	Energy Efficiency Command (status)	12596507	EnergyEfficiencyStatus	_053	_054	3	13595	
4-05	Thermostat Status	12596508	ThermoStatus	_053	_054	3	13596	
4-05	Compressor Status	12596509	CompressorStatus	_053	_054	3	13597	
4-05	Indoor Fan Status	12596510	IndoorFanStatus	_053	_054	3	13598	
4-05	Heater Operation Status	12596511	HeaterStatus	_053	_054	3	13599	
4-05	Ventilation Mode (setting)	58733856	VentilationModeCommand	_053	_054	14	13600	
4-05	Ventilation Mode (status)	54539553	VentilationModeStatus	_053	_054	13	13601	
4-05	Ventilation Amount (setting)	58733858	VentilationAmountCommand	_053	_054	14	13602	
4-05	Ventilation Amount (status)	54539555	VentilationAmountStatus	_053	_054	13	13603	
4-06	ON/OFF (setting)	16791041	StartStopCommand	_054	_055	4	13825	set
4-06	ON/OFF (status)	12596738	StartStopStatus	_054	_055	3	13826	Fb
4-06	Alarm Sign	12596739	Alarm	_054	_055	3	13827	
4-06	Error Code	54539780	MalfunctionCode	_054	_055	13	13828	
4-06	Operation Mode (setting)	58734085	AirConModeCommand	_054	_055	14	13829	set
4-06	Operation Mode (status)	54539782	AirConModeStatus	_054	_055	13	13830	Fb
4-06	Airflow Rate (setting)	58734087	AirFlowRateCommand	_054	_055	14	13831	set
4-06	Airflow Rate (status)	54539784	AirFlowRateStatus	_054	_055	13	13832	Fb
4-06	Measured Room Temperature	13833	RoomTemp	_054	_055	0	13833	
4-06	Set Room Temperature	8402442	TempAdjust	_054	_055	2	13834	set
4-06	Filer Limit Sign	12596747	FilterSign	_054	_055	3	13835	
4-06	Filter Limit Sign Reset	20985356	FilterSignReset	_054	_055	5	13836	
4-06	Remote Control Operation (ON/OFF)	20985357	RemoteControlStart	_054	_055	5	13837	
4-06	Remote Control Operation (Operation Mode)	20985358	RemoteControlAirConModeSet	_054	_055	5	13838	
4-06	Remote Control Operation (Set Temperature)	20985360	RemoteControlTempAdjust	_054	_055	5	13840	
4-06	Remote Control Operation (Sub Group Address Control Reject)	20985361	CL_Rejection	_054	_055	5	13841	
4-06	Elec Total Power	96482835	ElecTotalPower	_054	_055	23	13843	
4-06	Communication Status	12596756	CommunicationStatus	_054	_055	3	13844	
4-06	System Forced OFF	20985365	SystemForcedOff	_054	_055	5	13845	
4-06	Air Direction (setting)	8402454	AirDirectionCommand	_054	_055	2	13846	
4-06	Air Direction (status)	13847	AirDirectionStatus	_054	_055	0	13847	
4-06	Forced Thermostat OFF (setting)	16791064	ForcedThermoOFFCommand	_054	_055	4	13848	
4-06	Forced Thermostat OFF (status)	12596761	ForcedThermoOFFStatus	_054	_055	3	13849	
4-06	Energy Efficiency Command (setting)	16791066	EnergyEfficiencyCommand	_054	_055	4	13850	
4-06	Energy Efficiency Command (status)	12596763	EnergyEfficiencyStatus	_054	_055	3	13851	
4-06	Thermostat Status	12596764	ThermoStatus	_054	_055	3	13852	
4-06	Compressor Status	12596765	CompressorStatus	_054	_055	3	13853	
4-06	Indoor Fan Status	12596766	IndoorFanStatus	_054	_055	3	13854	
4-06	Heater Operation Status	12596767	HeaterStatus	_054	_055	3	13855	
4-06	Ventilation Mode (setting)	58734112	VentilationModeCommand	_054	_055	14	13856	
4-06	Ventilation Mode (status)	54539809	VentilationModeStatus	_054	_055	13	13857	
4-06	Ventilation Amount (setting)	58734114	VentilationAmountCommand	_054	_055	14	13858	
4-06	Ventilation Amount (status)	54539811	VentilationAmountStatus	_054	_055	13	13859	
4-07	ON/OFF (setting)	16791297	StartStopCommand	_055	_056	4	14081	set
4-07	ON/OFF (status)	12596994	StartStopStatus	_055	_056	3	14082	Fb
4-07	Alarm Sign	12596995	Alarm	_055	_056	3	14083	
4-07	Error Code	54540036	MalfunctionCode	_055	_056	13	14084	
4-07	Operation Mode (setting)	58734341	AirConModeCommand	_055	_056	14	14085	set
4-07	Operation Mode (status)	54540038	AirConModeStatus	_055	_056	13	14086	Fb
4-07	Airflow Rate (setting)	58734343	AirFlowRateCommand	_055	_056	14	14087	set
4-07	Airflow Rate (status)	54540040	AirFlowRateStatus	_055	_056	13	14088	Fb
4-07	Measured Room Temperature	14089	RoomTemp	_055	_056	0	14089	
4-07	Set Room Temperature	8402698	TempAdjust	_055	_056	2	14090	set
4-07	Filer Limit Sign	12597003	FilterSign	_055	_056	3	14091	
4-07	Filter Limit Sign Reset	20985612	FilterSignReset	_055	_056	5	14092	
4-07	Remote Control Operation (ON/OFF)	20985613	RemoteControlStart	_055	_056	5	14093	
4-07	Remote Control Operation (Operation Mode)	20985614	RemoteControlAirConModeSet	_055	_056	5	14094	
4-07	Remote Control Operation (Set Temperature)	20985616	RemoteControlTempAdjust	_055	_056	5	14096	
4-07	Remote Control Operation (Sub Group Address Control Reject)	20985617	CL_Rejection	_055	_056	5	14097	
4-07	Elec Total Power	96483091	ElecTotalPower	_055	_056	23	14099	
4-07	Communication Status	12597012	CommunicationStatus	_055	_056	3	14100	
4-07	System Forced OFF	20985621	SystemForcedOff	_055	_056	5	14101	
4-07	Air Direction (setting)	8402710	AirDirectionCommand	_055	_056	2	14102	

4-07	Air Direction (status)	14103	AirDirectionStatus	_055	_056	0	14103	
4-07	Forced Thermostat OFF (setting)	16791320	ForcedThermoOFFCommand	_055	_056	4	14104	
4-07	Forced Thermostat OFF (status)	12597017	ForcedThermoOFFStatus	_055	_056	3	14105	
4-07	Energy Efficiency Command (setting)	16791322	EnergyEfficiencyCommand	_055	_056	4	14106	
4-07	Energy Efficiency Command (status)	12597019	EnergyEfficiencyStatus	_055	_056	3	14107	
4-07	Thermostat Status	12597020	ThermoStatus	_055	_056	3	14108	
4-07	Compressor Status	12597021	CompressorStatus	_055	_056	3	14109	
4-07	Indoor Fan Status	12597022	IndoorFanStatus	_055	_056	3	14110	
4-07	Heater Operation Status	12597023	HeaterStatus	_055	_056	3	14111	
4-07	Ventilation Mode (setting)	58734368	VentilationModeCommand	_055	_056	14	14112	
4-07	Ventilation Mode (status)	54540065	VentilationModeStatus	_055	_056	13	14113	
4-07	Ventilation Amount (setting)	58734370	VentilationAmountCommand	_055	_056	14	14114	
4-07	Ventilation Amount (status)	54540067	VentilationAmountStatus	_055	_056	13	14115	
4-08	ON/OFF (setting)	16791553	StartStopCommand	_056	_057	4	14337	set
4-08	ON/OFF (status)	12597250	StartStopStatus	_056	_057	3	14338	Fb
4-08	Alarm Sign	12597251	Alarm	_056	_057	3	14339	
4-08	Error Code	54540292	MalfunctionCode	_056	_057	13	14340	
4-08	Operation Mode (setting)	58734597	AirConModeCommand	_056	_057	14	14341	set
4-08	Operation Mode (status)	54540294	AirConModeStatus	_056	_057	13	14342	Fb
4-08	Airflow Rate (setting)	58734599	AirFlowRateCommand	_056	_057	14	14343	set
4-08	Airflow Rate (status)	54540296	AirFlowRateStatus	_056	_057	13	14344	Fb
4-08	Measured Room Temperature	14345	RoomTemp	_056	_057	0	14345	
4-08	Set Room Temperature	8402954	TempAdjust	_056	_057	2	14346	set
4-08	Filer Limit Sign	12597259	FilterSign	_056	_057	3	14347	
4-08	Filter Limit Sign Reset	20985868	FilterSignReset	_056	_057	5	14348	
4-08	Remote Control Operation (ON/OFF)	20985869	RemoteControlStart	_056	_057	5	14349	
4-08	Remote Control Operation (Operation Mode)	20985870	RemoteControlAirConModeSet	_056	_057	5	14350	
4-08	Remote Control Operation (Set Temperature)	20985872	RemoteControlTempAdjust	_056	_057	5	14352	
4-08	Remote Control Operation (Sub Group Address Control Reject)	20985873	CL_Rejection	_056	_057	5	14353	
4-08	Elec Total Power	96483347	ElecTotalPower	_056	_057	23	14355	
4-08	Communication Status	12597268	CommunicationStatus	_056	_057	3	14356	
4-08	System Forced OFF	20985877	SystemForcedOff	_056	_057	5	14357	
4-08	Air Direction (setting)	8402966	AirDirectionCommand	_056	_057	2	14358	
4-08	Air Direction (status)	14359	AirDirectionStatus	_056	_057	0	14359	
4-08	Forced Thermostat OFF (setting)	16791576	ForcedThermoOFFCommand	_056	_057	4	14360	
4-08	Forced Thermostat OFF (status)	12597273	ForcedThermoOFFStatus	_056	_057	3	14361	
4-08	Energy Efficiency Command (setting)	16791578	EnergyEfficiencyCommand	_056	_057	4	14362	
4-08	Energy Efficiency Command (status)	12597275	EnergyEfficiencyStatus	_056	_057	3	14363	
4-08	Thermostat Status	12597276	ThermoStatus	_056	_057	3	14364	
4-08	Compressor Status	12597277	CompressorStatus	_056	_057	3	14365	
4-08	Indoor Fan Status	12597278	IndoorFanStatus	_056	_057	3	14366	
4-08	Heater Operation Status	12597279	HeaterStatus	_056	_057	3	14367	
4-08	Ventilation Mode (setting)	58734624	VentilationModeCommand	_056	_057	14	14368	
4-08	Ventilation Mode (status)	54540321	VentilationModeStatus	_056	_057	13	14369	
4-08	Ventilation Amount (setting)	58734626	VentilationAmountCommand	_056	_057	14	14370	
4-08	Ventilation Amount (status)	54540323	VentilationAmountStatus	_056	_057	13	14371	
4-09	ON/OFF (setting)	16791809	StartStopCommand	_057	_058	4	14593	set
4-09	ON/OFF (status)	12597506	StartStopStatus	_057	_058	3	14594	Fb
4-09	Alarm Sign	12597507	Alarm	_057	_058	3	14595	
4-09	Error Code	54540548	MalfunctionCode	_057	_058	13	14596	
4-09	Operation Mode (setting)	58734853	AirConModeCommand	_057	_058	14	14597	set
4-09	Operation Mode (status)	54540550	AirConModeStatus	_057	_058	13	14598	Fb
4-09	Airflow Rate (setting)	58734855	AirFlowRateCommand	_057	_058	14	14599	set
4-09	Airflow Rate (status)	54540552	AirFlowRateStatus	_057	_058	13	14600	Fb
4-09	Measured Room Temperature	14601	RoomTemp	_057	_058	0	14601	
4-09	Set Room Temperature	8403210	TempAdjust	_057	_058	2	14602	set
4-09	Filer Limit Sign	12597515	FilterSign	_057	_058	3	14603	
4-09	Filter Limit Sign Reset	20986124	FilterSignReset	_057	_058	5	14604	
4-09	Remote Control Operation (ON/OFF)	20986125	RemoteControlStart	_057	_058	5	14605	
4-09	Remote Control Operation (Operation Mode)	20986126	RemoteControlAirConModeSet	_057	_058	5	14606	
4-09	Remote Control Operation (Set Temperature)	20986128	RemoteControlTempAdjust	_057	_058	5	14608	
4-09	Remote Control Operation (Sub Group Address Control Reject)	20986129	CL_Rejection	_057	_058	5	14609	
4-09	Elec Total Power	96483603	ElecTotalPower	_057	_058	23	14611	
4-09	Communication Status	12597524	CommunicationStatus	_057	_058	3	14612	
4-09	System Forced OFF	20986133	SystemForcedOff	_057	_058	5	14613	
4-09	Air Direction (setting)	8403222	AirDirectionCommand	_057	_058	2	14614	
4-09	Air Direction (status)	14615	AirDirectionStatus	_057	_058	0	14615	
4-09	Forced Thermostat OFF (setting)	16791832	ForcedThermoOFFCommand	_057	_058	4	14616	
4-09	Forced Thermostat OFF (status)	12597529	ForcedThermoOFFStatus	_057	_058	3	14617	

4-09	Energy Efficiency Command (setting)	16791834	EnergyEfficiencyCommand	_057	_058	4	14618	
4-09	Energy Efficiency Command (status)	12597531	EnergyEfficiencyStatus	_057	_058	3	14619	
4-09	Thermostat Status	12597532	ThermoStatus	_057	_058	3	14620	
4-09	Compressor Status	12597533	CompressorStatus	_057	_058	3	14621	
4-09	Indoor Fan Status	12597534	IndoorFanStatus	_057	_058	3	14622	
4-09	Heater Operation Status	12597535	HeaterStatus	_057	_058	3	14623	
4-09	Ventilation Mode (setting)	58734880	VentilationModeCommand	_057	_058	14	14624	
4-09	Ventilation Mode (status)	54540577	VentilationModeStatus	_057	_058	13	14625	
4-09	Ventilation Amount (setting)	58734882	VentilationAmountCommand	_057	_058	14	14626	
4-09	Ventilation Amount (status)	54540579	VentilationAmountStatus	_057	_058	13	14627	
4-10	ON/OFF (setting)	16792065	StartStopCommand	_058	_059	4	14849	set
4-10	ON/OFF (status)	12597762	StartStopStatus	_058	_059	3	14850	Fb
4-10	Alarm Sign	12597763	Alarm	_058	_059	3	14851	
4-10	Error Code	54540804	MalfunctionCode	_058	_059	13	14852	
4-10	Operation Mode (setting)	58735109	AirConModeCommand	_058	_059	14	14853	set
4-10	Operation Mode (status)	54540806	AirConModeStatus	_058	_059	13	14854	Fb
4-10	Airflow Rate (setting)	58735111	AirFlowRateCommand	_058	_059	14	14855	set
4-10	Airflow Rate (status)	54540808	AirFlowRateStatus	_058	_059	13	14856	Fb
4-10	Measured Room Temperature	14857	RoomTemp	_058	_059	0	14857	
4-10	Set Room Temperature	8403466	TempAdjust	_058	_059	2	14858	set
4-10	Filer Limit Sign	12597771	FilterSign	_058	_059	3	14859	
4-10	Filter Limit Sign Reset	20986380	FilterSignReset	_058	_059	5	14860	
4-10	Remote Control Operation (ON/OFF)	20986381	RemoteControlStart	_058	_059	5	14861	
4-10	Remote Control Operation (Operation Mode)	20986382	RemoteControlAirConModeSet	_058	_059	5	14862	
4-10	Remote Control Operation (Set Temperature)	20986384	RemoteControlTempAdjust	_058	_059	5	14864	
4-10	Remote Control Operation (Sub Group Address Control Reject)	20986385	CL_Rejection	_058	_059	5	14865	
4-10	Elec Total Power	96483859	ElecTotalPower	_058	_059	23	14867	
4-10	Communication Status	12597780	CommunicationStatus	_058	_059	3	14868	
4-10	System Forced OFF	20986389	SystemForcedOff	_058	_059	5	14869	
4-10	Air Direction (setting)	8403478	AirDirectionCommand	_058	_059	2	14870	
4-10	Air Direction (status)	14871	AirDirectionStatus	_058	_059	0	14871	
4-10	Forced Thermostat OFF (setting)	16792088	ForcedThermoOFFCommand	_058	_059	4	14872	
4-10	Forced Thermostat OFF (status)	12597785	ForcedThermoOFFStatus	_058	_059	3	14873	
4-10	Energy Efficiency Command (setting)	16792090	EnergyEfficiencyCommand	_058	_059	4	14874	
4-10	Energy Efficiency Command (status)	12597787	EnergyEfficiencyStatus	_058	_059	3	14875	
4-10	Thermostat Status	12597788	ThermoStatus	_058	_059	3	14876	
4-10	Compressor Status	12597789	CompressorStatus	_058	_059	3	14877	
4-10	Indoor Fan Status	12597790	IndoorFanStatus	_058	_059	3	14878	
4-10	Heater Operation Status	12597791	HeaterStatus	_058	_059	3	14879	
4-10	Ventilation Mode (setting)	58735136	VentilationModeCommand	_058	_059	14	14880	
4-10	Ventilation Mode (status)	54540833	VentilationModeStatus	_058	_059	13	14881	
4-10	Ventilation Amount (setting)	58735138	VentilationAmountCommand	_058	_059	14	14882	
4-10	Ventilation Amount (status)	54540835	VentilationAmountStatus	_058	_059	13	14883	
4-11	ON/OFF (setting)	16792321	StartStopCommand	_059	_060	4	15105	set
4-11	ON/OFF (status)	12598018	StartStopStatus	_059	_060	3	15106	Fb
4-11	Alarm Sign	12598019	Alarm	_059	_060	3	15107	
4-11	Error Code	54541060	MalfunctionCode	_059	_060	13	15108	
4-11	Operation Mode (setting)	58735365	AirConModeCommand	_059	_060	14	15109	set
4-11	Operation Mode (status)	54541062	AirConModeStatus	_059	_060	13	15110	Fb
4-11	Airflow Rate (setting)	58735367	AirFlowRateCommand	_059	_060	14	15111	set
4-11	Airflow Rate (status)	54541064	AirFlowRateStatus	_059	_060	13	15112	Fb
4-11	Measured Room Temperature	15113	RoomTemp	_059	_060	0	15113	
4-11	Set Room Temperature	8403722	TempAdjust	_059	_060	2	15114	set
4-11	Filer Limit Sign	12598027	FilterSign	_059	_060	3	15115	
4-11	Filter Limit Sign Reset	20986636	FilterSignReset	_059	_060	5	15116	
4-11	Remote Control Operation (ON/OFF)	20986637	RemoteControlStart	_059	_060	5	15117	
4-11	Remote Control Operation (Operation Mode)	20986638	RemoteControlAirConModeSet	_059	_060	5	15118	
4-11	Remote Control Operation (Set Temperature)	20986640	RemoteControlTempAdjust	_059	_060	5	15120	
4-11	Remote Control Operation (Sub Group Address Control Reject)	20986641	CL_Rejection	_059	_060	5	15121	
4-11	Elec Total Power	96484115	ElecTotalPower	_059	_060	23	15123	
4-11	Communication Status	12598036	CommunicationStatus	_059	_060	3	15124	
4-11	System Forced OFF	20986645	SystemForcedOff	_059	_060	5	15125	
4-11	Air Direction (setting)	8403734	AirDirectionCommand	_059	_060	2	15126	
4-11	Air Direction (status)	15127	AirDirectionStatus	_059	_060	0	15127	
4-11	Forced Thermostat OFF (setting)	16792344	ForcedThermoOFFCommand	_059	_060	4	15128	
4-11	Forced Thermostat OFF (status)	12598041	ForcedThermoOFFStatus	_059	_060	3	15129	
4-11	Energy Efficiency Command (setting)	16792346	EnergyEfficiencyCommand	_059	_060	4	15130	
4-11	Energy Efficiency Command (status)	12598043	EnergyEfficiencyStatus	_059	_060	3	15131	
4-11	Thermostat Status	12598044	ThermoStatus	_059	_060	3	15132	

4-11	Compressor Status	12598045	CompressorStatus	_059	_060	3	15133	
4-11	Indoor Fan Status	12598046	IndoorFanStatus	_059	_060	3	15134	
4-11	Heater Operation Status	12598047	HeaterStatus	_059	_060	3	15135	
4-11	Ventilation Mode (setting)	58735392	VentilationModeCommand	_059	_060	14	15136	
4-11	Ventilation Mode (status)	54541089	VentilationModeStatus	_059	_060	13	15137	
4-11	Ventilation Amount (setting)	58735394	VentilationAmountCommand	_059	_060	14	15138	
4-11	Ventilation Amount (status)	54541091	VentilationAmountStatus	_059	_060	13	15139	
4-12	ON/OFF (setting)	16792577	StartStopCommand	_060	_061	4	15361	set
4-12	ON/OFF (status)	12598274	StartStopStatus	_060	_061	3	15362	Fb
4-12	Alarm Sign	12598275	Alarm	_060	_061	3	15363	
4-12	Error Code	54541316	MalfunctionCode	_060	_061	13	15364	
4-12	Operation Mode (setting)	58735621	AirConModeCommand	_060	_061	14	15365	set
4-12	Operation Mode (status)	54541318	AirConModeStatus	_060	_061	13	15366	Fb
4-12	Airflow Rate (setting)	58735623	AirFlowRateCommand	_060	_061	14	15367	set
4-12	Airflow Rate (status)	54541320	AirFlowRateStatus	_060	_061	13	15368	Fb
4-12	Measured Room Temperature	15369	RoomTemp	_060	_061	0	15369	
4-12	Set Room Temperature	8403978	TempAdjust	_060	_061	2	15370	set
4-12	Filer Limit Sign	12598283	FilterSign	_060	_061	3	15371	
4-12	Filter Limit Sign Reset	20986892	FilterSignReset	_060	_061	5	15372	
4-12	Remote Control Operation (ON/OFF)	20986893	RemoteControlStart	_060	_061	5	15373	
4-12	Remote Control Operation (Operation Mode)	20986894	RemoteControlAirConModeSet	_060	_061	5	15374	
4-12	Remote Control Operation (Set Temperature)	20986896	RemoteControlTempAdjust	_060	_061	5	15376	
4-12	Remote Control Operation (Sub Group Address Control Reject)	20986897	CL_Rejection	_060	_061	5	15377	
4-12	Elec Total Power	96484371	ElecTotalPower	_060	_061	23	15379	
4-12	Communication Status	12598292	CommunicationStatus	_060	_061	3	15380	
4-12	System Forced OFF	20986901	SystemForcedOff	_060	_061	5	15381	
4-12	Air Direction (setting)	8403990	AirDirectionCommand	_060	_061	2	15382	
4-12	Air Direction (status)	15383	AirDirectionStatus	_060	_061	0	15383	
4-12	Forced Thermostat OFF (setting)	16792600	ForcedThermoOFFCommand	_060	_061	4	15384	
4-12	Forced Thermostat OFF (status)	12598297	ForcedThermoOFFStatus	_060	_061	3	15385	
4-12	Energy Efficiency Command (setting)	16792602	EnergyEfficiencyCommand	_060	_061	4	15386	
4-12	Energy Efficiency Command (status)	12598299	EnergyEfficiencyStatus	_060	_061	3	15387	
4-12	Thermostat Status	12598300	ThermoStatus	_060	_061	3	15388	
4-12	Compressor Status	12598301	CompressorStatus	_060	_061	3	15389	
4-12	Indoor Fan Status	12598302	IndoorFanStatus	_060	_061	3	15390	
4-12	Heater Operation Status	12598303	HeaterStatus	_060	_061	3	15391	
4-12	Ventilation Mode (setting)	58735648	VentilationModeCommand	_060	_061	14	15392	
4-12	Ventilation Mode (status)	54541345	VentilationModeStatus	_060	_061	13	15393	
4-12	Ventilation Amount (setting)	58735650	VentilationAmountCommand	_060	_061	14	15394	
4-12	Ventilation Amount (status)	54541347	VentilationAmountStatus	_060	_061	13	15395	
4-13	ON/OFF (setting)	16792833	StartStopCommand	_061	_062	4	15617	set
4-13	ON/OFF (status)	12598530	StartStopStatus	_061	_062	3	15618	Fb
4-13	Alarm Sign	12598531	Alarm	_061	_062	3	15619	
4-13	Error Code	54541572	MalfunctionCode	_061	_062	13	15620	
4-13	Operation Mode (setting)	58735877	AirConModeCommand	_061	_062	14	15621	set
4-13	Operation Mode (status)	54541574	AirConModeStatus	_061	_062	13	15622	Fb
4-13	Airflow Rate (setting)	58735879	AirFlowRateCommand	_061	_062	14	15623	set
4-13	Airflow Rate (status)	54541576	AirFlowRateStatus	_061	_062	13	15624	Fb
4-13	Measured Room Temperature	15625	RoomTemp	_061	_062	0	15625	
4-13	Set Room Temperature	8404234	TempAdjust	_061	_062	2	15626	set
4-13	Filer Limit Sign	12598539	FilterSign	_061	_062	3	15627	
4-13	Filter Limit Sign Reset	20987148	FilterSignReset	_061	_062	5	15628	
4-13	Remote Control Operation (ON/OFF)	20987149	RemoteControlStart	_061	_062	5	15629	
4-13	Remote Control Operation (Operation Mode)	20987150	RemoteControlAirConModeSet	_061	_062	5	15630	
4-13	Remote Control Operation (Set Temperature)	20987152	RemoteControlTempAdjust	_061	_062	5	15632	
4-13	Remote Control Operation (Sub Group Address Control Reject)	20987153	CL_Rejection	_061	_062	5	15633	
4-13	Elec Total Power	96484627	ElecTotalPower	_061	_062	23	15635	
4-13	Communication Status	12598548	CommunicationStatus	_061	_062	3	15636	
4-13	System Forced OFF	20987157	SystemForcedOff	_061	_062	5	15637	
4-13	Air Direction (setting)	8404246	AirDirectionCommand	_061	_062	2	15638	
4-13	Air Direction (status)	15639	AirDirectionStatus	_061	_062	0	15639	
4-13	Forced Thermostat OFF (setting)	16792856	ForcedThermoOFFCommand	_061	_062	4	15640	
4-13	Forced Thermostat OFF (status)	12598553	ForcedThermoOFFStatus	_061	_062	3	15641	
4-13	Energy Efficiency Command (setting)	16792858	EnergyEfficiencyCommand	_061	_062	4	15642	
4-13	Energy Efficiency Command (status)	12598555	EnergyEfficiencyStatus	_061	_062	3	15643	
4-13	Thermostat Status	12598556	ThermoStatus	_061	_062	3	15644	
4-13	Compressor Status	12598557	CompressorStatus	_061	_062	3	15645	
4-13	Indoor Fan Status	12598558	IndoorFanStatus	_061	_062	3	15646	
4-13	Heater Operation Status	12598559	HeaterStatus	_061	_062	3	15647	

4-13	Ventilation Mode (setting)	58735904	VentilationModeCommand	_061	_062	14	15648	
4-13	Ventilation Mode (status)	54541601	VentilationModeStatus	_061	_062	13	15649	
4-13	Ventilation Amount (setting)	58735906	VentilationAmountCommand	_061	_062	14	15650	
4-13	Ventilation Amount (status)	54541603	VentilationAmountStatus	_061	_062	13	15651	
4-14	ON/OFF (setting)	16793089	StartStopCommand	_062	_063	4	15873	set
4-14	ON/OFF (status)	12598786	StartStopStatus	_062	_063	3	15874	Fb
4-14	Alarm Sign	12598787	Alarm	_062	_063	3	15875	
4-14	Error Code	54541828	MalfunctionCode	_062	_063	13	15876	
4-14	Operation Mode (setting)	58736133	AirConModeCommand	_062	_063	14	15877	set
4-14	Operation Mode (status)	54541830	AirConModeStatus	_062	_063	13	15878	Fb
4-14	Airflow Rate (setting)	58736135	AirFlowRateCommand	_062	_063	14	15879	set
4-14	Airflow Rate (status)	54541832	AirFlowRateStatus	_062	_063	13	15880	Fb
4-14	Measured Room Temperature	15881	RoomTemp	_062	_063	0	15881	
4-14	Set Room Temperature	8404490	TempAdjust	_062	_063	2	15882	set
4-14	Filer Limit Sign	12598795	FilterSign	_062	_063	3	15883	
4-14	Filter Limit Sign Reset	20987404	FilterSignReset	_062	_063	5	15884	
4-14	Remote Control Operation (ON/OFF)	20987405	RemoteControlStart	_062	_063	5	15885	
4-14	Remote Control Operation (Operation Mode)	20987406	RemoteControlAirConModeSet	_062	_063	5	15886	
4-14	Remote Control Operation (Set Temperature)	20987408	RemoteControlTempAdjust	_062	_063	5	15888	
4-14	Remote Control Operation (Sub Group Address Control Reject)	20987409	CL_Rejection	_062	_063	5	15889	
4-14	Elec Total Power	96484883	ElecTotalPower	_062	_063	23	15891	
4-14	Communication Status	12598804	CommunicationStatus	_062	_063	3	15892	
4-14	System Forced OFF	20987413	SystemForcedOff	_062	_063	5	15893	
4-14	Air Direction (setting)	8404502	AirDirectionCommand	_062	_063	2	15894	
4-14	Air Direction (status)	15895	AirDirectionStatus	_062	_063	0	15895	
4-14	Forced Thermostat OFF (setting)	16793112	ForcedThermoOFFCommand	_062	_063	4	15896	
4-14	Forced Thermostat OFF (status)	12598809	ForcedThermoOFFStatus	_062	_063	3	15897	
4-14	Energy Efficiency Command (setting)	16793114	EnergyEfficiencyCommand	_062	_063	4	15898	
4-14	Energy Efficiency Command (status)	12598811	EnergyEfficiencyStatus	_062	_063	3	15899	
4-14	Thermostat Status	12598812	ThermoStatus	_062	_063	3	15900	
4-14	Compressor Status	12598813	CompressorStatus	_062	_063	3	15901	
4-14	Indoor Fan Status	12598814	IndoorFanStatus	_062	_063	3	15902	
4-14	Heater Operation Status	12598815	HeaterStatus	_062	_063	3	15903	
4-14	Ventilation Mode (setting)	58736160	VentilationModeCommand	_062	_063	14	15904	
4-14	Ventilation Mode (status)	54541857	VentilationModeStatus	_062	_063	13	15905	
4-14	Ventilation Amount (setting)	58736162	VentilationAmountCommand	_062	_063	14	15906	
4-14	Ventilation Amount (status)	54541859	VentilationAmountStatus	_062	_063	13	15907	
4-15	ON/OFF (setting)	16793345	StartStopCommand	_063	_064	4	16129	set
4-15	ON/OFF (status)	12599042	StartStopStatus	_063	_064	3	16130	Fb
4-15	Alarm Sign	12599043	Alarm	_063	_064	3	16131	
4-15	Error Code	54542084	MalfunctionCode	_063	_064	13	16132	
4-15	Operation Mode (setting)	58736389	AirConModeCommand	_063	_064	14	16133	set
4-15	Operation Mode (status)	54542086	AirConModeStatus	_063	_064	13	16134	Fb
4-15	Airflow Rate (setting)	58736391	AirFlowRateCommand	_063	_064	14	16135	set
4-15	Airflow Rate (status)	54542088	AirFlowRateStatus	_063	_064	13	16136	Fb
4-15	Measured Room Temperature	16137	RoomTemp	_063	_064	0	16137	
4-15	Set Room Temperature	8404746	TempAdjust	_063	_064	2	16138	set
4-15	Filer Limit Sign	12599051	FilterSign	_063	_064	3	16139	
4-15	Filter Limit Sign Reset	20987660	FilterSignReset	_063	_064	5	16140	
4-15	Remote Control Operation (ON/OFF)	20987661	RemoteControlStart	_063	_064	5	16141	
4-15	Remote Control Operation (Operation Mode)	20987662	RemoteControlAirConModeSet	_063	_064	5	16142	
4-15	Remote Control Operation (Set Temperature)	20987664	RemoteControlTempAdjust	_063	_064	5	16144	
4-15	Remote Control Operation (Sub Group Address Control Reject)	20987665	CL_Rejection	_063	_064	5	16145	
4-15	Elec Total Power	96485139	ElecTotalPower	_063	_064	23	16147	
4-15	Communication Status	12599060	CommunicationStatus	_063	_064	3	16148	
4-15	System Forced OFF	20987669	SystemForcedOff	_063	_064	5	16149	
4-15	Air Direction (setting)	8404758	AirDirectionCommand	_063	_064	2	16150	
4-15	Air Direction (status)	16151	AirDirectionStatus	_063	_064	0	16151	
4-15	Forced Thermostat OFF (setting)	16793368	ForcedThermoOFFCommand	_063	_064	4	16152	
4-15	Forced Thermostat OFF (status)	12599065	ForcedThermoOFFStatus	_063	_064	3	16153	
4-15	Energy Efficiency Command (setting)	16793370	EnergyEfficiencyCommand	_063	_064	4	16154	
4-15	Energy Efficiency Command (status)	12599067	EnergyEfficiencyStatus	_063	_064	3	16155	
4-15	Thermostat Status	12599068	ThermoStatus	_063	_064	3	16156	
4-15	Compressor Status	12599069	CompressorStatus	_063	_064	3	16157	
4-15	Indoor Fan Status	12599070	IndoorFanStatus	_063	_064	3	16158	
4-15	Heater Operation Status	12599071	HeaterStatus	_063	_064	3	16159	
4-15	Ventilation Mode (setting)	58736416	VentilationModeCommand	_063	_064	14	16160	
4-15	Ventilation Mode (status)	54542113	VentilationModeStatus	_063	_064	13	16161	
4-15	Ventilation Amount (setting)	58736418	VentilationAmountCommand	_063	_064	14	16162	

4-15	Ventilation Amount (status)	54542115	VentilationAmountStatus_063	_064	13	16163
------	-----------------------------	----------	-----------------------------	------	----	-------