

DIII Net Port-4							
編碼	point name	Object ID	Object Name	小工具 Indoor_xx	Object Type	Instance Number	
1-00	ON/OFF (setting) 開/關(設定)	16826369	StartStopCommand _192	_193	4	49153	set
1-00	ON/OFF (status) 開/關(狀態)	12632066	StartStopStatus _192	_193	3	49154	Fb
1-00	Alarm Sign 鬧鐘通知	12632067	Alarm _192	_193	3	49155	
1-00	Error Code 錯誤代碼	54575108	MalfunctionCode _192	_193	13	49156	
1-00	Operation Mode (setting) 運轉模式(設定)	58769413	AirConModeCommand _192	_193	14	49157	set
1-00	Operation Mode (status) 運轉模式(狀態)	54575110	AirConModeStatus _192	_193	13	49158	Fb
1-00	Airflow Rate (setting) 氣流比率(設定)	58769415	AirFlowRateCommand _192	_193	14	49159	set
1-00	Airflow Rate (status) 氣流比率(狀態)	54575112	AirFlowRateStatus _192	_193	13	49160	Fb
1-00	Measured Room Temperature 測量房間溫度	49161	RoomTemp _192	_193	0	49161	
1-00	Set Room Temperature 設定房間溫度	8437770	TempAdjust _192	_193	2	49162	set
1-00	Filer Limit Sign 過濾限制通知	12632075	FilterSign _192	_193	3	49163	
1-00	Filter Limit Sign Reset 重設過濾限制通知	21020684	FilterSignReset _192	_193	5	49164	
1-00	Remote Control Operation (ON/OFF) 遙控器運轉(開/關)	21020685	RemoteControlStart _192	_193	5	49165	
1-00	Remote Control Operation (Operation Mode) 遙控器運轉(運轉模式)	21020686	RemoteControlAirConModeSet _192	_193	5	49166	
1-00	Remote Control Operation (Set Temperature) 遙控器運轉(設定溫度)	21020688	RemoteControlTempAdjust _192	_193	5	49168	
1-00	Remote Control Operation (Sub Group Address Control Rejection) 遙控器運轉(子組位置拒絕控制)	21020689	CL_Rejection _192	_193	5	49169	
1-00	Elec Total Power Elec總功率	96518163	ElecTotalPower _192	_193	23	49171	
1-00	Communication Status 溝通狀態	12632084	CommunicationStatus _192	_193	3	49172	
1-00	System Forced OFF 系統強制關閉	21020693	SystemForcedOff _192	_193	5	49173	
1-00	Air Direction (setting) 風向(設定)	8437782	AirDirectionCommand _192	_193	2	49174	
1-00	Air Direction (status) 風向(狀態)	49175	AirDirectionStatus _192	_193	0	49175	
1-00	Forced Thermostat OFF (setting) 強制恆溫器關閉(設定)	16826392	ForcedThermoOFFCommand _192	_193	4	49176	
1-00	Forced Thermostat OFF (status) 強制恆溫器關閉(狀態)	12632089	ForcedThermoOFFStatus _192	_193	3	49177	
1-00	Energy Efficiency Command (setting) 能源效率指令(設定)	16826394	EnergyEfficiencyCommand _192	_193	4	49178	
1-00	Energy Efficiency Command (status) 能源效率指令(狀態)	12632091	EnergyEfficiencyStatus _192	_193	3	49179	
1-00	Thermostat Status 恆溫器狀態	12632092	ThermoStatus _192	_193	3	49180	
1-00	Compressor Status 壓縮機狀態	12632093	CompressorStatus _192	_193	3	49181	
1-00	Indoor Fan Status 室內風扇狀態	12632094	IndoorFanStatus _192	_193	3	49182	
1-00	Heater Operation Status 暖氣運轉狀態	12632095	HeaterStatus _192	_193	3	49183	
1-00	Ventilation Mode (setting) 通風模式(設定)	58769440	VentilationModeCommand _192	_193	14	49184	
1-00	Ventilation Mode (status) 通風模式(狀態)	54575137	VentilationModeStatus _192	_193	13	49185	
1-00	Ventilation Amount (setting) 通風總和(設定)	58769442	VentilationAmountCommand _192	_193	14	49186	
1-00	Ventilation Amount (status) 通風總和(狀態)	54575139	VentilationAmountStatus _192	_193	13	49187	
1-01	ON/OFF (setting)	16826625	StartStopCommand _193	_194	4	49409	set
1-01	ON/OFF (status)	12632322	StartStopStatus _193	_194	3	49410	Fb
1-01	Alarm Sign	12632323	Alarm _193	_194	3	49411	
1-01	Error Code	54575364	MalfunctionCode _193	_194	13	49412	
1-01	Operation Mode (setting)	58769669	AirConModeCommand _193	_194	14	49413	set
1-01	Operation Mode (status)	54575366	AirConModeStatus _193	_194	13	49414	Fb
1-01	Airflow Rate (setting)	58769671	AirFlowRateCommand _193	_194	14	49415	set
1-01	Airflow Rate (status)	54575368	AirFlowRateStatus _193	_194	13	49416	Fb

1-01	Measured Room Temperature	49417	RoomTemp	_193	_194	0	49417	
1-01	Set Room Temperature	8438026	TempAdjust	_193	_194	2	49418	set
1-01	Filer Limit Sign	12632331	FilterSign	_193	_194	3	49419	
1-01	Filter Limit Sign Reset	21020940	FilterSignReset	_193	_194	5	49420	
1-01	Remote Control Operation (ON/OFF)	21020941	RemoteControlStart	_193	_194	5	49421	
1-01	Remote Control Operation (Operation Mode)	21020942	RemoteControlAirConModeSet	_193	_194	5	49422	
1-01	Remote Control Operation (Set Temperature)	21020944	RemoteControlTempAdjust	_193	_194	5	49424	
1-01	Remote Control Operation (Sub Group Address Control Rejecti	21020945	CL_Rejection	_193	_194	5	49425	
1-01	Elec Total Power	96518419	ElecTotalPower	_193	_194	23	49427	
1-01	Communication Status	12632340	CommunicationStatus	_193	_194	3	49428	
1-01	System Forced OFF	21020949	SystemForcedOff	_193	_194	5	49429	
1-01	Air Direction (setting)	8438038	AirDirectionCommand	_193	_194	2	49430	
1-01	Air Direction (status)	49431	AirDirectionStatus	_193	_194	0	49431	
1-01	Forced Thermostat OFF (setting)	16826648	ForcedThermoOFFCommand	_193	_194	4	49432	
1-01	Forced Thermostat OFF (status)	12632345	ForcedThermoOFFStatus	_193	_194	3	49433	
1-01	Energy Efficiency Command (setting)	16826650	EnergyEfficiencyCommand	_193	_194	4	49434	
1-01	Energy Efficiency Command (status)	12632347	EnergyEfficiencyStatus	_193	_194	3	49435	
1-01	Thermostat Status	12632348	ThermoStatus	_193	_194	3	49436	
1-01	Compressor Status	12632349	CompressorStatus	_193	_194	3	49437	
1-01	Indoor Fan Status	12632350	IndoorFanStatus	_193	_194	3	49438	
1-01	Heater Operation Status	12632351	HeaterStatus	_193	_194	3	49439	
1-01	Ventilation Mode (setting)	58769696	VentilationModeCommand	_193	_194	14	49440	
1-01	Ventilation Mode (status)	54575393	VentilationModeStatus	_193	_194	13	49441	
1-01	Ventilation Amount (setting)	58769698	VentilationAmountCommand	_193	_194	14	49442	
1-01	Ventilation Amount (status)	54575395	VentilationAmountStatus	_193	_194	13	49443	
1-02	ON/OFF (setting)	16826881	StartStopCommand	_194	_195	4	49665	set
1-02	ON/OFF (status)	12632578	StartStopStatus	_194	_195	3	49666	Fb
1-02	Alarm Sign	12632579	Alarm	_194	_195	3	49667	
1-02	Error Code	54575620	MalfunctionCode	_194	_195	13	49668	
1-02	Operation Mode (setting)	58769925	AirConModeCommand	_194	_195	14	49669	set
1-02	Operation Mode (status)	54575622	AirConModeStatus	_194	_195	13	49670	Fb
1-02	Airflow Rate (setting)	58769927	AirFlowRateCommand	_194	_195	14	49671	set
1-02	Airflow Rate (status)	54575624	AirFlowRateStatus	_194	_195	13	49672	Fb
1-02	Measured Room Temperature	49673	RoomTemp	_194	_195	0	49673	
1-02	Set Room Temperature	8438282	TempAdjust	_194	_195	2	49674	set
1-02	Filer Limit Sign	12632587	FilterSign	_194	_195	3	49675	
1-02	Filter Limit Sign Reset	21021196	FilterSignReset	_194	_195	5	49676	
1-02	Remote Control Operation (ON/OFF)	21021197	RemoteControlStart	_194	_195	5	49677	
1-02	Remote Control Operation (Operation Mode)	21021198	RemoteControlAirConModeSet	_194	_195	5	49678	
1-02	Remote Control Operation (Set Temperature)	21021200	RemoteControlTempAdjust	_194	_195	5	49680	
1-02	Remote Control Operation (Sub Group Address Control Rejecti	21021201	CL_Rejection	_194	_195	5	49681	
1-02	Elec Total Power	96518675	ElecTotalPower	_194	_195	23	49683	
1-02	Communication Status	12632596	CommunicationStatus	_194	_195	3	49684	
1-02	System Forced OFF	21021205	SystemForcedOff	_194	_195	5	49685	
1-02	Air Direction (setting)	8438294	AirDirectionCommand	_194	_195	2	49686	
1-02	Air Direction (status)	49687	AirDirectionStatus	_194	_195	0	49687	
1-02	Forced Thermostat OFF (setting)	16826904	ForcedThermoOFFCommand	_194	_195	4	49688	
1-02	Forced Thermostat OFF (status)	12632601	ForcedThermoOFFStatus	_194	_195	3	49689	
1-02	Energy Efficiency Command (setting)	16826906	EnergyEfficiencyCommand	_194	_195	4	49690	
1-02	Energy Efficiency Command (status)	12632603	EnergyEfficiencyStatus	_194	_195	3	49691	
1-02	Thermostat Status	12632604	ThermoStatus	_194	_195	3	49692	
1-02	Compressor Status	12632605	CompressorStatus	_194	_195	3	49693	
1-02	Indoor Fan Status	12632606	IndoorFanStatus	_194	_195	3	49694	
1-02	Heater Operation Status	12632607	HeaterStatus	_194	_195	3	49695	
1-02	Ventilation Mode (setting)	58769952	VentilationModeCommand	_194	_195	14	49696	
1-02	Ventilation Mode (status)	54575649	VentilationModeStatus	_194	_195	13	49697	
1-02	Ventilation Amount (setting)	58769954	VentilationAmountCommand	_194	_195	14	49698	
1-02	Ventilation Amount (status)	54575651	VentilationAmountStatus	_194	_195	13	49699	
1-03	ON/OFF (setting)	16827137	StartStopCommand	_195	_196	4	49921	set
1-03	ON/OFF (status)	12632834	StartStopStatus	_195	_196	3	49922	Fb
1-03	Alarm Sign	12632835	Alarm	_195	_196	3	49923	
1-03	Error Code	54575876	MalfunctionCode	_195	_196	13	49924	
1-03	Operation Mode (setting)	58770181	AirConModeCommand	_195	_196	14	49925	set
1-03	Operation Mode (status)	54575878	AirConModeStatus	_195	_196	13	49926	Fb
1-03	Airflow Rate (setting)	58770183	AirFlowRateCommand	_195	_196	14	49927	set
1-03	Airflow Rate (status)	54575880	AirFlowRateStatus	_195	_196	13	49928	Fb
1-03	Measured Room Temperature	49929	RoomTemp	_195	_196	0	49929	
1-03	Set Room Temperature	8438538	TempAdjust	_195	_196	2	49930	set
1-03	Filer Limit Sign	12632843	FilterSign	_195	_196	3	49931	

1-03	Filter Limit Sign Reset	21021452	FilterSignReset	_195	_196	5	49932	
1-03	Remote Control Operation (ON/OFF)	21021453	RemoteControlStart	_195	_196	5	49933	
1-03	Remote Control Operation (Operation Mode)	21021454	RemoteControlAirConModeSet	_195	_196	5	49934	
1-03	Remote Control Operation (Set Temperature)	21021456	RemoteControlTempAdjust	_195	_196	5	49936	
1-03	Remote Control Operation (Sub Group Address Control Rejecti	21021457	CL_Rejection	_195	_196	5	49937	
1-03	Elec Total Power	96518931	ElecTotalPower	_195	_196	23	49939	
1-03	Communication Status	12632852	CommunicationStatus	_195	_196	3	49940	
1-03	System Forced OFF	21021461	SystemForcedOff	_195	_196	5	49941	
1-03	Air Direction (setting)	8438550	AirDirectionCommand	_195	_196	2	49942	
1-03	Air Direction (status)	49943	AirDirectionStatus	_195	_196	0	49943	
1-03	Forced Thermostat OFF (setting)	16827160	ForcedThermoOFFCommand	_195	_196	4	49944	
1-03	Forced Thermostat OFF (status)	12632857	ForcedThermoOFFStatus	_195	_196	3	49945	
1-03	Energy Efficiency Command (setting)	16827162	EnergyEfficiencyCommand	_195	_196	4	49946	
1-03	Energy Efficiency Command (status)	12632859	EnergyEfficiencyStatus	_195	_196	3	49947	
1-03	Thermostat Status	12632860	ThermoStatus	_195	_196	3	49948	
1-03	Compressor Status	12632861	CompressorStatus	_195	_196	3	49949	
1-03	Indoor Fan Status	12632862	IndoorFanStatus	_195	_196	3	49950	
1-03	Heater Operation Status	12632863	HeaterStatus	_195	_196	3	49951	
1-03	Ventilation Mode (setting)	58770208	VentilationModeCommand	_195	_196	14	49952	
1-03	Ventilation Mode (status)	54575905	VentilationModeStatus	_195	_196	13	49953	
1-03	Ventilation Amount (setting)	58770210	VentilationAmountCommand	_195	_196	14	49954	
1-03	Ventilation Amount (status)	54575907	VentilationAmountStatus	_195	_196	13	49955	
1-04	ON/OFF (setting)	16827393	StartStopCommand	_196	_197	4	50177	set
1-04	ON/OFF (status)	12633090	StartStopStatus	_196	_197	3	50178	Fb
1-04	Alarm Sign	12633091	Alarm	_196	_197	3	50179	
1-04	Error Code	54576132	MalfunctionCode	_196	_197	13	50180	
1-04	Operation Mode (setting)	58770437	AirConModeCommand	_196	_197	14	50181	set
1-04	Operation Mode (status)	54576134	AirConModeStatus	_196	_197	13	50182	Fb
1-04	Airflow Rate (setting)	58770439	AirFlowRateCommand	_196	_197	14	50183	set
1-04	Airflow Rate (status)	54576136	AirFlowRateStatus	_196	_197	13	50184	Fb
1-04	Measured Room Temperature	50185	RoomTemp	_196	_197	0	50185	
1-04	Set Room Temperature	8438794	TempAdjust	_196	_197	2	50186	set
1-04	Filer Limit Sign	12633099	FilterSign	_196	_197	3	50187	
1-04	Filter Limit Sign Reset	21021708	FilterSignReset	_196	_197	5	50188	
1-04	Remote Control Operation (ON/OFF)	21021709	RemoteControlStart	_196	_197	5	50189	
1-04	Remote Control Operation (Operation Mode)	21021710	RemoteControlAirConModeSet	_196	_197	5	50190	
1-04	Remote Control Operation (Set Temperature)	21021712	RemoteControlTempAdjust	_196	_197	5	50192	
1-04	Remote Control Operation (Sub Group Address Control Rejecti	21021713	CL_Rejection	_196	_197	5	50193	
1-04	Elec Total Power	96519187	ElecTotalPower	_196	_197	23	50195	
1-04	Communication Status	12633108	CommunicationStatus	_196	_197	3	50196	
1-04	System Forced OFF	21021717	SystemForcedOff	_196	_197	5	50197	
1-04	Air Direction (setting)	8438806	AirDirectionCommand	_196	_197	2	50198	
1-04	Air Direction (status)	50199	AirDirectionStatus	_196	_197	0	50199	
1-04	Forced Thermostat OFF (setting)	16827416	ForcedThermoOFFCommand	_196	_197	4	50200	
1-04	Forced Thermostat OFF (status)	12633113	ForcedThermoOFFStatus	_196	_197	3	50201	
1-04	Energy Efficiency Command (setting)	16827418	EnergyEfficiencyCommand	_196	_197	4	50202	
1-04	Energy Efficiency Command (status)	12633115	EnergyEfficiencyStatus	_196	_197	3	50203	
1-04	Thermostat Status	12633116	ThermoStatus	_196	_197	3	50204	
1-04	Compressor Status	12633117	CompressorStatus	_196	_197	3	50205	
1-04	Indoor Fan Status	12633118	IndoorFanStatus	_196	_197	3	50206	
1-04	Heater Operation Status	12633119	HeaterStatus	_196	_197	3	50207	
1-04	Ventilation Mode (setting)	58770464	VentilationModeCommand	_196	_197	14	50208	
1-04	Ventilation Mode (status)	54576161	VentilationModeStatus	_196	_197	13	50209	
1-04	Ventilation Amount (setting)	58770466	VentilationAmountCommand	_196	_197	14	50210	
1-04	Ventilation Amount (status)	54576163	VentilationAmountStatus	_196	_197	13	50211	
1-05	ON/OFF (setting)	16827649	StartStopCommand	_197	_198	4	50433	set
1-05	ON/OFF (status)	12633346	StartStopStatus	_197	_198	3	50434	Fb
1-05	Alarm Sign	12633347	Alarm	_197	_198	3	50435	
1-05	Error Code	54576388	MalfunctionCode	_197	_198	13	50436	
1-05	Operation Mode (setting)	58770693	AirConModeCommand	_197	_198	14	50437	set
1-05	Operation Mode (status)	54576390	AirConModeStatus	_197	_198	13	50438	Fb
1-05	Airflow Rate (setting)	58770695	AirFlowRateCommand	_197	_198	14	50439	set
1-05	Airflow Rate (status)	54576392	AirFlowRateStatus	_197	_198	13	50440	Fb
1-05	Measured Room Temperature	50441	RoomTemp	_197	_198	0	50441	
1-05	Set Room Temperature	8439050	TempAdjust	_197	_198	2	50442	set
1-05	Filer Limit Sign	12633355	FilterSign	_197	_198	3	50443	
1-05	Filter Limit Sign Reset	21021964	FilterSignReset	_197	_198	5	50444	
1-05	Remote Control Operation (ON/OFF)	21021965	RemoteControlStart	_197	_198	5	50445	
1-05	Remote Control Operation (Operation Mode)	21021966	RemoteControlAirConModeSet	_197	_198	5	50446	

1-05	Remote Control Operation (Set Temperature)	21021968	RemoteControlTempAdjust	_197	_198	5	50448	
1-05	Remote Control Operation (Sub Group Address Control Rejecti	21021969	CL_Rejection	_197	_198	5	50449	
1-05	Elec Total Power	96519443	ElecTotalPower	_197	_198	23	50451	
1-05	Communication Status	12633364	CommunicationStatus	_197	_198	3	50452	
1-05	System Forced OFF	21021973	SystemForcedOff	_197	_198	5	50453	
1-05	Air Direction (setting)	8439062	AirDirectionCommand	_197	_198	2	50454	
1-05	Air Direction (status)	50455	AirDirectionStatus	_197	_198	0	50455	
1-05	Forced Thermostat OFF (setting)	16827672	ForcedThermoOFFCommand	_197	_198	4	50456	
1-05	Forced Thermostat OFF (status)	12633369	ForcedThermoOFFStatus	_197	_198	3	50457	
1-05	Energy Efficiency Command (setting)	16827674	EnergyEfficiencyCommand	_197	_198	4	50458	
1-05	Energy Efficiency Command (status)	12633371	EnergyEfficiencyStatus	_197	_198	3	50459	
1-05	Thermostat Status	12633372	ThermoStatus	_197	_198	3	50460	
1-05	Compressor Status	12633373	CompressorStatus	_197	_198	3	50461	
1-05	Indoor Fan Status	12633374	IndoorFanStatus	_197	_198	3	50462	
1-05	Heater Operation Status	12633375	HeaterStatus	_197	_198	3	50463	
1-05	Ventilation Mode (setting)	58770720	VentilationModeCommand	_197	_198	14	50464	
1-05	Ventilation Mode (status)	54576417	VentilationModeStatus	_197	_198	13	50465	
1-05	Ventilation Amount (setting)	58770722	VentilationAmountCommand	_197	_198	14	50466	
1-05	Ventilation Amount (status)	54576419	VentilationAmountStatus	_197	_198	13	50467	
1-06	ON/OFF (setting)	16827905	StartStopCommand	_198	_199	4	50689	set
1-06	ON/OFF (status)	12633602	StartStopStatus	_198	_199	3	50690	Fb
1-06	Alarm Sign	12633603	Alarm	_198	_199	3	50691	
1-06	Error Code	54576644	MalfunctionCode	_198	_199	13	50692	
1-06	Operation Mode (setting)	58770949	AirConModeCommand	_198	_199	14	50693	set
1-06	Operation Mode (status)	54576646	AirConModeStatus	_198	_199	13	50694	Fb
1-06	Airflow Rate (setting)	58770951	AirFlowRateCommand	_198	_199	14	50695	set
1-06	Airflow Rate (status)	54576648	AirFlowRateStatus	_198	_199	13	50696	Fb
1-06	Measured Room Temperature	50697	RoomTemp	_198	_199	0	50697	
1-06	Set Room Temperature	8439306	TempAdjust	_198	_199	2	50698	set
1-06	Filer Limit Sign	12633611	FilterSign	_198	_199	3	50699	
1-06	Filter Limit Sign Reset	21022220	FilterSignReset	_198	_199	5	50700	
1-06	Remote Control Operation (ON/OFF)	21022221	RemoteControlStart	_198	_199	5	50701	
1-06	Remote Control Operation (Operation Mode)	21022222	RemoteControlAirConModeSet	_198	_199	5	50702	
1-06	Remote Control Operation (Set Temperature)	21022224	RemoteControlTempAdjust	_198	_199	5	50704	
1-06	Remote Control Operation (Sub Group Address Control Rejecti	21022225	CL_Rejection	_198	_199	5	50705	
1-06	Elec Total Power	96519699	ElecTotalPower	_198	_199	23	50707	
1-06	Communication Status	12633620	CommunicationStatus	_198	_199	3	50708	
1-06	System Forced OFF	21022229	SystemForcedOff	_198	_199	5	50709	
1-06	Air Direction (setting)	8439318	AirDirectionCommand	_198	_199	2	50710	
1-06	Air Direction (status)	50711	AirDirectionStatus	_198	_199	0	50711	
1-06	Forced Thermostat OFF (setting)	16827928	ForcedThermoOFFCommand	_198	_199	4	50712	
1-06	Forced Thermostat OFF (status)	12633625	ForcedThermoOFFStatus	_198	_199	3	50713	
1-06	Energy Efficiency Command (setting)	16827930	EnergyEfficiencyCommand	_198	_199	4	50714	
1-06	Energy Efficiency Command (status)	12633627	EnergyEfficiencyStatus	_198	_199	3	50715	
1-06	Thermostat Status	12633628	ThermoStatus	_198	_199	3	50716	
1-06	Compressor Status	12633629	CompressorStatus	_198	_199	3	50717	
1-06	Indoor Fan Status	12633630	IndoorFanStatus	_198	_199	3	50718	
1-06	Heater Operation Status	12633631	HeaterStatus	_198	_199	3	50719	
1-06	Ventilation Mode (setting)	58770976	VentilationModeCommand	_198	_199	14	50720	
1-06	Ventilation Mode (status)	54576673	VentilationModeStatus	_198	_199	13	50721	
1-06	Ventilation Amount (setting)	58770978	VentilationAmountCommand	_198	_199	14	50722	
1-06	Ventilation Amount (status)	54576675	VentilationAmountStatus	_198	_199	13	50723	
1-07	ON/OFF (setting)	16828161	StartStopCommand	_199	_200	4	50945	set
1-07	ON/OFF (status)	12633858	StartStopStatus	_199	_200	3	50946	Fb
1-07	Alarm Sign	12633859	Alarm	_199	_200	3	50947	
1-07	Error Code	54576900	MalfunctionCode	_199	_200	13	50948	
1-07	Operation Mode (setting)	58771205	AirConModeCommand	_199	_200	14	50949	set
1-07	Operation Mode (status)	54576902	AirConModeStatus	_199	_200	13	50950	Fb
1-07	Airflow Rate (setting)	58771207	AirFlowRateCommand	_199	_200	14	50951	set
1-07	Airflow Rate (status)	54576904	AirFlowRateStatus	_199	_200	13	50952	Fb
1-07	Measured Room Temperature	50953	RoomTemp	_199	_200	0	50953	
1-07	Set Room Temperature	8439562	TempAdjust	_199	_200	2	50954	set
1-07	Filer Limit Sign	12633867	FilterSign	_199	_200	3	50955	
1-07	Filter Limit Sign Reset	21022476	FilterSignReset	_199	_200	5	50956	
1-07	Remote Control Operation (ON/OFF)	21022477	RemoteControlStart	_199	_200	5	50957	
1-07	Remote Control Operation (Operation Mode)	21022478	RemoteControlAirConModeSet	_199	_200	5	50958	
1-07	Remote Control Operation (Set Temperature)	21022480	RemoteControlTempAdjust	_199	_200	5	50960	
1-07	Remote Control Operation (Sub Group Address Control Rejecti	21022481	CL_Rejection	_199	_200	5	50961	
1-07	Elec Total Power	96519955	ElecTotalPower	_199	_200	23	50963	

1-07	Communication Status	12633876	CommunicationStatus	_199	_200	3	50964	
1-07	System Forced OFF	21022485	SystemForcedOff	_199	_200	5	50965	
1-07	Air Direction (setting)	8439574	AirDirectionCommand	_199	_200	2	50966	
1-07	Air Direction (status)	50967	AirDirectionStatus	_199	_200	0	50967	
1-07	Forced Thermostat OFF (setting)	16828184	ForcedThermoOFFCommand	_199	_200	4	50968	
1-07	Forced Thermostat OFF (status)	12633881	ForcedThermoOFFStatus	_199	_200	3	50969	
1-07	Energy Efficiency Command (setting)	16828186	EnergyEfficiencyCommand	_199	_200	4	50970	
1-07	Energy Efficiency Command (status)	12633883	EnergyEfficiencyStatus	_199	_200	3	50971	
1-07	Thermostat Status	12633884	ThermoStatus	_199	_200	3	50972	
1-07	Compressor Status	12633885	CompressorStatus	_199	_200	3	50973	
1-07	Indoor Fan Status	12633886	IndoorFanStatus	_199	_200	3	50974	
1-07	Heater Operation Status	12633887	HeaterStatus	_199	_200	3	50975	
1-07	Ventilation Mode (setting)	58771232	VentilationModeCommand	_199	_200	14	50976	
1-07	Ventilation Mode (status)	54576929	VentilationModeStatus	_199	_200	13	50977	
1-07	Ventilation Amount (setting)	58771234	VentilationAmountCommand	_199	_200	14	50978	
1-07	Ventilation Amount (status)	54576931	VentilationAmountStatus	_199	_200	13	50979	
1-08	ON/OFF (setting)	16828417	StartStopCommand	_200	_201	4	51201	set
1-08	ON/OFF (status)	12634114	StartStopStatus	_200	_201	3	51202	Fb
1-08	Alarm Sign	12634115	Alarm	_200	_201	3	51203	
1-08	Error Code	54577156	MalfunctionCode	_200	_201	13	51204	
1-08	Operation Mode (setting)	58771461	AirConModeCommand	_200	_201	14	51205	set
1-08	Operation Mode (status)	54577158	AirConModeStatus	_200	_201	13	51206	Fb
1-08	Airflow Rate (setting)	58771463	AirFlowRateCommand	_200	_201	14	51207	set
1-08	Airflow Rate (status)	54577160	AirFlowRateStatus	_200	_201	13	51208	Fb
1-08	Measured Room Temperature	51209	RoomTemp	_200	_201	0	51209	
1-08	Set Room Temperature	8439818	TempAdjust	_200	_201	2	51210	set
1-08	Filer Limit Sign	12634123	FilterSign	_200	_201	3	51211	
1-08	Filter Limit Sign Reset	21022732	FilterSignReset	_200	_201	5	51212	
1-08	Remote Control Operation (ON/OFF)	21022733	RemoteControlStart	_200	_201	5	51213	
1-08	Remote Control Operation (Operation Mode)	21022734	RemoteControlAirConModeSet	_200	_201	5	51214	
1-08	Remote Control Operation (Set Temperature)	21022736	RemoteControlTempAdjust	_200	_201	5	51216	
1-08	Remote Control Operation (Sub Group Address Control Rejecti	21022737	CL_Rejection	_200	_201	5	51217	
1-08	Elec Total Power	96520211	ElecTotalPower	_200	_201	23	51219	
1-08	Communication Status	12634132	CommunicationStatus	_200	_201	3	51220	
1-08	System Forced OFF	21022741	SystemForcedOff	_200	_201	5	51221	
1-08	Air Direction (setting)	8439830	AirDirectionCommand	_200	_201	2	51222	
1-08	Air Direction (status)	51223	AirDirectionStatus	_200	_201	0	51223	
1-08	Forced Thermostat OFF (setting)	16828440	ForcedThermoOFFCommand	_200	_201	4	51224	
1-08	Forced Thermostat OFF (status)	12634137	ForcedThermoOFFStatus	_200	_201	3	51225	
1-08	Energy Efficiency Command (setting)	16828442	EnergyEfficiencyCommand	_200	_201	4	51226	
1-08	Energy Efficiency Command (status)	12634139	EnergyEfficiencyStatus	_200	_201	3	51227	
1-08	Thermostat Status	12634140	ThermoStatus	_200	_201	3	51228	
1-08	Compressor Status	12634141	CompressorStatus	_200	_201	3	51229	
1-08	Indoor Fan Status	12634142	IndoorFanStatus	_200	_201	3	51230	
1-08	Heater Operation Status	12634143	HeaterStatus	_200	_201	3	51231	
1-08	Ventilation Mode (setting)	58771488	VentilationModeCommand	_200	_201	14	51232	
1-08	Ventilation Mode (status)	54577185	VentilationModeStatus	_200	_201	13	51233	
1-08	Ventilation Amount (setting)	58771490	VentilationAmountCommand	_200	_201	14	51234	
1-08	Ventilation Amount (status)	54577187	VentilationAmountStatus	_200	_201	13	51235	
1-09	ON/OFF (setting)	16828673	StartStopCommand	_201	_202	4	51457	set
1-09	ON/OFF (status)	12634370	StartStopStatus	_201	_202	3	51458	Fb
1-09	Alarm Sign	12634371	Alarm	_201	_202	3	51459	
1-09	Error Code	54577412	MalfunctionCode	_201	_202	13	51460	
1-09	Operation Mode (setting)	58771717	AirConModeCommand	_201	_202	14	51461	set
1-09	Operation Mode (status)	54577414	AirConModeStatus	_201	_202	13	51462	Fb
1-09	Airflow Rate (setting)	58771719	AirFlowRateCommand	_201	_202	14	51463	set
1-09	Airflow Rate (status)	54577416	AirFlowRateStatus	_201	_202	13	51464	Fb
1-09	Measured Room Temperature	51465	RoomTemp	_201	_202	0	51465	
1-09	Set Room Temperature	8440074	TempAdjust	_201	_202	2	51466	set
1-09	Filer Limit Sign	12634379	FilterSign	_201	_202	3	51467	
1-09	Filter Limit Sign Reset	21022988	FilterSignReset	_201	_202	5	51468	
1-09	Remote Control Operation (ON/OFF)	21022989	RemoteControlStart	_201	_202	5	51469	
1-09	Remote Control Operation (Operation Mode)	21022990	RemoteControlAirConModeSet	_201	_202	5	51470	
1-09	Remote Control Operation (Set Temperature)	21022992	RemoteControlTempAdjust	_201	_202	5	51472	
1-09	Remote Control Operation (Sub Group Address Control Rejecti	21022993	CL_Rejection	_201	_202	5	51473	
1-09	Elec Total Power	96520467	ElecTotalPower	_201	_202	23	51475	
1-09	Communication Status	12634388	CommunicationStatus	_201	_202	3	51476	
1-09	System Forced OFF	21022997	SystemForcedOff	_201	_202	5	51477	
1-09	Air Direction (setting)	8440086	AirDirectionCommand	_201	_202	2	51478	

1-09	Air Direction (status)	51479	AirDirectionStatus	_201	_202	0	51479	
1-09	Forced Thermostat OFF (setting)	16828696	ForcedThermoOFFCommand	_201	_202	4	51480	
1-09	Forced Thermostat OFF (status)	12634393	ForcedThermoOFFStatus	_201	_202	3	51481	
1-09	Energy Efficiency Command (setting)	16828698	EnergyEfficiencyCommand	_201	_202	4	51482	
1-09	Energy Efficiency Command (status)	12634395	EnergyEfficiencyStatus	_201	_202	3	51483	
1-09	Thermostat Status	12634396	ThermoStatus	_201	_202	3	51484	
1-09	Compressor Status	12634397	CompressorStatus	_201	_202	3	51485	
1-09	Indoor Fan Status	12634398	IndoorFanStatus	_201	_202	3	51486	
1-09	Heater Operation Status	12634399	HeaterStatus	_201	_202	3	51487	
1-09	Ventilation Mode (setting)	58771744	VentilationModeCommand	_201	_202	14	51488	
1-09	Ventilation Mode (status)	54577441	VentilationModeStatus	_201	_202	13	51489	
1-09	Ventilation Amount (setting)	58771746	VentilationAmountCommand	_201	_202	14	51490	
1-09	Ventilation Amount (status)	54577443	VentilationAmountStatus	_201	_202	13	51491	
1-10	ON/OFF (setting)	16828929	StartStopCommand	_202	_203	4	51713	set
1-10	ON/OFF (status)	12634626	StartStopStatus	_202	_203	3	51714	Fb
1-10	Alarm Sign	12634627	Alarm	_202	_203	3	51715	
1-10	Error Code	54577668	MalfunctionCode	_202	_203	13	51716	
1-10	Operation Mode (setting)	58771973	AirConModeCommand	_202	_203	14	51717	set
1-10	Operation Mode (status)	54577670	AirConModeStatus	_202	_203	13	51718	Fb
1-10	Airflow Rate (setting)	58771975	AirFlowRateCommand	_202	_203	14	51719	set
1-10	Airflow Rate (status)	54577672	AirFlowRateStatus	_202	_203	13	51720	Fb
1-10	Measured Room Temperature	51721	RoomTemp	_202	_203	0	51721	
1-10	Set Room Temperature	8440330	TempAdjust	_202	_203	2	51722	set
1-10	Filer Limit Sign	12634635	FilterSign	_202	_203	3	51723	
1-10	Filter Limit Sign Reset	21023244	FilterSignReset	_202	_203	5	51724	
1-10	Remote Control Operation (ON/OFF)	21023245	RemoteControlStart	_202	_203	5	51725	
1-10	Remote Control Operation (Operation Mode)	21023246	RemoteControlAirConModeSet	_202	_203	5	51726	
1-10	Remote Control Operation (Set Temperature)	21023248	RemoteControlTempAdjust	_202	_203	5	51728	
1-10	Remote Control Operation (Sub Group Address Control Reject)	21023249	CL_Rejection	_202	_203	5	51729	
1-10	Elec Total Power	96520723	ElecTotalPower	_202	_203	23	51731	
1-10	Communication Status	12634644	CommunicationStatus	_202	_203	3	51732	
1-10	System Forced OFF	21023253	SystemForcedOff	_202	_203	5	51733	
1-10	Air Direction (setting)	8440342	AirDirectionCommand	_202	_203	2	51734	
1-10	Air Direction (status)	51735	AirDirectionStatus	_202	_203	0	51735	
1-10	Forced Thermostat OFF (setting)	16828952	ForcedThermoOFFCommand	_202	_203	4	51736	
1-10	Forced Thermostat OFF (status)	12634649	ForcedThermoOFFStatus	_202	_203	3	51737	
1-10	Energy Efficiency Command (setting)	16828954	EnergyEfficiencyCommand	_202	_203	4	51738	
1-10	Energy Efficiency Command (status)	12634651	EnergyEfficiencyStatus	_202	_203	3	51739	
1-10	Thermostat Status	12634652	ThermoStatus	_202	_203	3	51740	
1-10	Compressor Status	12634653	CompressorStatus	_202	_203	3	51741	
1-10	Indoor Fan Status	12634654	IndoorFanStatus	_202	_203	3	51742	
1-10	Heater Operation Status	12634655	HeaterStatus	_202	_203	3	51743	
1-10	Ventilation Mode (setting)	58772000	VentilationModeCommand	_202	_203	14	51744	
1-10	Ventilation Mode (status)	54577697	VentilationModeStatus	_202	_203	13	51745	
1-10	Ventilation Amount (setting)	58772002	VentilationAmountCommand	_202	_203	14	51746	
1-10	Ventilation Amount (status)	54577699	VentilationAmountStatus	_202	_203	13	51747	
1-11	ON/OFF (setting)	16829185	StartStopCommand	_203	_204	4	51969	set
1-11	ON/OFF (status)	12634882	StartStopStatus	_203	_204	3	51970	Fb
1-11	Alarm Sign	12634883	Alarm	_203	_204	3	51971	
1-11	Error Code	54577924	MalfunctionCode	_203	_204	13	51972	
1-11	Operation Mode (setting)	58772229	AirConModeCommand	_203	_204	14	51973	set
1-11	Operation Mode (status)	54577926	AirConModeStatus	_203	_204	13	51974	Fb
1-11	Airflow Rate (setting)	58772231	AirFlowRateCommand	_203	_204	14	51975	set
1-11	Airflow Rate (status)	54577928	AirFlowRateStatus	_203	_204	13	51976	Fb
1-11	Measured Room Temperature	51977	RoomTemp	_203	_204	0	51977	
1-11	Set Room Temperature	8440586	TempAdjust	_203	_204	2	51978	set
1-11	Filer Limit Sign	12634891	FilterSign	_203	_204	3	51979	
1-11	Filter Limit Sign Reset	21023500	FilterSignReset	_203	_204	5	51980	
1-11	Remote Control Operation (ON/OFF)	21023501	RemoteControlStart	_203	_204	5	51981	
1-11	Remote Control Operation (Operation Mode)	21023502	RemoteControlAirConModeSet	_203	_204	5	51982	
1-11	Remote Control Operation (Set Temperature)	21023504	RemoteControlTempAdjust	_203	_204	5	51984	
1-11	Remote Control Operation (Sub Group Address Control Reject)	21023505	CL_Rejection	_203	_204	5	51985	
1-11	Elec Total Power	96520979	ElecTotalPower	_203	_204	23	51987	
1-11	Communication Status	12634900	CommunicationStatus	_203	_204	3	51988	
1-11	System Forced OFF	21023509	SystemForcedOff	_203	_204	5	51989	
1-11	Air Direction (setting)	8440598	AirDirectionCommand	_203	_204	2	51990	
1-11	Air Direction (status)	51991	AirDirectionStatus	_203	_204	0	51991	
1-11	Forced Thermostat OFF (setting)	16829208	ForcedThermoOFFCommand	_203	_204	4	51992	
1-11	Forced Thermostat OFF (status)	12634905	ForcedThermoOFFStatus	_203	_204	3	51993	

1-11	Energy Efficiency Command (setting)	16829210	EnergyEfficiencyCommand	_203	_204	4	51994	
1-11	Energy Efficiency Command (status)	12634907	EnergyEfficiencyStatus	_203	_204	3	51995	
1-11	Thermostat Status	12634908	ThermoStatus	_203	_204	3	51996	
1-11	Compressor Status	12634909	CompressorStatus	_203	_204	3	51997	
1-11	Indoor Fan Status	12634910	IndoorFanStatus	_203	_204	3	51998	
1-11	Heater Operation Status	12634911	HeaterStatus	_203	_204	3	51999	
1-11	Ventilation Mode (setting)	58772256	VentilationModeCommand	_203	_204	14	52000	
1-11	Ventilation Mode (status)	54577953	VentilationModeStatus	_203	_204	13	52001	
1-11	Ventilation Amount (setting)	58772258	VentilationAmountCommand	_203	_204	14	52002	
1-11	Ventilation Amount (status)	54577955	VentilationAmountStatus	_203	_204	13	52003	
1-12	ON/OFF (setting)	16829441	StartStopCommand	_204	_205	4	52225	set
1-12	ON/OFF (status)	12635138	StartStopStatus	_204	_205	3	52226	Fb
1-12	Alarm Sign	12635139	Alarm	_204	_205	3	52227	
1-12	Error Code	54578180	MalfunctionCode	_204	_205	13	52228	
1-12	Operation Mode (setting)	58772485	AirConModeCommand	_204	_205	14	52229	set
1-12	Operation Mode (status)	54578182	AirConModeStatus	_204	_205	13	52230	Fb
1-12	Airflow Rate (setting)	58772487	AirFlowRateCommand	_204	_205	14	52231	set
1-12	Airflow Rate (status)	54578184	AirFlowRateStatus	_204	_205	13	52232	Fb
1-12	Measured Room Temperature	52233	RoomTemp	_204	_205	0	52233	
1-12	Set Room Temperature	8440842	TempAdjust	_204	_205	2	52234	set
1-12	Filer Limit Sign	12635147	FilterSign	_204	_205	3	52235	
1-12	Filter Limit Sign Reset	21023756	FilterSignReset	_204	_205	5	52236	
1-12	Remote Control Operation (ON/OFF)	21023757	RemoteControlStart	_204	_205	5	52237	
1-12	Remote Control Operation (Operation Mode)	21023758	RemoteControlAirConModeSet	_204	_205	5	52238	
1-12	Remote Control Operation (Set Temperature)	21023760	RemoteControlTempAdjust	_204	_205	5	52240	
1-12	Remote Control Operation (Sub Group Address Control Reject)	21023761	CL_Rejection	_204	_205	5	52241	
1-12	Elec Total Power	96521235	ElecTotalPower	_204	_205	23	52243	
1-12	Communication Status	12635156	CommunicationStatus	_204	_205	3	52244	
1-12	System Forced OFF	21023765	SystemForcedOff	_204	_205	5	52245	
1-12	Air Direction (setting)	8440854	AirDirectionCommand	_204	_205	2	52246	
1-12	Air Direction (status)	52247	AirDirectionStatus	_204	_205	0	52247	
1-12	Forced Thermostat OFF (setting)	16829464	ForcedThermoOFFCommand	_204	_205	4	52248	
1-12	Forced Thermostat OFF (status)	12635161	ForcedThermoOFFStatus	_204	_205	3	52249	
1-12	Energy Efficiency Command (setting)	16829466	EnergyEfficiencyCommand	_204	_205	4	52250	
1-12	Energy Efficiency Command (status)	12635163	EnergyEfficiencyStatus	_204	_205	3	52251	
1-12	Thermostat Status	12635164	ThermoStatus	_204	_205	3	52252	
1-12	Compressor Status	12635165	CompressorStatus	_204	_205	3	52253	
1-12	Indoor Fan Status	12635166	IndoorFanStatus	_204	_205	3	52254	
1-12	Heater Operation Status	12635167	HeaterStatus	_204	_205	3	52255	
1-12	Ventilation Mode (setting)	58772512	VentilationModeCommand	_204	_205	14	52256	
1-12	Ventilation Mode (status)	54578209	VentilationModeStatus	_204	_205	13	52257	
1-12	Ventilation Amount (setting)	58772514	VentilationAmountCommand	_204	_205	14	52258	
1-12	Ventilation Amount (status)	54578211	VentilationAmountStatus	_204	_205	13	52259	
1-13	ON/OFF (setting)	16829697	StartStopCommand	_205	_206	4	52481	set
1-13	ON/OFF (status)	12635394	StartStopStatus	_205	_206	3	52482	Fb
1-13	Alarm Sign	12635395	Alarm	_205	_206	3	52483	
1-13	Error Code	54578436	MalfunctionCode	_205	_206	13	52484	
1-13	Operation Mode (setting)	58772741	AirConModeCommand	_205	_206	14	52485	set
1-13	Operation Mode (status)	54578438	AirConModeStatus	_205	_206	13	52486	Fb
1-13	Airflow Rate (setting)	58772743	AirFlowRateCommand	_205	_206	14	52487	set
1-13	Airflow Rate (status)	54578440	AirFlowRateStatus	_205	_206	13	52488	Fb
1-13	Measured Room Temperature	52489	RoomTemp	_205	_206	0	52489	
1-13	Set Room Temperature	8441098	TempAdjust	_205	_206	2	52490	set
1-13	Filer Limit Sign	12635403	FilterSign	_205	_206	3	52491	
1-13	Filter Limit Sign Reset	21024012	FilterSignReset	_205	_206	5	52492	
1-13	Remote Control Operation (ON/OFF)	21024013	RemoteControlStart	_205	_206	5	52493	
1-13	Remote Control Operation (Operation Mode)	21024014	RemoteControlAirConModeSet	_205	_206	5	52494	
1-13	Remote Control Operation (Set Temperature)	21024016	RemoteControlTempAdjust	_205	_206	5	52496	
1-13	Remote Control Operation (Sub Group Address Control Reject)	21024017	CL_Rejection	_205	_206	5	52497	
1-13	Elec Total Power	96521491	ElecTotalPower	_205	_206	23	52499	
1-13	Communication Status	12635412	CommunicationStatus	_205	_206	3	52500	
1-13	System Forced OFF	21024021	SystemForcedOff	_205	_206	5	52501	
1-13	Air Direction (setting)	8441110	AirDirectionCommand	_205	_206	2	52502	
1-13	Air Direction (status)	52503	AirDirectionStatus	_205	_206	0	52503	
1-13	Forced Thermostat OFF (setting)	16829720	ForcedThermoOFFCommand	_205	_206	4	52504	
1-13	Forced Thermostat OFF (status)	12635417	ForcedThermoOFFStatus	_205	_206	3	52505	
1-13	Energy Efficiency Command (setting)	16829722	EnergyEfficiencyCommand	_205	_206	4	52506	
1-13	Energy Efficiency Command (status)	12635419	EnergyEfficiencyStatus	_205	_206	3	52507	
1-13	Thermostat Status	12635420	ThermoStatus	_205	_206	3	52508	

1-13	Compressor Status	12635421	CompressorStatus	_205	_206	3	52509	
1-13	Indoor Fan Status	12635422	IndoorFanStatus	_205	_206	3	52510	
1-13	Heater Operation Status	12635423	HeaterStatus	_205	_206	3	52511	
1-13	Ventilation Mode (setting)	58772768	VentilationModeCommand	_205	_206	14	52512	
1-13	Ventilation Mode (status)	54578465	VentilationModeStatus	_205	_206	13	52513	
1-13	Ventilation Amount (setting)	58772770	VentilationAmountCommand	_205	_206	14	52514	
1-13	Ventilation Amount (status)	54578467	VentilationAmountStatus	_205	_206	13	52515	
1-14	ON/OFF (setting)	16829953	StartStopCommand	_206	_207	4	52737	set
1-14	ON/OFF (status)	12635650	StartStopStatus	_206	_207	3	52738	Fb
1-14	Alarm Sign	12635651	Alarm	_206	_207	3	52739	
1-14	Error Code	54578692	MalfunctionCode	_206	_207	13	52740	
1-14	Operation Mode (setting)	58772997	AirConModeCommand	_206	_207	14	52741	set
1-14	Operation Mode (status)	54578694	AirConModeStatus	_206	_207	13	52742	Fb
1-14	Airflow Rate (setting)	58772999	AirFlowRateCommand	_206	_207	14	52743	set
1-14	Airflow Rate (status)	54578696	AirFlowRateStatus	_206	_207	13	52744	Fb
1-14	Measured Room Temperature	52745	RoomTemp	_206	_207	0	52745	
1-14	Set Room Temperature	8441354	TempAdjust	_206	_207	2	52746	set
1-14	Filer Limit Sign	12635659	FilterSign	_206	_207	3	52747	
1-14	Filter Limit Sign Reset	21024268	FilterSignReset	_206	_207	5	52748	
1-14	Remote Control Operation (ON/OFF)	21024269	RemoteControlStart	_206	_207	5	52749	
1-14	Remote Control Operation (Operation Mode)	21024270	RemoteControlAirConModeSet	_206	_207	5	52750	
1-14	Remote Control Operation (Set Temperature)	21024272	RemoteControlTempAdjust	_206	_207	5	52752	
1-14	Remote Control Operation (Sub Group Address Control Reject)	21024273	CL_Rejection	_206	_207	5	52753	
1-14	Elec Total Power	96521747	ElecTotalPower	_206	_207	23	52755	
1-14	Communication Status	12635668	CommunicationStatus	_206	_207	3	52756	
1-14	System Forced OFF	21024277	SystemForcedOff	_206	_207	5	52757	
1-14	Air Direction (setting)	8441366	AirDirectionCommand	_206	_207	2	52758	
1-14	Air Direction (status)	52759	AirDirectionStatus	_206	_207	0	52759	
1-14	Forced Thermostat OFF (setting)	16829976	ForcedThermoOFFCommand	_206	_207	4	52760	
1-14	Forced Thermostat OFF (status)	12635673	ForcedThermoOFFStatus	_206	_207	3	52761	
1-14	Energy Efficiency Command (setting)	16829978	EnergyEfficiencyCommand	_206	_207	4	52762	
1-14	Energy Efficiency Command (status)	12635675	EnergyEfficiencyStatus	_206	_207	3	52763	
1-14	Thermostat Status	12635676	ThermoStatus	_206	_207	3	52764	
1-14	Compressor Status	12635677	CompressorStatus	_206	_207	3	52765	
1-14	Indoor Fan Status	12635678	IndoorFanStatus	_206	_207	3	52766	
1-14	Heater Operation Status	12635679	HeaterStatus	_206	_207	3	52767	
1-14	Ventilation Mode (setting)	58773024	VentilationModeCommand	_206	_207	14	52768	
1-14	Ventilation Mode (status)	54578721	VentilationModeStatus	_206	_207	13	52769	
1-14	Ventilation Amount (setting)	58773026	VentilationAmountCommand	_206	_207	14	52770	
1-14	Ventilation Amount (status)	54578723	VentilationAmountStatus	_206	_207	13	52771	
1-15	ON/OFF (setting)	16830209	StartStopCommand	_207	_208	4	52993	set
1-15	ON/OFF (status)	12635906	StartStopStatus	_207	_208	3	52994	Fb
1-15	Alarm Sign	12635907	Alarm	_207	_208	3	52995	
1-15	Error Code	54578948	MalfunctionCode	_207	_208	13	52996	
1-15	Operation Mode (setting)	58773253	AirConModeCommand	_207	_208	14	52997	set
1-15	Operation Mode (status)	54578950	AirConModeStatus	_207	_208	13	52998	Fb
1-15	Airflow Rate (setting)	58773255	AirFlowRateCommand	_207	_208	14	52999	set
1-15	Airflow Rate (status)	54578952	AirFlowRateStatus	_207	_208	13	53000	Fb
1-15	Measured Room Temperature	53001	RoomTemp	_207	_208	0	53001	
1-15	Set Room Temperature	8441610	TempAdjust	_207	_208	2	53002	set
1-15	Filer Limit Sign	12635915	FilterSign	_207	_208	3	53003	
1-15	Filter Limit Sign Reset	21024524	FilterSignReset	_207	_208	5	53004	
1-15	Remote Control Operation (ON/OFF)	21024525	RemoteControlStart	_207	_208	5	53005	
1-15	Remote Control Operation (Operation Mode)	21024526	RemoteControlAirConModeSet	_207	_208	5	53006	
1-15	Remote Control Operation (Set Temperature)	21024528	RemoteControlTempAdjust	_207	_208	5	53008	
1-15	Remote Control Operation (Sub Group Address Control Reject)	21024529	CL_Rejection	_207	_208	5	53009	
1-15	Elec Total Power	96522003	ElecTotalPower	_207	_208	23	53011	
1-15	Communication Status	12635924	CommunicationStatus	_207	_208	3	53012	
1-15	System Forced OFF	21024533	SystemForcedOff	_207	_208	5	53013	
1-15	Air Direction (setting)	8441622	AirDirectionCommand	_207	_208	2	53014	
1-15	Air Direction (status)	53015	AirDirectionStatus	_207	_208	0	53015	
1-15	Forced Thermostat OFF (setting)	16830232	ForcedThermoOFFCommand	_207	_208	4	53016	
1-15	Forced Thermostat OFF (status)	12635929	ForcedThermoOFFStatus	_207	_208	3	53017	
1-15	Energy Efficiency Command (setting)	16830234	EnergyEfficiencyCommand	_207	_208	4	53018	
1-15	Energy Efficiency Command (status)	12635931	EnergyEfficiencyStatus	_207	_208	3	53019	
1-15	Thermostat Status	12635932	ThermoStatus	_207	_208	3	53020	
1-15	Compressor Status	12635933	CompressorStatus	_207	_208	3	53021	
1-15	Indoor Fan Status	12635934	IndoorFanStatus	_207	_208	3	53022	
1-15	Heater Operation Status	12635935	HeaterStatus	_207	_208	3	53023	

1-15	Ventilation Mode (setting)	58773280	VentilationModeCommand	_207	_208	14	53024	
1-15	Ventilation Mode (status)	54578977	VentilationModeStatus	_207	_208	13	53025	
1-15	Ventilation Amount (setting)	58773282	VentilationAmountCommand	_207	_208	14	53026	
1-15	Ventilation Amount (status)	54578979	VentilationAmountStatus	_207	_208	13	53027	
2-00	ON/OFF (setting)	16830465	StartStopCommand	_208	_209	4	53249	set
2-00	ON/OFF (status)	12636162	StartStopStatus	_208	_209	3	53250	Fb
2-00	Alarm Sign	12636163	Alarm	_208	_209	3	53251	
2-00	Error Code	54579204	MalfunctionCode	_208	_209	13	53252	
2-00	Operation Mode (setting)	58773509	AirConModeCommand	_208	_209	14	53253	set
2-00	Operation Mode (status)	54579206	AirConModeStatus	_208	_209	13	53254	Fb
2-00	Airflow Rate (setting)	58773511	AirFlowRateCommand	_208	_209	14	53255	set
2-00	Airflow Rate (status)	54579208	AirFlowRateStatus	_208	_209	13	53256	Fb
2-00	Measured Room Temperature	53257	RoomTemp	_208	_209	0	53257	
2-00	Set Room Temperature	8441866	TempAdjust	_208	_209	2	53258	set
2-00	Filer Limit Sign	12636171	FilterSign	_208	_209	3	53259	
2-00	Filter Limit Sign Reset	21024780	FilterSignReset	_208	_209	5	53260	
2-00	Remote Control Operation (ON/OFF)	21024781	RemoteControlStart	_208	_209	5	53261	
2-00	Remote Control Operation (Operation Mode)	21024782	RemoteControlAirConModeSet	_208	_209	5	53262	
2-00	Remote Control Operation (Set Temperature)	21024784	RemoteControlTempAdjust	_208	_209	5	53264	
2-00	Remote Control Operation (Sub Group Address Control Reject)	21024785	CL_Rejection	_208	_209	5	53265	
2-00	Elec Total Power	96522259	ElecTotalPower	_208	_209	23	53267	
2-00	Communication Status	12636180	CommunicationStatus	_208	_209	3	53268	
2-00	System Forced OFF	21024789	SystemForcedOff	_208	_209	5	53269	
2-00	Air Direction (setting)	8441878	AirDirectionCommand	_208	_209	2	53270	
2-00	Air Direction (status)	53271	AirDirectionStatus	_208	_209	0	53271	
2-00	Forced Thermostat OFF (setting)	16830488	ForcedThermoOFFCommand	_208	_209	4	53272	
2-00	Forced Thermostat OFF (status)	12636185	ForcedThermoOFFStatus	_208	_209	3	53273	
2-00	Energy Efficiency Command (setting)	16830490	EnergyEfficiencyCommand	_208	_209	4	53274	
2-00	Energy Efficiency Command (status)	12636187	EnergyEfficiencyStatus	_208	_209	3	53275	
2-00	Thermostat Status	12636188	ThermoStatus	_208	_209	3	53276	
2-00	Compressor Status	12636189	CompressorStatus	_208	_209	3	53277	
2-00	Indoor Fan Status	12636190	IndoorFanStatus	_208	_209	3	53278	
2-00	Heater Operation Status	12636191	HeaterStatus	_208	_209	3	53279	
2-00	Ventilation Mode (setting)	58773536	VentilationModeCommand	_208	_209	14	53280	
2-00	Ventilation Mode (status)	54579233	VentilationModeStatus	_208	_209	13	53281	
2-00	Ventilation Amount (setting)	58773538	VentilationAmountCommand	_208	_209	14	53282	
2-00	Ventilation Amount (status)	54579235	VentilationAmountStatus	_208	_209	13	53283	
2-01	ON/OFF (setting)	16830721	StartStopCommand	_209	_210	4	53505	set
2-01	ON/OFF (status)	12636418	StartStopStatus	_209	_210	3	53506	Fb
2-01	Alarm Sign	12636419	Alarm	_209	_210	3	53507	
2-01	Error Code	54579460	MalfunctionCode	_209	_210	13	53508	
2-01	Operation Mode (setting)	58773765	AirConModeCommand	_209	_210	14	53509	set
2-01	Operation Mode (status)	54579462	AirConModeStatus	_209	_210	13	53510	Fb
2-01	Airflow Rate (setting)	58773767	AirFlowRateCommand	_209	_210	14	53511	set
2-01	Airflow Rate (status)	54579464	AirFlowRateStatus	_209	_210	13	53512	Fb
2-01	Measured Room Temperature	53513	RoomTemp	_209	_210	0	53513	
2-01	Set Room Temperature	8442122	TempAdjust	_209	_210	2	53514	set
2-01	Filer Limit Sign	12636427	FilterSign	_209	_210	3	53515	
2-01	Filter Limit Sign Reset	21025036	FilterSignReset	_209	_210	5	53516	
2-01	Remote Control Operation (ON/OFF)	21025037	RemoteControlStart	_209	_210	5	53517	
2-01	Remote Control Operation (Operation Mode)	21025038	RemoteControlAirConModeSet	_209	_210	5	53518	
2-01	Remote Control Operation (Set Temperature)	21025040	RemoteControlTempAdjust	_209	_210	5	53520	
2-01	Remote Control Operation (Sub Group Address Control Reject)	21025041	CL_Rejection	_209	_210	5	53521	
2-01	Elec Total Power	96522515	ElecTotalPower	_209	_210	23	53523	
2-01	Communication Status	12636436	CommunicationStatus	_209	_210	3	53524	
2-01	System Forced OFF	21025045	SystemForcedOff	_209	_210	5	53525	
2-01	Air Direction (setting)	8442134	AirDirectionCommand	_209	_210	2	53526	
2-01	Air Direction (status)	53527	AirDirectionStatus	_209	_210	0	53527	
2-01	Forced Thermostat OFF (setting)	16830744	ForcedThermoOFFCommand	_209	_210	4	53528	
2-01	Forced Thermostat OFF (status)	12636441	ForcedThermoOFFStatus	_209	_210	3	53529	
2-01	Energy Efficiency Command (setting)	16830746	EnergyEfficiencyCommand	_209	_210	4	53530	
2-01	Energy Efficiency Command (status)	12636443	EnergyEfficiencyStatus	_209	_210	3	53531	
2-01	Thermostat Status	12636444	ThermoStatus	_209	_210	3	53532	
2-01	Compressor Status	12636445	CompressorStatus	_209	_210	3	53533	
2-01	Indoor Fan Status	12636446	IndoorFanStatus	_209	_210	3	53534	
2-01	Heater Operation Status	12636447	HeaterStatus	_209	_210	3	53535	
2-01	Ventilation Mode (setting)	58773792	VentilationModeCommand	_209	_210	14	53536	
2-01	Ventilation Mode (status)	54579489	VentilationModeStatus	_209	_210	13	53537	
2-01	Ventilation Amount (setting)	58773794	VentilationAmountCommand	_209	_210	14	53538	

2-01	Ventilation Amount (status)	54579491	VentilationAmountStatus	_209	_210	13	53539	
2-02	ON/OFF (setting)	16830977	StartStopCommand	_210	_211	4	53761	set
2-02	ON/OFF (status)	12636674	StartStopStatus	_210	_211	3	53762	Fb
2-02	Alarm Sign	12636675	Alarm	_210	_211	3	53763	
2-02	Error Code	54579716	MalfunctionCode	_210	_211	13	53764	
2-02	Operation Mode (setting)	58774021	AirConModeCommand	_210	_211	14	53765	set
2-02	Operation Mode (status)	54579718	AirConModeStatus	_210	_211	13	53766	Fb
2-02	Airflow Rate (setting)	58774023	AirFlowRateCommand	_210	_211	14	53767	set
2-02	Airflow Rate (status)	54579720	AirFlowRateStatus	_210	_211	13	53768	Fb
2-02	Measured Room Temperature	53769	RoomTemp	_210	_211	0	53769	
2-02	Set Room Temperature	8442378	TempAdjust	_210	_211	2	53770	set
2-02	Filer Limit Sign	12636683	FilterSign	_210	_211	3	53771	
2-02	Filter Limit Sign Reset	21025292	FilterSignReset	_210	_211	5	53772	
2-02	Remote Control Operation (ON/OFF)	21025293	RemoteControlStart	_210	_211	5	53773	
2-02	Remote Control Operation (Operation Mode)	21025294	RemoteControlAirConModeSet	_210	_211	5	53774	
2-02	Remote Control Operation (Set Temperature)	21025296	RemoteControlTempAdjust	_210	_211	5	53776	
2-02	Remote Control Operation (Sub Group Address Control Reject)	21025297	CL_Rejection	_210	_211	5	53777	
2-02	Elec Total Power	96522771	ElecTotalPower	_210	_211	23	53779	
2-02	Communication Status	12636692	CommunicationStatus	_210	_211	3	53780	
2-02	System Forced OFF	21025301	SystemForcedOff	_210	_211	5	53781	
2-02	Air Direction (setting)	8442390	AirDirectionCommand	_210	_211	2	53782	
2-02	Air Direction (status)	53783	AirDirectionStatus	_210	_211	0	53783	
2-02	Forced Thermostat OFF (setting)	16831000	ForcedThermoOFFCommand	_210	_211	4	53784	
2-02	Forced Thermostat OFF (status)	12636697	ForcedThermoOFFStatus	_210	_211	3	53785	
2-02	Energy Efficiency Command (setting)	16831002	EnergyEfficiencyCommand	_210	_211	4	53786	
2-02	Energy Efficiency Command (status)	12636699	EnergyEfficiencyStatus	_210	_211	3	53787	
2-02	Thermostat Status	12636700	ThermoStatus	_210	_211	3	53788	
2-02	Compressor Status	12636701	CompressorStatus	_210	_211	3	53789	
2-02	Indoor Fan Status	12636702	IndoorFanStatus	_210	_211	3	53790	
2-02	Heater Operation Status	12636703	HeaterStatus	_210	_211	3	53791	
2-02	Ventilation Mode (setting)	58774048	VentilationModeCommand	_210	_211	14	53792	
2-02	Ventilation Mode (status)	54579745	VentilationModeStatus	_210	_211	13	53793	
2-02	Ventilation Amount (setting)	58774050	VentilationAmountCommand	_210	_211	14	53794	
2-02	Ventilation Amount (status)	54579747	VentilationAmountStatus	_210	_211	13	53795	
2-03	ON/OFF (setting)	16831233	StartStopCommand	_211	_212	4	54017	set
2-03	ON/OFF (status)	12636930	StartStopStatus	_211	_212	3	54018	Fb
2-03	Alarm Sign	12636931	Alarm	_211	_212	3	54019	
2-03	Error Code	54579972	MalfunctionCode	_211	_212	13	54020	
2-03	Operation Mode (setting)	58774277	AirConModeCommand	_211	_212	14	54021	set
2-03	Operation Mode (status)	54579974	AirConModeStatus	_211	_212	13	54022	Fb
2-03	Airflow Rate (setting)	58774279	AirFlowRateCommand	_211	_212	14	54023	set
2-03	Airflow Rate (status)	54579976	AirFlowRateStatus	_211	_212	13	54024	Fb
2-03	Measured Room Temperature	54025	RoomTemp	_211	_212	0	54025	
2-03	Set Room Temperature	8442634	TempAdjust	_211	_212	2	54026	set
2-03	Filer Limit Sign	12636939	FilterSign	_211	_212	3	54027	
2-03	Filter Limit Sign Reset	21025548	FilterSignReset	_211	_212	5	54028	
2-03	Remote Control Operation (ON/OFF)	21025549	RemoteControlStart	_211	_212	5	54029	
2-03	Remote Control Operation (Operation Mode)	21025550	RemoteControlAirConModeSet	_211	_212	5	54030	
2-03	Remote Control Operation (Set Temperature)	21025552	RemoteControlTempAdjust	_211	_212	5	54032	
2-03	Remote Control Operation (Sub Group Address Control Reject)	21025553	CL_Rejection	_211	_212	5	54033	
2-03	Elec Total Power	96523027	ElecTotalPower	_211	_212	23	54035	
2-03	Communication Status	12636948	CommunicationStatus	_211	_212	3	54036	
2-03	System Forced OFF	21025557	SystemForcedOff	_211	_212	5	54037	
2-03	Air Direction (setting)	8442646	AirDirectionCommand	_211	_212	2	54038	
2-03	Air Direction (status)	54039	AirDirectionStatus	_211	_212	0	54039	
2-03	Forced Thermostat OFF (setting)	16831256	ForcedThermoOFFCommand	_211	_212	4	54040	
2-03	Forced Thermostat OFF (status)	12636953	ForcedThermoOFFStatus	_211	_212	3	54041	
2-03	Energy Efficiency Command (setting)	16831258	EnergyEfficiencyCommand	_211	_212	4	54042	
2-03	Energy Efficiency Command (status)	12636955	EnergyEfficiencyStatus	_211	_212	3	54043	
2-03	Thermostat Status	12636956	ThermoStatus	_211	_212	3	54044	
2-03	Compressor Status	12636957	CompressorStatus	_211	_212	3	54045	
2-03	Indoor Fan Status	12636958	IndoorFanStatus	_211	_212	3	54046	
2-03	Heater Operation Status	12636959	HeaterStatus	_211	_212	3	54047	
2-03	Ventilation Mode (setting)	58774304	VentilationModeCommand	_211	_212	14	54048	
2-03	Ventilation Mode (status)	54580001	VentilationModeStatus	_211	_212	13	54049	
2-03	Ventilation Amount (setting)	58774306	VentilationAmountCommand	_211	_212	14	54050	
2-03	Ventilation Amount (status)	54580003	VentilationAmountStatus	_211	_212	13	54051	
2-04	ON/OFF (setting)	16831489	StartStopCommand	_212	_213	4	54273	set
2-04	ON/OFF (status)	12637186	StartStopStatus	_212	_213	3	54274	Fb

2-04	Alarm Sign	12637187	Alarm	_212	_213	3	54275	
2-04	Error Code	54580228	MalfunctionCode	_212	_213	13	54276	
2-04	Operation Mode (setting)	58774533	AirConModeCommand	_212	_213	14	54277	set
2-04	Operation Mode (status)	54580230	AirConModeStatus	_212	_213	13	54278	Fb
2-04	Airflow Rate (setting)	58774535	AirFlowRateCommand	_212	_213	14	54279	set
2-04	Airflow Rate (status)	54580232	AirFlowRateStatus	_212	_213	13	54280	Fb
2-04	Measured Room Temperature	54281	RoomTemp	_212	_213	0	54281	
2-04	Set Room Temperature	8442890	TempAdjust	_212	_213	2	54282	set
2-04	Filer Limit Sign	12637195	FilterSign	_212	_213	3	54283	
2-04	Filter Limit Sign Reset	21025804	FilterSignReset	_212	_213	5	54284	
2-04	Remote Control Operation (ON/OFF)	21025805	RemoteControlStart	_212	_213	5	54285	
2-04	Remote Control Operation (Operation Mode)	21025806	RemoteControlAirConModeSet	_212	_213	5	54286	
2-04	Remote Control Operation (Set Temperature)	21025808	RemoteControlTempAdjust	_212	_213	5	54288	
2-04	Remote Control Operation (Sub Group Address Control Rejecti	21025809	CL_Rejection	_212	_213	5	54289	
2-04	Elec Total Power	96523283	ElecTotalPower	_212	_213	23	54291	
2-04	Communication Status	12637204	CommunicationStatus	_212	_213	3	54292	
2-04	System Forced OFF	21025813	SystemForcedOff	_212	_213	5	54293	
2-04	Air Direction (setting)	8442902	AirDirectionCommand	_212	_213	2	54294	
2-04	Air Direction (status)	54295	AirDirectionStatus	_212	_213	0	54295	
2-04	Forced Thermostat OFF (setting)	16831512	ForcedThermoOFFCommand	_212	_213	4	54296	
2-04	Forced Thermostat OFF (status)	12637209	ForcedThermoOFFStatus	_212	_213	3	54297	
2-04	Energy Efficiency Command (setting)	16831514	EnergyEfficiencyCommand	_212	_213	4	54298	
2-04	Energy Efficiency Command (status)	12637211	EnergyEfficiencyStatus	_212	_213	3	54299	
2-04	Thermostat Status	12637212	ThermoStatus	_212	_213	3	54300	
2-04	Compressor Status	12637213	CompressorStatus	_212	_213	3	54301	
2-04	Indoor Fan Status	12637214	IndoorFanStatus	_212	_213	3	54302	
2-04	Heater Operation Status	12637215	HeaterStatus	_212	_213	3	54303	
2-04	Ventilation Mode (setting)	58774560	VentilationModeCommand	_212	_213	14	54304	
2-04	Ventilation Mode (status)	54580257	VentilationModeStatus	_212	_213	13	54305	
2-04	Ventilation Amount (setting)	58774562	VentilationAmountCommand	_212	_213	14	54306	
2-04	Ventilation Amount (status)	54580259	VentilationAmountStatus	_212	_213	13	54307	
2-05	ON/OFF (setting)	16831745	StartStopCommand	_213	_214	4	54529	set
2-05	ON/OFF (status)	12637442	StartStopStatus	_213	_214	3	54530	Fb
2-05	Alarm Sign	12637443	Alarm	_213	_214	3	54531	
2-05	Error Code	54580484	MalfunctionCode	_213	_214	13	54532	
2-05	Operation Mode (setting)	58774789	AirConModeCommand	_213	_214	14	54533	set
2-05	Operation Mode (status)	54580486	AirConModeStatus	_213	_214	13	54534	Fb
2-05	Airflow Rate (setting)	58774791	AirFlowRateCommand	_213	_214	14	54535	set
2-05	Airflow Rate (status)	54580488	AirFlowRateStatus	_213	_214	13	54536	Fb
2-05	Measured Room Temperature	54537	RoomTemp	_213	_214	0	54537	
2-05	Set Room Temperature	8443146	TempAdjust	_213	_214	2	54538	set
2-05	Filer Limit Sign	12637451	FilterSign	_213	_214	3	54539	
2-05	Filter Limit Sign Reset	21026060	FilterSignReset	_213	_214	5	54540	
2-05	Remote Control Operation (ON/OFF)	21026061	RemoteControlStart	_213	_214	5	54541	
2-05	Remote Control Operation (Operation Mode)	21026062	RemoteControlAirConModeSet	_213	_214	5	54542	
2-05	Remote Control Operation (Set Temperature)	21026064	RemoteControlTempAdjust	_213	_214	5	54544	
2-05	Remote Control Operation (Sub Group Address Control Rejecti	21026065	CL_Rejection	_213	_214	5	54545	
2-05	Elec Total Power	96523539	ElecTotalPower	_213	_214	23	54547	
2-05	Communication Status	12637460	CommunicationStatus	_213	_214	3	54548	
2-05	System Forced OFF	21026069	SystemForcedOff	_213	_214	5	54549	
2-05	Air Direction (setting)	8443158	AirDirectionCommand	_213	_214	2	54550	
2-05	Air Direction (status)	54551	AirDirectionStatus	_213	_214	0	54551	
2-05	Forced Thermostat OFF (setting)	16831768	ForcedThermoOFFCommand	_213	_214	4	54552	
2-05	Forced Thermostat OFF (status)	12637465	ForcedThermoOFFStatus	_213	_214	3	54553	
2-05	Energy Efficiency Command (setting)	16831770	EnergyEfficiencyCommand	_213	_214	4	54554	
2-05	Energy Efficiency Command (status)	12637467	EnergyEfficiencyStatus	_213	_214	3	54555	
2-05	Thermostat Status	12637468	ThermoStatus	_213	_214	3	54556	
2-05	Compressor Status	12637469	CompressorStatus	_213	_214	3	54557	
2-05	Indoor Fan Status	12637470	IndoorFanStatus	_213	_214	3	54558	
2-05	Heater Operation Status	12637471	HeaterStatus	_213	_214	3	54559	
2-05	Ventilation Mode (setting)	58774816	VentilationModeCommand	_213	_214	14	54560	
2-05	Ventilation Mode (status)	54580513	VentilationModeStatus	_213	_214	13	54561	
2-05	Ventilation Amount (setting)	58774818	VentilationAmountCommand	_213	_214	14	54562	
2-05	Ventilation Amount (status)	54580515	VentilationAmountStatus	_213	_214	13	54563	
2-06	ON/OFF (setting)	16832001	StartStopCommand	_214	_215	4	54785	set
2-06	ON/OFF (status)	12637698	StartStopStatus	_214	_215	3	54786	Fb
2-06	Alarm Sign	12637699	Alarm	_214	_215	3	54787	
2-06	Error Code	54580740	MalfunctionCode	_214	_215	13	54788	
2-06	Operation Mode (setting)	58775045	AirConModeCommand	_214	_215	14	54789	set

2-06	Operation Mode (status)	54580742	AirConModeStatus	_214	_215	13	54790	Fb
2-06	Airflow Rate (setting)	58775047	AirFlowRateCommand	_214	_215	14	54791	set
2-06	Airflow Rate (status)	54580744	AirFlowRateStatus	_214	_215	13	54792	Fb
2-06	Measured Room Temperature	54793	RoomTemp	_214	_215	0	54793	
2-06	Set Room Temperature	8443402	TempAdjust	_214	_215	2	54794	set
2-06	Filer Limit Sign	12637707	FilterSign	_214	_215	3	54795	
2-06	Filter Limit Sign Reset	21026316	FilterSignReset	_214	_215	5	54796	
2-06	Remote Control Operation (ON/OFF)	21026317	RemoteControlStart	_214	_215	5	54797	
2-06	Remote Control Operation (Operation Mode)	21026318	RemoteControlAirConModeSet	_214	_215	5	54798	
2-06	Remote Control Operation (Set Temperature)	21026320	RemoteControlTempAdjust	_214	_215	5	54800	
2-06	Remote Control Operation (Sub Group Address Control Rejecti	21026321	CL_Rejection	_214	_215	5	54801	
2-06	Elec Total Power	96523795	ElecTotalPower	_214	_215	23	54803	
2-06	Communication Status	12637716	CommunicationStatus	_214	_215	3	54804	
2-06	System Forced OFF	21026325	SystemForcedOff	_214	_215	5	54805	
2-06	Air Direction (setting)	8443414	AirDirectionCommand	_214	_215	2	54806	
2-06	Air Direction (status)	54807	AirDirectionStatus	_214	_215	0	54807	
2-06	Forced Thermostat OFF (setting)	16832024	ForcedThermoOFFCommand	_214	_215	4	54808	
2-06	Forced Thermostat OFF (status)	12637721	ForcedThermoOFFStatus	_214	_215	3	54809	
2-06	Energy Efficiency Command (setting)	16832026	EnergyEfficiencyCommand	_214	_215	4	54810	
2-06	Energy Efficiency Command (status)	12637723	EnergyEfficiencyStatus	_214	_215	3	54811	
2-06	Thermostat Status	12637724	ThermoStatus	_214	_215	3	54812	
2-06	Compressor Status	12637725	CompressorStatus	_214	_215	3	54813	
2-06	Indoor Fan Status	12637726	IndoorFanStatus	_214	_215	3	54814	
2-06	Heater Operation Status	12637727	HeaterStatus	_214	_215	3	54815	
2-06	Ventilation Mode (setting)	58775072	VentilationModeCommand	_214	_215	14	54816	
2-06	Ventilation Mode (status)	54580769	VentilationModeStatus	_214	_215	13	54817	
2-06	Ventilation Amount (setting)	58775074	VentilationAmountCommand	_214	_215	14	54818	
2-06	Ventilation Amount (status)	54580771	VentilationAmountStatus	_214	_215	13	54819	
2-07	ON/OFF (setting)	16832257	StartStopCommand	_215	_216	4	55041	set
2-07	ON/OFF (status)	12637954	StartStopStatus	_215	_216	3	55042	Fb
2-07	Alarm Sign	12637955	Alarm	_215	_216	3	55043	
2-07	Error Code	54580996	MalfunctionCode	_215	_216	13	55044	
2-07	Operation Mode (setting)	58775301	AirConModeCommand	_215	_216	14	55045	set
2-07	Operation Mode (status)	54580998	AirConModeStatus	_215	_216	13	55046	Fb
2-07	Airflow Rate (setting)	58775303	AirFlowRateCommand	_215	_216	14	55047	set
2-07	Airflow Rate (status)	54581000	AirFlowRateStatus	_215	_216	13	55048	Fb
2-07	Measured Room Temperature	55049	RoomTemp	_215	_216	0	55049	
2-07	Set Room Temperature	8443658	TempAdjust	_215	_216	2	55050	set
2-07	Filer Limit Sign	12637963	FilterSign	_215	_216	3	55051	
2-07	Filter Limit Sign Reset	21026572	FilterSignReset	_215	_216	5	55052	
2-07	Remote Control Operation (ON/OFF)	21026573	RemoteControlStart	_215	_216	5	55053	
2-07	Remote Control Operation (Operation Mode)	21026574	RemoteControlAirConModeSet	_215	_216	5	55054	
2-07	Remote Control Operation (Set Temperature)	21026576	RemoteControlTempAdjust	_215	_216	5	55056	
2-07	Remote Control Operation (Sub Group Address Control Rejecti	21026577	CL_Rejection	_215	_216	5	55057	
2-07	Elec Total Power	96524051	ElecTotalPower	_215	_216	23	55059	
2-07	Communication Status	12637972	CommunicationStatus	_215	_216	3	55060	
2-07	System Forced OFF	21026581	SystemForcedOff	_215	_216	5	55061	
2-07	Air Direction (setting)	8443670	AirDirectionCommand	_215	_216	2	55062	
2-07	Air Direction (status)	55063	AirDirectionStatus	_215	_216	0	55063	
2-07	Forced Thermostat OFF (setting)	16832280	ForcedThermoOFFCommand	_215	_216	4	55064	
2-07	Forced Thermostat OFF (status)	12637977	ForcedThermoOFFStatus	_215	_216	3	55065	
2-07	Energy Efficiency Command (setting)	16832282	EnergyEfficiencyCommand	_215	_216	4	55066	
2-07	Energy Efficiency Command (status)	12637979	EnergyEfficiencyStatus	_215	_216	3	55067	
2-07	Thermostat Status	12637980	ThermoStatus	_215	_216	3	55068	
2-07	Compressor Status	12637981	CompressorStatus	_215	_216	3	55069	
2-07	Indoor Fan Status	12637982	IndoorFanStatus	_215	_216	3	55070	
2-07	Heater Operation Status	12637983	HeaterStatus	_215	_216	3	55071	
2-07	Ventilation Mode (setting)	58775328	VentilationModeCommand	_215	_216	14	55072	
2-07	Ventilation Mode (status)	54581025	VentilationModeStatus	_215	_216	13	55073	
2-07	Ventilation Amount (setting)	58775330	VentilationAmountCommand	_215	_216	14	55074	
2-07	Ventilation Amount (status)	54581027	VentilationAmountStatus	_215	_216	13	55075	
2-08	ON/OFF (setting)	16832513	StartStopCommand	_216	_217	4	55297	set
2-08	ON/OFF (status)	12638210	StartStopStatus	_216	_217	3	55298	Fb
2-08	Alarm Sign	12638211	Alarm	_216	_217	3	55299	
2-08	Error Code	54581252	MalfunctionCode	_216	_217	13	55300	
2-08	Operation Mode (setting)	58775557	AirConModeCommand	_216	_217	14	55301	set
2-08	Operation Mode (status)	54581254	AirConModeStatus	_216	_217	13	55302	Fb
2-08	Airflow Rate (setting)	58775559	AirFlowRateCommand	_216	_217	14	55303	set
2-08	Airflow Rate (status)	54581256	AirFlowRateStatus	_216	_217	13	55304	Fb

2-08	Measured Room Temperature	55305	RoomTemp	_216	_217	0	55305	
2-08	Set Room Temperature	8443914	TempAdjust	_216	_217	2	55306	set
2-08	Filer Limit Sign	12638219	FilterSign	_216	_217	3	55307	
2-08	Filter Limit Sign Reset	21026828	FilterSignReset	_216	_217	5	55308	
2-08	Remote Control Operation (ON/OFF)	21026829	RemoteControlStart	_216	_217	5	55309	
2-08	Remote Control Operation (Operation Mode)	21026830	RemoteControlAirConModeSet	_216	_217	5	55310	
2-08	Remote Control Operation (Set Temperature)	21026832	RemoteControlTempAdjust	_216	_217	5	55312	
2-08	Remote Control Operation (Sub Group Address Control Rejecti	21026833	CL_Rejection	_216	_217	5	55313	
2-08	Elec Total Power	96524307	ElecTotalPower	_216	_217	23	55315	
2-08	Communication Status	12638228	CommunicationStatus	_216	_217	3	55316	
2-08	System Forced OFF	21026837	SystemForcedOff	_216	_217	5	55317	
2-08	Air Direction (setting)	8443926	AirDirectionCommand	_216	_217	2	55318	
2-08	Air Direction (status)	55319	AirDirectionStatus	_216	_217	0	55319	
2-08	Forced Thermostat OFF (setting)	16832536	ForcedThermoOFFCommand	_216	_217	4	55320	
2-08	Forced Thermostat OFF (status)	12638233	ForcedThermoOFFStatus	_216	_217	3	55321	
2-08	Energy Efficiency Command (setting)	16832538	EnergyEfficiencyCommand	_216	_217	4	55322	
2-08	Energy Efficiency Command (status)	12638235	EnergyEfficiencyStatus	_216	_217	3	55323	
2-08	Thermostat Status	12638236	ThermoStatus	_216	_217	3	55324	
2-08	Compressor Status	12638237	CompressorStatus	_216	_217	3	55325	
2-08	Indoor Fan Status	12638238	IndoorFanStatus	_216	_217	3	55326	
2-08	Heater Operation Status	12638239	HeaterStatus	_216	_217	3	55327	
2-08	Ventilation Mode (setting)	58775584	VentilationModeCommand	_216	_217	14	55328	
2-08	Ventilation Mode (status)	54581281	VentilationModeStatus	_216	_217	13	55329	
2-08	Ventilation Amount (setting)	58775586	VentilationAmountCommand	_216	_217	14	55330	
2-08	Ventilation Amount (status)	54581283	VentilationAmountStatus	_216	_217	13	55331	
2-09	ON/OFF (setting)	16832769	StartStopCommand	_217	_218	4	55553	set
2-09	ON/OFF (status)	12638466	StartStopStatus	_217	_218	3	55554	Fb
2-09	Alarm Sign	12638467	Alarm	_217	_218	3	55555	
2-09	Error Code	54581508	MalfunctionCode	_217	_218	13	55556	
2-09	Operation Mode (setting)	58775813	AirConModeCommand	_217	_218	14	55557	set
2-09	Operation Mode (status)	54581510	AirConModeStatus	_217	_218	13	55558	Fb
2-09	Airflow Rate (setting)	58775815	AirFlowRateCommand	_217	_218	14	55559	set
2-09	Airflow Rate (status)	54581512	AirFlowRateStatus	_217	_218	13	55560	Fb
2-09	Measured Room Temperature	55561	RoomTemp	_217	_218	0	55561	
2-09	Set Room Temperature	8444170	TempAdjust	_217	_218	2	55562	set
2-09	Filer Limit Sign	12638475	FilterSign	_217	_218	3	55563	
2-09	Filter Limit Sign Reset	21027084	FilterSignReset	_217	_218	5	55564	
2-09	Remote Control Operation (ON/OFF)	21027085	RemoteControlStart	_217	_218	5	55565	
2-09	Remote Control Operation (Operation Mode)	21027086	RemoteControlAirConModeSet	_217	_218	5	55566	
2-09	Remote Control Operation (Set Temperature)	21027088	RemoteControlTempAdjust	_217	_218	5	55568	
2-09	Remote Control Operation (Sub Group Address Control Rejecti	21027089	CL_Rejection	_217	_218	5	55569	
2-09	Elec Total Power	96524563	ElecTotalPower	_217	_218	23	55571	
2-09	Communication Status	12638484	CommunicationStatus	_217	_218	3	55572	
2-09	System Forced OFF	21027093	SystemForcedOff	_217	_218	5	55573	
2-09	Air Direction (setting)	8444182	AirDirectionCommand	_217	_218	2	55574	
2-09	Air Direction (status)	55575	AirDirectionStatus	_217	_218	0	55575	
2-09	Forced Thermostat OFF (setting)	16832792	ForcedThermoOFFCommand	_217	_218	4	55576	
2-09	Forced Thermostat OFF (status)	12638489	ForcedThermoOFFStatus	_217	_218	3	55577	
2-09	Energy Efficiency Command (setting)	16832794	EnergyEfficiencyCommand	_217	_218	4	55578	
2-09	Energy Efficiency Command (status)	12638491	EnergyEfficiencyStatus	_217	_218	3	55579	
2-09	Thermostat Status	12638492	ThermoStatus	_217	_218	3	55580	
2-09	Compressor Status	12638493	CompressorStatus	_217	_218	3	55581	
2-09	Indoor Fan Status	12638494	IndoorFanStatus	_217	_218	3	55582	
2-09	Heater Operation Status	12638495	HeaterStatus	_217	_218	3	55583	
2-09	Ventilation Mode (setting)	58775840	VentilationModeCommand	_217	_218	14	55584	
2-09	Ventilation Mode (status)	54581537	VentilationModeStatus	_217	_218	13	55585	
2-09	Ventilation Amount (setting)	58775842	VentilationAmountCommand	_217	_218	14	55586	
2-09	Ventilation Amount (status)	54581539	VentilationAmountStatus	_217	_218	13	55587	
2-10	ON/OFF (setting)	16833025	StartStopCommand	_218	_219	4	55809	set
2-10	ON/OFF (status)	12638722	StartStopStatus	_218	_219	3	55810	Fb
2-10	Alarm Sign	12638723	Alarm	_218	_219	3	55811	
2-10	Error Code	54581764	MalfunctionCode	_218	_219	13	55812	
2-10	Operation Mode (setting)	58776069	AirConModeCommand	_218	_219	14	55813	set
2-10	Operation Mode (status)	54581766	AirConModeStatus	_218	_219	13	55814	Fb
2-10	Airflow Rate (setting)	58776071	AirFlowRateCommand	_218	_219	14	55815	set
2-10	Airflow Rate (status)	54581768	AirFlowRateStatus	_218	_219	13	55816	Fb
2-10	Measured Room Temperature	55817	RoomTemp	_218	_219	0	55817	
2-10	Set Room Temperature	8444426	TempAdjust	_218	_219	2	55818	set
2-10	Filer Limit Sign	12638731	FilterSign	_218	_219	3	55819	

2-10	Filter Limit Sign Reset	21027340	FilterSignReset	_218	_219	5	55820	
2-10	Remote Control Operation (ON/OFF)	21027341	RemoteControlStart	_218	_219	5	55821	
2-10	Remote Control Operation (Operation Mode)	21027342	RemoteControlAirConModeSet	_218	_219	5	55822	
2-10	Remote Control Operation (Set Temperature)	21027344	RemoteControlTempAdjust	_218	_219	5	55824	
2-10	Remote Control Operation (Sub Group Address Control Rejecti	21027345	CL_Rejection	_218	_219	5	55825	
2-10	Elec Total Power	96524819	ElecTotalPower	_218	_219	23	55827	
2-10	Communication Status	12638740	CommunicationStatus	_218	_219	3	55828	
2-10	System Forced OFF	21027349	SystemForcedOff	_218	_219	5	55829	
2-10	Air Direction (setting)	8444438	AirDirectionCommand	_218	_219	2	55830	
2-10	Air Direction (status)	55831	AirDirectionStatus	_218	_219	0	55831	
2-10	Forced Thermostat OFF (setting)	16833048	ForcedThermoOFFCommand	_218	_219	4	55832	
2-10	Forced Thermostat OFF (status)	12638745	ForcedThermoOFFStatus	_218	_219	3	55833	
2-10	Energy Efficiency Command (setting)	16833050	EnergyEfficiencyCommand	_218	_219	4	55834	
2-10	Energy Efficiency Command (status)	12638747	EnergyEfficiencyStatus	_218	_219	3	55835	
2-10	Thermostat Status	12638748	ThermoStatus	_218	_219	3	55836	
2-10	Compressor Status	12638749	CompressorStatus	_218	_219	3	55837	
2-10	Indoor Fan Status	12638750	IndoorFanStatus	_218	_219	3	55838	
2-10	Heater Operation Status	12638751	HeaterStatus	_218	_219	3	55839	
2-10	Ventilation Mode (setting)	58776096	VentilationModeCommand	_218	_219	14	55840	
2-10	Ventilation Mode (status)	54581793	VentilationModeStatus	_218	_219	13	55841	
2-10	Ventilation Amount (setting)	58776098	VentilationAmountCommand	_218	_219	14	55842	
2-10	Ventilation Amount (status)	54581795	VentilationAmountStatus	_218	_219	13	55843	
2-11	ON/OFF (setting)	16833281	StartStopCommand	_219	_220	4	56065	set
2-11	ON/OFF (status)	12638978	StartStopStatus	_219	_220	3	56066	Fb
2-11	Alarm Sign	12638979	Alarm	_219	_220	3	56067	
2-11	Error Code	54582020	MalfunctionCode	_219	_220	13	56068	
2-11	Operation Mode (setting)	58776325	AirConModeCommand	_219	_220	14	56069	set
2-11	Operation Mode (status)	54582022	AirConModeStatus	_219	_220	13	56070	Fb
2-11	Airflow Rate (setting)	58776327	AirFlowRateCommand	_219	_220	14	56071	set
2-11	Airflow Rate (status)	54582024	AirFlowRateStatus	_219	_220	13	56072	Fb
2-11	Measured Room Temperature	56073	RoomTemp	_219	_220	0	56073	
2-11	Set Room Temperature	8444682	TempAdjust	_219	_220	2	56074	set
2-11	Filer Limit Sign	12638987	FilterSign	_219	_220	3	56075	
2-11	Filter Limit Sign Reset	21027596	FilterSignReset	_219	_220	5	56076	
2-11	Remote Control Operation (ON/OFF)	21027597	RemoteControlStart	_219	_220	5	56077	
2-11	Remote Control Operation (Operation Mode)	21027598	RemoteControlAirConModeSet	_219	_220	5	56078	
2-11	Remote Control Operation (Set Temperature)	21027600	RemoteControlTempAdjust	_219	_220	5	56080	
2-11	Remote Control Operation (Sub Group Address Control Rejecti	21027601	CL_Rejection	_219	_220	5	56081	
2-11	Elec Total Power	96525075	ElecTotalPower	_219	_220	23	56083	
2-11	Communication Status	12638996	CommunicationStatus	_219	_220	3	56084	
2-11	System Forced OFF	21027605	SystemForcedOff	_219	_220	5	56085	
2-11	Air Direction (setting)	8444694	AirDirectionCommand	_219	_220	2	56086	
2-11	Air Direction (status)	56087	AirDirectionStatus	_219	_220	0	56087	
2-11	Forced Thermostat OFF (setting)	16833304	ForcedThermoOFFCommand	_219	_220	4	56088	
2-11	Forced Thermostat OFF (status)	12639001	ForcedThermoOFFStatus	_219	_220	3	56089	
2-11	Energy Efficiency Command (setting)	16833306	EnergyEfficiencyCommand	_219	_220	4	56090	
2-11	Energy Efficiency Command (status)	12639003	EnergyEfficiencyStatus	_219	_220	3	56091	
2-11	Thermostat Status	12639004	ThermoStatus	_219	_220	3	56092	
2-11	Compressor Status	12639005	CompressorStatus	_219	_220	3	56093	
2-11	Indoor Fan Status	12639006	IndoorFanStatus	_219	_220	3	56094	
2-11	Heater Operation Status	12639007	HeaterStatus	_219	_220	3	56095	
2-11	Ventilation Mode (setting)	58776352	VentilationModeCommand	_219	_220	14	56096	
2-11	Ventilation Mode (status)	54582049	VentilationModeStatus	_219	_220	13	56097	
2-11	Ventilation Amount (setting)	58776354	VentilationAmountCommand	_219	_220	14	56098	
2-11	Ventilation Amount (status)	54582051	VentilationAmountStatus	_219	_220	13	56099	
2-12	ON/OFF (setting)	16833537	StartStopCommand	_220	_221	4	56321	set
2-12	ON/OFF (status)	12639234	StartStopStatus	_220	_221	3	56322	Fb
2-12	Alarm Sign	12639235	Alarm	_220	_221	3	56323	
2-12	Error Code	54582276	MalfunctionCode	_220	_221	13	56324	
2-12	Operation Mode (setting)	58776581	AirConModeCommand	_220	_221	14	56325	set
2-12	Operation Mode (status)	54582278	AirConModeStatus	_220	_221	13	56326	Fb
2-12	Airflow Rate (setting)	58776583	AirFlowRateCommand	_220	_221	14	56327	set
2-12	Airflow Rate (status)	54582280	AirFlowRateStatus	_220	_221	13	56328	Fb
2-12	Measured Room Temperature	56329	RoomTemp	_220	_221	0	56329	
2-12	Set Room Temperature	8444938	TempAdjust	_220	_221	2	56330	set
2-12	Filer Limit Sign	12639243	FilterSign	_220	_221	3	56331	
2-12	Filter Limit Sign Reset	21027852	FilterSignReset	_220	_221	5	56332	
2-12	Remote Control Operation (ON/OFF)	21027853	RemoteControlStart	_220	_221	5	56333	
2-12	Remote Control Operation (Operation Mode)	21027854	RemoteControlAirConModeSet	_220	_221	5	56334	

2-12	Remote Control Operation (Set Temperature)	21027856	RemoteControlTempAdjust	_220	_221	5	56336	
2-12	Remote Control Operation (Sub Group Address Control Rejecti	21027857	CL_Rejection	_220	_221	5	56337	
2-12	Elec Total Power	96525331	ElecTotalPower	_220	_221	23	56339	
2-12	Communication Status	12639252	CommunicationStatus	_220	_221	3	56340	
2-12	System Forced OFF	21027861	SystemForcedOff	_220	_221	5	56341	
2-12	Air Direction (setting)	8444950	AirDirectionCommand	_220	_221	2	56342	
2-12	Air Direction (status)	56343	AirDirectionStatus	_220	_221	0	56343	
2-12	Forced Thermostat OFF (setting)	16833560	ForcedThermoOFFCommand	_220	_221	4	56344	
2-12	Forced Thermostat OFF (status)	12639257	ForcedThermoOFFStatus	_220	_221	3	56345	
2-12	Energy Efficiency Command (setting)	16833562	EnergyEfficiencyCommand	_220	_221	4	56346	
2-12	Energy Efficiency Command (status)	12639259	EnergyEfficiencyStatus	_220	_221	3	56347	
2-12	Thermostat Status	12639260	ThermoStatus	_220	_221	3	56348	
2-12	Compressor Status	12639261	CompressorStatus	_220	_221	3	56349	
2-12	Indoor Fan Status	12639262	IndoorFanStatus	_220	_221	3	56350	
2-12	Heater Operation Status	12639263	HeaterStatus	_220	_221	3	56351	
2-12	Ventilation Mode (setting)	58776608	VentilationModeCommand	_220	_221	14	56352	
2-12	Ventilation Mode (status)	54582305	VentilationModeStatus	_220	_221	13	56353	
2-12	Ventilation Amount (setting)	58776610	VentilationAmountCommand	_220	_221	14	56354	
2-12	Ventilation Amount (status)	54582307	VentilationAmountStatus	_220	_221	13	56355	
2-13	ON/OFF (setting)	16833793	StartStopCommand	_221	_222	4	56577	set
2-13	ON/OFF (status)	12639490	StartStopStatus	_221	_222	3	56578	Fb
2-13	Alarm Sign	12639491	Alarm	_221	_222	3	56579	
2-13	Error Code	54582532	MalfunctionCode	_221	_222	13	56580	
2-13	Operation Mode (setting)	58776837	AirConModeCommand	_221	_222	14	56581	set
2-13	Operation Mode (status)	54582534	AirConModeStatus	_221	_222	13	56582	Fb
2-13	Airflow Rate (setting)	58776839	AirFlowRateCommand	_221	_222	14	56583	set
2-13	Airflow Rate (status)	54582536	AirFlowRateStatus	_221	_222	13	56584	Fb
2-13	Measured Room Temperature	56585	RoomTemp	_221	_222	0	56585	
2-13	Set Room Temperature	8445194	TempAdjust	_221	_222	2	56586	set
2-13	Filer Limit Sign	12639499	FilterSign	_221	_222	3	56587	
2-13	Filter Limit Sign Reset	21028108	FilterSignReset	_221	_222	5	56588	
2-13	Remote Control Operation (ON/OFF)	21028109	RemoteControlStart	_221	_222	5	56589	
2-13	Remote Control Operation (Operation Mode)	21028110	RemoteControlAirConModeSet	_221	_222	5	56590	
2-13	Remote Control Operation (Set Temperature)	21028112	RemoteControlTempAdjust	_221	_222	5	56592	
2-13	Remote Control Operation (Sub Group Address Control Rejecti	21028113	CL_Rejection	_221	_222	5	56593	
2-13	Elec Total Power	96525587	ElecTotalPower	_221	_222	23	56595	
2-13	Communication Status	12639508	CommunicationStatus	_221	_222	3	56596	
2-13	System Forced OFF	21028117	SystemForcedOff	_221	_222	5	56597	
2-13	Air Direction (setting)	8445206	AirDirectionCommand	_221	_222	2	56598	
2-13	Air Direction (status)	56599	AirDirectionStatus	_221	_222	0	56599	
2-13	Forced Thermostat OFF (setting)	16833816	ForcedThermoOFFCommand	_221	_222	4	56600	
2-13	Forced Thermostat OFF (status)	12639513	ForcedThermoOFFStatus	_221	_222	3	56601	
2-13	Energy Efficiency Command (setting)	16833818	EnergyEfficiencyCommand	_221	_222	4	56602	
2-13	Energy Efficiency Command (status)	12639515	EnergyEfficiencyStatus	_221	_222	3	56603	
2-13	Thermostat Status	12639516	ThermoStatus	_221	_222	3	56604	
2-13	Compressor Status	12639517	CompressorStatus	_221	_222	3	56605	
2-13	Indoor Fan Status	12639518	IndoorFanStatus	_221	_222	3	56606	
2-13	Heater Operation Status	12639519	HeaterStatus	_221	_222	3	56607	
2-13	Ventilation Mode (setting)	58776864	VentilationModeCommand	_221	_222	14	56608	
2-13	Ventilation Mode (status)	54582561	VentilationModeStatus	_221	_222	13	56609	
2-13	Ventilation Amount (setting)	58776866	VentilationAmountCommand	_221	_222	14	56610	
2-13	Ventilation Amount (status)	54582563	VentilationAmountStatus	_221	_222	13	56611	
2-14	ON/OFF (setting)	16834049	StartStopCommand	_222	_223	4	56833	set
2-14	ON/OFF (status)	12639746	StartStopStatus	_222	_223	3	56834	Fb
2-14	Alarm Sign	12639747	Alarm	_222	_223	3	56835	
2-14	Error Code	54582788	MalfunctionCode	_222	_223	13	56836	
2-14	Operation Mode (setting)	58777093	AirConModeCommand	_222	_223	14	56837	set
2-14	Operation Mode (status)	54582790	AirConModeStatus	_222	_223	13	56838	Fb
2-14	Airflow Rate (setting)	58777095	AirFlowRateCommand	_222	_223	14	56839	set
2-14	Airflow Rate (status)	54582792	AirFlowRateStatus	_222	_223	13	56840	Fb
2-14	Measured Room Temperature	56841	RoomTemp	_222	_223	0	56841	
2-14	Set Room Temperature	8445450	TempAdjust	_222	_223	2	56842	set
2-14	Filer Limit Sign	12639755	FilterSign	_222	_223	3	56843	
2-14	Filter Limit Sign Reset	21028364	FilterSignReset	_222	_223	5	56844	
2-14	Remote Control Operation (ON/OFF)	21028365	RemoteControlStart	_222	_223	5	56845	
2-14	Remote Control Operation (Operation Mode)	21028366	RemoteControlAirConModeSet	_222	_223	5	56846	
2-14	Remote Control Operation (Set Temperature)	21028368	RemoteControlTempAdjust	_222	_223	5	56848	
2-14	Remote Control Operation (Sub Group Address Control Rejecti	21028369	CL_Rejection	_222	_223	5	56849	
2-14	Elec Total Power	96525843	ElecTotalPower	_222	_223	23	56851	

2-14	Communication Status	12639764	CommunicationStatus	_222	_223	3	56852	
2-14	System Forced OFF	21028373	SystemForcedOff	_222	_223	5	56853	
2-14	Air Direction (setting)	8445462	AirDirectionCommand	_222	_223	2	56854	
2-14	Air Direction (status)	56855	AirDirectionStatus	_222	_223	0	56855	
2-14	Forced Thermostat OFF (setting)	16834072	ForcedThermoOFFCommand	_222	_223	4	56856	
2-14	Forced Thermostat OFF (status)	12639769	ForcedThermoOFFStatus	_222	_223	3	56857	
2-14	Energy Efficiency Command (setting)	16834074	EnergyEfficiencyCommand	_222	_223	4	56858	
2-14	Energy Efficiency Command (status)	12639771	EnergyEfficiencyStatus	_222	_223	3	56859	
2-14	Thermostat Status	12639772	ThermoStatus	_222	_223	3	56860	
2-14	Compressor Status	12639773	CompressorStatus	_222	_223	3	56861	
2-14	Indoor Fan Status	12639774	IndoorFanStatus	_222	_223	3	56862	
2-14	Heater Operation Status	12639775	HeaterStatus	_222	_223	3	56863	
2-14	Ventilation Mode (setting)	58777120	VentilationModeCommand	_222	_223	14	56864	
2-14	Ventilation Mode (status)	54582817	VentilationModeStatus	_222	_223	13	56865	
2-14	Ventilation Amount (setting)	58777122	VentilationAmountCommand	_222	_223	14	56866	
2-14	Ventilation Amount (status)	54582819	VentilationAmountStatus	_222	_223	13	56867	
2-15	ON/OFF (setting)	16834305	StartStopCommand	_223	_224	4	57089	set
2-15	ON/OFF (status)	12640002	StartStopStatus	_223	_224	3	57090	Fb
2-15	Alarm Sign	12640003	Alarm	_223	_224	3	57091	
2-15	Error Code	54583044	MalfunctionCode	_223	_224	13	57092	
2-15	Operation Mode (setting)	58777349	AirConModeCommand	_223	_224	14	57093	set
2-15	Operation Mode (status)	54583046	AirConModeStatus	_223	_224	13	57094	Fb
2-15	Airflow Rate (setting)	58777351	AirFlowRateCommand	_223	_224	14	57095	set
2-15	Airflow Rate (status)	54583048	AirFlowRateStatus	_223	_224	13	57096	Fb
2-15	Measured Room Temperature	57097	RoomTemp	_223	_224	0	57097	
2-15	Set Room Temperature	8445706	TempAdjust	_223	_224	2	57098	set
2-15	Filer Limit Sign	12640011	FilterSign	_223	_224	3	57099	
2-15	Filter Limit Sign Reset	21028620	FilterSignReset	_223	_224	5	57100	
2-15	Remote Control Operation (ON/OFF)	21028621	RemoteControlStart	_223	_224	5	57101	
2-15	Remote Control Operation (Operation Mode)	21028622	RemoteControlAirConModeSet	_223	_224	5	57102	
2-15	Remote Control Operation (Set Temperature)	21028624	RemoteControlTempAdjust	_223	_224	5	57104	
2-15	Remote Control Operation (Sub Group Address Control Reject)	21028625	CL_Rejection	_223	_224	5	57105	
2-15	Elec Total Power	96526099	ElecTotalPower	_223	_224	23	57107	
2-15	Communication Status	12640020	CommunicationStatus	_223	_224	3	57108	
2-15	System Forced OFF	21028629	SystemForcedOff	_223	_224	5	57109	
2-15	Air Direction (setting)	8445718	AirDirectionCommand	_223	_224	2	57110	
2-15	Air Direction (status)	57111	AirDirectionStatus	_223	_224	0	57111	
2-15	Forced Thermostat OFF (setting)	16834328	ForcedThermoOFFCommand	_223	_224	4	57112	
2-15	Forced Thermostat OFF (status)	12640025	ForcedThermoOFFStatus	_223	_224	3	57113	
2-15	Energy Efficiency Command (setting)	16834330	EnergyEfficiencyCommand	_223	_224	4	57114	
2-15	Energy Efficiency Command (status)	12640027	EnergyEfficiencyStatus	_223	_224	3	57115	
2-15	Thermostat Status	12640028	ThermoStatus	_223	_224	3	57116	
2-15	Compressor Status	12640029	CompressorStatus	_223	_224	3	57117	
2-15	Indoor Fan Status	12640030	IndoorFanStatus	_223	_224	3	57118	
2-15	Heater Operation Status	12640031	HeaterStatus	_223	_224	3	57119	
2-15	Ventilation Mode (setting)	58777376	VentilationModeCommand	_223	_224	14	57120	
2-15	Ventilation Mode (status)	54583073	VentilationModeStatus	_223	_224	13	57121	
2-15	Ventilation Amount (setting)	58777378	VentilationAmountCommand	_223	_224	14	57122	
2-15	Ventilation Amount (status)	54583075	VentilationAmountStatus	_223	_224	13	57123	
3-00	ON/OFF (setting)	16834561	StartStopCommand	_224	_225	4	57345	set
3-00	ON/OFF (status)	12640258	StartStopStatus	_224	_225	3	57346	Fb
3-00	Alarm Sign	12640259	Alarm	_224	_225	3	57347	
3-00	Error Code	54583300	MalfunctionCode	_224	_225	13	57348	
3-00	Operation Mode (setting)	58777605	AirConModeCommand	_224	_225	14	57349	set
3-00	Operation Mode (status)	54583302	AirConModeStatus	_224	_225	13	57350	Fb
3-00	Airflow Rate (setting)	58777607	AirFlowRateCommand	_224	_225	14	57351	set
3-00	Airflow Rate (status)	54583304	AirFlowRateStatus	_224	_225	13	57352	Fb
3-00	Measured Room Temperature	57353	RoomTemp	_224	_225	0	57353	
3-00	Set Room Temperature	8445962	TempAdjust	_224	_225	2	57354	set
3-00	Filer Limit Sign	12640267	FilterSign	_224	_225	3	57355	
3-00	Filter Limit Sign Reset	21028876	FilterSignReset	_224	_225	5	57356	
3-00	Remote Control Operation (ON/OFF)	21028877	RemoteControlStart	_224	_225	5	57357	
3-00	Remote Control Operation (Operation Mode)	21028878	RemoteControlAirConModeSet	_224	_225	5	57358	
3-00	Remote Control Operation (Set Temperature)	21028880	RemoteControlTempAdjust	_224	_225	5	57360	
3-00	Remote Control Operation (Sub Group Address Control Reject)	21028881	CL_Rejection	_224	_225	5	57361	
3-00	Elec Total Power	96526355	ElecTotalPower	_224	_225	23	57363	
3-00	Communication Status	12640276	CommunicationStatus	_224	_225	3	57364	
3-00	System Forced OFF	21028885	SystemForcedOff	_224	_225	5	57365	
3-00	Air Direction (setting)	8445974	AirDirectionCommand	_224	_225	2	57366	

3-00	Air Direction (status)	57367	AirDirectionStatus	_224	_225	0	57367	
3-00	Forced Thermostat OFF (setting)	16834584	ForcedThermoOFFCommand	_224	_225	4	57368	
3-00	Forced Thermostat OFF (status)	12640281	ForcedThermoOFFStatus	_224	_225	3	57369	
3-00	Energy Efficiency Command (setting)	16834586	EnergyEfficiencyCommand	_224	_225	4	57370	
3-00	Energy Efficiency Command (status)	12640283	EnergyEfficiencyStatus	_224	_225	3	57371	
3-00	Thermostat Status	12640284	ThermoStatus	_224	_225	3	57372	
3-00	Compressor Status	12640285	CompressorStatus	_224	_225	3	57373	
3-00	Indoor Fan Status	12640286	IndoorFanStatus	_224	_225	3	57374	
3-00	Heater Operation Status	12640287	HeaterStatus	_224	_225	3	57375	
3-00	Ventilation Mode (setting)	58777632	VentilationModeCommand	_224	_225	14	57376	
3-00	Ventilation Mode (status)	54583329	VentilationModeStatus	_224	_225	13	57377	
3-00	Ventilation Amount (setting)	58777634	VentilationAmountCommand	_224	_225	14	57378	
3-00	Ventilation Amount (status)	54583331	VentilationAmountStatus	_224	_225	13	57379	
3-01	ON/OFF (setting)	16834817	StartStopCommand	_225	_226	4	57601	set
3-01	ON/OFF (status)	12640514	StartStopStatus	_225	_226	3	57602	Fb
3-01	Alarm Sign	12640515	Alarm	_225	_226	3	57603	
3-01	Error Code	54583556	MalfunctionCode	_225	_226	13	57604	
3-01	Operation Mode (setting)	58777861	AirConModeCommand	_225	_226	14	57605	set
3-01	Operation Mode (status)	54583558	AirConModeStatus	_225	_226	13	57606	Fb
3-01	Airflow Rate (setting)	58777863	AirFlowRateCommand	_225	_226	14	57607	set
3-01	Airflow Rate (status)	54583560	AirFlowRateStatus	_225	_226	13	57608	Fb
3-01	Measured Room Temperature	57609	RoomTemp	_225	_226	0	57609	
3-01	Set Room Temperature	8446218	TempAdjust	_225	_226	2	57610	set
3-01	Filer Limit Sign	12640523	FilterSign	_225	_226	3	57611	
3-01	Filter Limit Sign Reset	21029132	FilterSignReset	_225	_226	5	57612	
3-01	Remote Control Operation (ON/OFF)	21029133	RemoteControlStart	_225	_226	5	57613	
3-01	Remote Control Operation (Operation Mode)	21029134	RemoteControlAirConModeSet	_225	_226	5	57614	
3-01	Remote Control Operation (Set Temperature)	21029136	RemoteControlTempAdjust	_225	_226	5	57616	
3-01	Remote Control Operation (Sub Group Address Control Reject)	21029137	CL_Rejection	_225	_226	5	57617	
3-01	Elec Total Power	96526611	ElecTotalPower	_225	_226	23	57619	
3-01	Communication Status	12640532	CommunicationStatus	_225	_226	3	57620	
3-01	System Forced OFF	21029141	SystemForcedOff	_225	_226	5	57621	
3-01	Air Direction (setting)	8446230	AirDirectionCommand	_225	_226	2	57622	
3-01	Air Direction (status)	57623	AirDirectionStatus	_225	_226	0	57623	
3-01	Forced Thermostat OFF (setting)	16834840	ForcedThermoOFFCommand	_225	_226	4	57624	
3-01	Forced Thermostat OFF (status)	12640537	ForcedThermoOFFStatus	_225	_226	3	57625	
3-01	Energy Efficiency Command (setting)	16834842	EnergyEfficiencyCommand	_225	_226	4	57626	
3-01	Energy Efficiency Command (status)	12640539	EnergyEfficiencyStatus	_225	_226	3	57627	
3-01	Thermostat Status	12640540	ThermoStatus	_225	_226	3	57628	
3-01	Compressor Status	12640541	CompressorStatus	_225	_226	3	57629	
3-01	Indoor Fan Status	12640542	IndoorFanStatus	_225	_226	3	57630	
3-01	Heater Operation Status	12640543	HeaterStatus	_225	_226	3	57631	
3-01	Ventilation Mode (setting)	58777888	VentilationModeCommand	_225	_226	14	57632	
3-01	Ventilation Mode (status)	54583585	VentilationModeStatus	_225	_226	13	57633	
3-01	Ventilation Amount (setting)	58777890	VentilationAmountCommand	_225	_226	14	57634	
3-01	Ventilation Amount (status)	54583587	VentilationAmountStatus	_225	_226	13	57635	
3-02	ON/OFF (setting)	16835073	StartStopCommand	_226	_227	4	57857	set
3-02	ON/OFF (status)	12640770	StartStopStatus	_226	_227	3	57858	Fb
3-02	Alarm Sign	12640771	Alarm	_226	_227	3	57859	
3-02	Error Code	54583812	MalfunctionCode	_226	_227	13	57860	
3-02	Operation Mode (setting)	58778117	AirConModeCommand	_226	_227	14	57861	set
3-02	Operation Mode (status)	54583814	AirConModeStatus	_226	_227	13	57862	Fb
3-02	Airflow Rate (setting)	58778119	AirFlowRateCommand	_226	_227	14	57863	set
3-02	Airflow Rate (status)	54583816	AirFlowRateStatus	_226	_227	13	57864	Fb
3-02	Measured Room Temperature	57865	RoomTemp	_226	_227	0	57865	
3-02	Set Room Temperature	8446474	TempAdjust	_226	_227	2	57866	set
3-02	Filer Limit Sign	12640779	FilterSign	_226	_227	3	57867	
3-02	Filter Limit Sign Reset	21029388	FilterSignReset	_226	_227	5	57868	
3-02	Remote Control Operation (ON/OFF)	21029389	RemoteControlStart	_226	_227	5	57869	
3-02	Remote Control Operation (Operation Mode)	21029390	RemoteControlAirConModeSet	_226	_227	5	57870	
3-02	Remote Control Operation (Set Temperature)	21029392	RemoteControlTempAdjust	_226	_227	5	57872	
3-02	Remote Control Operation (Sub Group Address Control Reject)	21029393	CL_Rejection	_226	_227	5	57873	
3-02	Elec Total Power	96526867	ElecTotalPower	_226	_227	23	57875	
3-02	Communication Status	12640788	CommunicationStatus	_226	_227	3	57876	
3-02	System Forced OFF	21029397	SystemForcedOff	_226	_227	5	57877	
3-02	Air Direction (setting)	8446486	AirDirectionCommand	_226	_227	2	57878	
3-02	Air Direction (status)	57879	AirDirectionStatus	_226	_227	0	57879	
3-02	Forced Thermostat OFF (setting)	16835096	ForcedThermoOFFCommand	_226	_227	4	57880	
3-02	Forced Thermostat OFF (status)	12640793	ForcedThermoOFFStatus	_226	_227	3	57881	

3-02	Energy Efficiency Command (setting)	16835098	EnergyEfficiencyCommand	_226	_227	4	57882	
3-02	Energy Efficiency Command (status)	12640795	EnergyEfficiencyStatus	_226	_227	3	57883	
3-02	Thermostat Status	12640796	ThermoStatus	_226	_227	3	57884	
3-02	Compressor Status	12640797	CompressorStatus	_226	_227	3	57885	
3-02	Indoor Fan Status	12640798	IndoorFanStatus	_226	_227	3	57886	
3-02	Heater Operation Status	12640799	HeaterStatus	_226	_227	3	57887	
3-02	Ventilation Mode (setting)	58778144	VentilationModeCommand	_226	_227	14	57888	
3-02	Ventilation Mode (status)	54583841	VentilationModeStatus	_226	_227	13	57889	
3-02	Ventilation Amount (setting)	58778146	VentilationAmountCommand	_226	_227	14	57890	
3-02	Ventilation Amount (status)	54583843	VentilationAmountStatus	_226	_227	13	57891	
3-03	ON/OFF (setting)	16835329	StartStopCommand	_227	_228	4	58113	set
3-03	ON/OFF (status)	12641026	StartStopStatus	_227	_228	3	58114	Fb
3-03	Alarm Sign	12641027	Alarm	_227	_228	3	58115	
3-03	Error Code	54584068	MalfunctionCode	_227	_228	13	58116	
3-03	Operation Mode (setting)	58778373	AirConModeCommand	_227	_228	14	58117	set
3-03	Operation Mode (status)	54584070	AirConModeStatus	_227	_228	13	58118	Fb
3-03	Airflow Rate (setting)	58778375	AirFlowRateCommand	_227	_228	14	58119	set
3-03	Airflow Rate (status)	54584072	AirFlowRateStatus	_227	_228	13	58120	Fb
3-03	Measured Room Temperature	58121	RoomTemp	_227	_228	0	58121	
3-03	Set Room Temperature	8446730	TempAdjust	_227	_228	2	58122	set
3-03	Filer Limit Sign	12641035	FilterSign	_227	_228	3	58123	
3-03	Filter Limit Sign Reset	21029644	FilterSignReset	_227	_228	5	58124	
3-03	Remote Control Operation (ON/OFF)	21029645	RemoteControlStart	_227	_228	5	58125	
3-03	Remote Control Operation (Operation Mode)	21029646	RemoteControlAirConModeSet	_227	_228	5	58126	
3-03	Remote Control Operation (Set Temperature)	21029648	RemoteControlTempAdjust	_227	_228	5	58128	
3-03	Remote Control Operation (Sub Group Address Control Reject)	21029649	CL_Rejection	_227	_228	5	58129	
3-03	Elec Total Power	96527123	ElecTotalPower	_227	_228	23	58131	
3-03	Communication Status	12641044	CommunicationStatus	_227	_228	3	58132	
3-03	System Forced OFF	21029653	SystemForcedOff	_227	_228	5	58133	
3-03	Air Direction (setting)	8446742	AirDirectionCommand	_227	_228	2	58134	
3-03	Air Direction (status)	58135	AirDirectionStatus	_227	_228	0	58135	
3-03	Forced Thermostat OFF (setting)	16835352	ForcedThermoOFFCommand	_227	_228	4	58136	
3-03	Forced Thermostat OFF (status)	12641049	ForcedThermoOFFStatus	_227	_228	3	58137	
3-03	Energy Efficiency Command (setting)	16835354	EnergyEfficiencyCommand	_227	_228	4	58138	
3-03	Energy Efficiency Command (status)	12641051	EnergyEfficiencyStatus	_227	_228	3	58139	
3-03	Thermostat Status	12641052	ThermoStatus	_227	_228	3	58140	
3-03	Compressor Status	12641053	CompressorStatus	_227	_228	3	58141	
3-03	Indoor Fan Status	12641054	IndoorFanStatus	_227	_228	3	58142	
3-03	Heater Operation Status	12641055	HeaterStatus	_227	_228	3	58143	
3-03	Ventilation Mode (setting)	58778400	VentilationModeCommand	_227	_228	14	58144	
3-03	Ventilation Mode (status)	54584097	VentilationModeStatus	_227	_228	13	58145	
3-03	Ventilation Amount (setting)	58778402	VentilationAmountCommand	_227	_228	14	58146	
3-03	Ventilation Amount (status)	54584099	VentilationAmountStatus	_227	_228	13	58147	
3-04	ON/OFF (setting)	16835585	StartStopCommand	_228	_229	4	58369	set
3-04	ON/OFF (status)	12641282	StartStopStatus	_228	_229	3	58370	Fb
3-04	Alarm Sign	12641283	Alarm	_228	_229	3	58371	
3-04	Error Code	54584324	MalfunctionCode	_228	_229	13	58372	
3-04	Operation Mode (setting)	58778629	AirConModeCommand	_228	_229	14	58373	set
3-04	Operation Mode (status)	54584326	AirConModeStatus	_228	_229	13	58374	Fb
3-04	Airflow Rate (setting)	58778631	AirFlowRateCommand	_228	_229	14	58375	set
3-04	Airflow Rate (status)	54584328	AirFlowRateStatus	_228	_229	13	58376	Fb
3-04	Measured Room Temperature	58377	RoomTemp	_228	_229	0	58377	
3-04	Set Room Temperature	8446986	TempAdjust	_228	_229	2	58378	set
3-04	Filer Limit Sign	12641291	FilterSign	_228	_229	3	58379	
3-04	Filter Limit Sign Reset	21029900	FilterSignReset	_228	_229	5	58380	
3-04	Remote Control Operation (ON/OFF)	21029901	RemoteControlStart	_228	_229	5	58381	
3-04	Remote Control Operation (Operation Mode)	21029902	RemoteControlAirConModeSet	_228	_229	5	58382	
3-04	Remote Control Operation (Set Temperature)	21029904	RemoteControlTempAdjust	_228	_229	5	58384	
3-04	Remote Control Operation (Sub Group Address Control Reject)	21029905	CL_Rejection	_228	_229	5	58385	
3-04	Elec Total Power	96527379	ElecTotalPower	_228	_229	23	58387	
3-04	Communication Status	12641300	CommunicationStatus	_228	_229	3	58388	
3-04	System Forced OFF	21029909	SystemForcedOff	_228	_229	5	58389	
3-04	Air Direction (setting)	8446998	AirDirectionCommand	_228	_229	2	58390	
3-04	Air Direction (status)	58391	AirDirectionStatus	_228	_229	0	58391	
3-04	Forced Thermostat OFF (setting)	16835608	ForcedThermoOFFCommand	_228	_229	4	58392	
3-04	Forced Thermostat OFF (status)	12641305	ForcedThermoOFFStatus	_228	_229	3	58393	
3-04	Energy Efficiency Command (setting)	16835610	EnergyEfficiencyCommand	_228	_229	4	58394	
3-04	Energy Efficiency Command (status)	12641307	EnergyEfficiencyStatus	_228	_229	3	58395	
3-04	Thermostat Status	12641308	ThermoStatus	_228	_229	3	58396	

3-04	Compressor Status	12641309	CompressorStatus	_228	_229	3	58397	
3-04	Indoor Fan Status	12641310	IndoorFanStatus	_228	_229	3	58398	
3-04	Heater Operation Status	12641311	HeaterStatus	_228	_229	3	58399	
3-04	Ventilation Mode (setting)	58778656	VentilationModeCommand	_228	_229	14	58400	
3-04	Ventilation Mode (status)	54584353	VentilationModeStatus	_228	_229	13	58401	
3-04	Ventilation Amount (setting)	58778658	VentilationAmountCommand	_228	_229	14	58402	
3-04	Ventilation Amount (status)	54584355	VentilationAmountStatus	_228	_229	13	58403	
3-05	ON/OFF (setting)	16835841	StartStopCommand	_229	_230	4	58625	set
3-05	ON/OFF (status)	12641538	StartStopStatus	_229	_230	3	58626	Fb
3-05	Alarm Sign	12641539	Alarm	_229	_230	3	58627	
3-05	Error Code	54584580	MalfunctionCode	_229	_230	13	58628	
3-05	Operation Mode (setting)	58778885	AirConModeCommand	_229	_230	14	58629	set
3-05	Operation Mode (status)	54584582	AirConModeStatus	_229	_230	13	58630	Fb
3-05	Airflow Rate (setting)	58778887	AirFlowRateCommand	_229	_230	14	58631	set
3-05	Airflow Rate (status)	54584584	AirFlowRateStatus	_229	_230	13	58632	Fb
3-05	Measured Room Temperature	58633	RoomTemp	_229	_230	0	58633	
3-05	Set Room Temperature	8447242	TempAdjust	_229	_230	2	58634	set
3-05	Filer Limit Sign	12641547	FilterSign	_229	_230	3	58635	
3-05	Filter Limit Sign Reset	21030156	FilterSignReset	_229	_230	5	58636	
3-05	Remote Control Operation (ON/OFF)	21030157	RemoteControlStart	_229	_230	5	58637	
3-05	Remote Control Operation (Operation Mode)	21030158	RemoteControlAirConModeSet	_229	_230	5	58638	
3-05	Remote Control Operation (Set Temperature)	21030160	RemoteControlTempAdjust	_229	_230	5	58640	
3-05	Remote Control Operation (Sub Group Address Control Reject)	21030161	CL_Rejection	_229	_230	5	58641	
3-05	Elec Total Power	96527635	ElecTotalPower	_229	_230	23	58643	
3-05	Communication Status	12641556	CommunicationStatus	_229	_230	3	58644	
3-05	System Forced OFF	21030165	SystemForcedOff	_229	_230	5	58645	
3-05	Air Direction (setting)	8447254	AirDirectionCommand	_229	_230	2	58646	
3-05	Air Direction (status)	58647	AirDirectionStatus	_229	_230	0	58647	
3-05	Forced Thermostat OFF (setting)	16835864	ForcedThermoOFFCommand	_229	_230	4	58648	
3-05	Forced Thermostat OFF (status)	12641561	ForcedThermoOFFStatus	_229	_230	3	58649	
3-05	Energy Efficiency Command (setting)	16835866	EnergyEfficiencyCommand	_229	_230	4	58650	
3-05	Energy Efficiency Command (status)	12641563	EnergyEfficiencyStatus	_229	_230	3	58651	
3-05	Thermostat Status	12641564	ThermoStatus	_229	_230	3	58652	
3-05	Compressor Status	12641565	CompressorStatus	_229	_230	3	58653	
3-05	Indoor Fan Status	12641566	IndoorFanStatus	_229	_230	3	58654	
3-05	Heater Operation Status	12641567	HeaterStatus	_229	_230	3	58655	
3-05	Ventilation Mode (setting)	58778912	VentilationModeCommand	_229	_230	14	58656	
3-05	Ventilation Mode (status)	54584609	VentilationModeStatus	_229	_230	13	58657	
3-05	Ventilation Amount (setting)	58778914	VentilationAmountCommand	_229	_230	14	58658	
3-05	Ventilation Amount (status)	54584611	VentilationAmountStatus	_229	_230	13	58659	
3-06	ON/OFF (setting)	16836097	StartStopCommand	_230	_231	4	58881	set
3-06	ON/OFF (status)	12641794	StartStopStatus	_230	_231	3	58882	Fb
3-06	Alarm Sign	12641795	Alarm	_230	_231	3	58883	
3-06	Error Code	54584836	MalfunctionCode	_230	_231	13	58884	
3-06	Operation Mode (setting)	58779141	AirConModeCommand	_230	_231	14	58885	set
3-06	Operation Mode (status)	54584838	AirConModeStatus	_230	_231	13	58886	Fb
3-06	Airflow Rate (setting)	58779143	AirFlowRateCommand	_230	_231	14	58887	set
3-06	Airflow Rate (status)	54584840	AirFlowRateStatus	_230	_231	13	58888	Fb
3-06	Measured Room Temperature	58889	RoomTemp	_230	_231	0	58889	
3-06	Set Room Temperature	8447498	TempAdjust	_230	_231	2	58890	set
3-06	Filer Limit Sign	12641803	FilterSign	_230	_231	3	58891	
3-06	Filter Limit Sign Reset	21030412	FilterSignReset	_230	_231	5	58892	
3-06	Remote Control Operation (ON/OFF)	21030413	RemoteControlStart	_230	_231	5	58893	
3-06	Remote Control Operation (Operation Mode)	21030414	RemoteControlAirConModeSet	_230	_231	5	58894	
3-06	Remote Control Operation (Set Temperature)	21030416	RemoteControlTempAdjust	_230	_231	5	58896	
3-06	Remote Control Operation (Sub Group Address Control Reject)	21030417	CL_Rejection	_230	_231	5	58897	
3-06	Elec Total Power	96527891	ElecTotalPower	_230	_231	23	58899	
3-06	Communication Status	12641812	CommunicationStatus	_230	_231	3	58900	
3-06	System Forced OFF	21030421	SystemForcedOff	_230	_231	5	58901	
3-06	Air Direction (setting)	8447510	AirDirectionCommand	_230	_231	2	58902	
3-06	Air Direction (status)	58903	AirDirectionStatus	_230	_231	0	58903	
3-06	Forced Thermostat OFF (setting)	16836120	ForcedThermoOFFCommand	_230	_231	4	58904	
3-06	Forced Thermostat OFF (status)	12641817	ForcedThermoOFFStatus	_230	_231	3	58905	
3-06	Energy Efficiency Command (setting)	16836122	EnergyEfficiencyCommand	_230	_231	4	58906	
3-06	Energy Efficiency Command (status)	12641819	EnergyEfficiencyStatus	_230	_231	3	58907	
3-06	Thermostat Status	12641820	ThermoStatus	_230	_231	3	58908	
3-06	Compressor Status	12641821	CompressorStatus	_230	_231	3	58909	
3-06	Indoor Fan Status	12641822	IndoorFanStatus	_230	_231	3	58910	
3-06	Heater Operation Status	12641823	HeaterStatus	_230	_231	3	58911	

3-06	Ventilation Mode (setting)	58779168	VentilationModeCommand	_230	_231	14	58912	
3-06	Ventilation Mode (status)	54584865	VentilationModeStatus	_230	_231	13	58913	
3-06	Ventilation Amount (setting)	58779170	VentilationAmountCommand	_230	_231	14	58914	
3-06	Ventilation Amount (status)	54584867	VentilationAmountStatus	_230	_231	13	58915	
3-07	ON/OFF (setting)	16836353	StartStopCommand	_231	_232	4	59137	set
3-07	ON/OFF (status)	12642050	StartStopStatus	_231	_232	3	59138	Fb
3-07	Alarm Sign	12642051	Alarm	_231	_232	3	59139	
3-07	Error Code	54585092	MalfunctionCode	_231	_232	13	59140	
3-07	Operation Mode (setting)	58779397	AirConModeCommand	_231	_232	14	59141	set
3-07	Operation Mode (status)	54585094	AirConModeStatus	_231	_232	13	59142	Fb
3-07	Airflow Rate (setting)	58779399	AirFlowRateCommand	_231	_232	14	59143	set
3-07	Airflow Rate (status)	54585096	AirFlowRateStatus	_231	_232	13	59144	Fb
3-07	Measured Room Temperature	59145	RoomTemp	_231	_232	0	59145	
3-07	Set Room Temperature	8447754	TempAdjust	_231	_232	2	59146	set
3-07	Filer Limit Sign	12642059	FilterSign	_231	_232	3	59147	
3-07	Filter Limit Sign Reset	21030668	FilterSignReset	_231	_232	5	59148	
3-07	Remote Control Operation (ON/OFF)	21030669	RemoteControlStart	_231	_232	5	59149	
3-07	Remote Control Operation (Operation Mode)	21030670	RemoteControlAirConModeSet	_231	_232	5	59150	
3-07	Remote Control Operation (Set Temperature)	21030672	RemoteControlTempAdjust	_231	_232	5	59152	
3-07	Remote Control Operation (Sub Group Address Control Reject)	21030673	CL_Rejection	_231	_232	5	59153	
3-07	Elec Total Power	96528147	ElecTotalPower	_231	_232	23	59155	
3-07	Communication Status	12642068	CommunicationStatus	_231	_232	3	59156	
3-07	System Forced OFF	21030677	SystemForcedOff	_231	_232	5	59157	
3-07	Air Direction (setting)	8447766	AirDirectionCommand	_231	_232	2	59158	
3-07	Air Direction (status)	59159	AirDirectionStatus	_231	_232	0	59159	
3-07	Forced Thermostat OFF (setting)	16836376	ForcedThermoOFFCommand	_231	_232	4	59160	
3-07	Forced Thermostat OFF (status)	12642073	ForcedThermoOFFStatus	_231	_232	3	59161	
3-07	Energy Efficiency Command (setting)	16836378	EnergyEfficiencyCommand	_231	_232	4	59162	
3-07	Energy Efficiency Command (status)	12642075	EnergyEfficiencyStatus	_231	_232	3	59163	
3-07	Thermostat Status	12642076	ThermoStatus	_231	_232	3	59164	
3-07	Compressor Status	12642077	CompressorStatus	_231	_232	3	59165	
3-07	Indoor Fan Status	12642078	IndoorFanStatus	_231	_232	3	59166	
3-07	Heater Operation Status	12642079	HeaterStatus	_231	_232	3	59167	
3-07	Ventilation Mode (setting)	58779424	VentilationModeCommand	_231	_232	14	59168	
3-07	Ventilation Mode (status)	54585121	VentilationModeStatus	_231	_232	13	59169	
3-07	Ventilation Amount (setting)	58779426	VentilationAmountCommand	_231	_232	14	59170	
3-07	Ventilation Amount (status)	54585123	VentilationAmountStatus	_231	_232	13	59171	
3-08	ON/OFF (setting)	16836609	StartStopCommand	_232	_233	4	59393	set
3-08	ON/OFF (status)	12642306	StartStopStatus	_232	_233	3	59394	Fb
3-08	Alarm Sign	12642307	Alarm	_232	_233	3	59395	
3-08	Error Code	54585348	MalfunctionCode	_232	_233	13	59396	
3-08	Operation Mode (setting)	58779653	AirConModeCommand	_232	_233	14	59397	set
3-08	Operation Mode (status)	54585350	AirConModeStatus	_232	_233	13	59398	Fb
3-08	Airflow Rate (setting)	58779655	AirFlowRateCommand	_232	_233	14	59399	set
3-08	Airflow Rate (status)	54585352	AirFlowRateStatus	_232	_233	13	59400	Fb
3-08	Measured Room Temperature	59401	RoomTemp	_232	_233	0	59401	
3-08	Set Room Temperature	8448010	TempAdjust	_232	_233	2	59402	set
3-08	Filer Limit Sign	12642315	FilterSign	_232	_233	3	59403	
3-08	Filter Limit Sign Reset	21030924	FilterSignReset	_232	_233	5	59404	
3-08	Remote Control Operation (ON/OFF)	21030925	RemoteControlStart	_232	_233	5	59405	
3-08	Remote Control Operation (Operation Mode)	21030926	RemoteControlAirConModeSet	_232	_233	5	59406	
3-08	Remote Control Operation (Set Temperature)	21030928	RemoteControlTempAdjust	_232	_233	5	59408	
3-08	Remote Control Operation (Sub Group Address Control Reject)	21030929	CL_Rejection	_232	_233	5	59409	
3-08	Elec Total Power	96528403	ElecTotalPower	_232	_233	23	59411	
3-08	Communication Status	12642324	CommunicationStatus	_232	_233	3	59412	
3-08	System Forced OFF	21030933	SystemForcedOff	_232	_233	5	59413	
3-08	Air Direction (setting)	8448022	AirDirectionCommand	_232	_233	2	59414	
3-08	Air Direction (status)	59415	AirDirectionStatus	_232	_233	0	59415	
3-08	Forced Thermostat OFF (setting)	16836632	ForcedThermoOFFCommand	_232	_233	4	59416	
3-08	Forced Thermostat OFF (status)	12642329	ForcedThermoOFFStatus	_232	_233	3	59417	
3-08	Energy Efficiency Command (setting)	16836634	EnergyEfficiencyCommand	_232	_233	4	59418	
3-08	Energy Efficiency Command (status)	12642331	EnergyEfficiencyStatus	_232	_233	3	59419	
3-08	Thermostat Status	12642332	ThermoStatus	_232	_233	3	59420	
3-08	Compressor Status	12642333	CompressorStatus	_232	_233	3	59421	
3-08	Indoor Fan Status	12642334	IndoorFanStatus	_232	_233	3	59422	
3-08	Heater Operation Status	12642335	HeaterStatus	_232	_233	3	59423	
3-08	Ventilation Mode (setting)	58779680	VentilationModeCommand	_232	_233	14	59424	
3-08	Ventilation Mode (status)	54585377	VentilationModeStatus	_232	_233	13	59425	
3-08	Ventilation Amount (setting)	58779682	VentilationAmountCommand	_232	_233	14	59426	

3-08	Ventilation Amount (status)	54585379	VentilationAmountStatus	_232	_233	13	59427	
3-09	ON/OFF (setting)	16836865	StartStopCommand	_233	_234	4	59649	set
3-09	ON/OFF (status)	12642562	StartStopStatus	_233	_234	3	59650	Fb
3-09	Alarm Sign	12642563	Alarm	_233	_234	3	59651	
3-09	Error Code	54585604	MalfunctionCode	_233	_234	13	59652	
3-09	Operation Mode (setting)	58779909	AirConModeCommand	_233	_234	14	59653	set
3-09	Operation Mode (status)	54585606	AirConModeStatus	_233	_234	13	59654	Fb
3-09	Airflow Rate (setting)	58779911	AirFlowRateCommand	_233	_234	14	59655	set
3-09	Airflow Rate (status)	54585608	AirFlowRateStatus	_233	_234	13	59656	Fb
3-09	Measured Room Temperature	59657	RoomTemp	_233	_234	0	59657	
3-09	Set Room Temperature	8448266	TempAdjust	_233	_234	2	59658	set
3-09	Filer Limit Sign	12642571	FilterSign	_233	_234	3	59659	
3-09	Filter Limit Sign Reset	21031180	FilterSignReset	_233	_234	5	59660	
3-09	Remote Control Operation (ON/OFF)	21031181	RemoteControlStart	_233	_234	5	59661	
3-09	Remote Control Operation (Operation Mode)	21031182	RemoteControlAirConModeSet	_233	_234	5	59662	
3-09	Remote Control Operation (Set Temperature)	21031184	RemoteControlTempAdjust	_233	_234	5	59664	
3-09	Remote Control Operation (Sub Group Address Control Reject)	21031185	CL_Rejection	_233	_234	5	59665	
3-09	Elec Total Power	96528659	ElecTotalPower	_233	_234	23	59667	
3-09	Communication Status	12642580	CommunicationStatus	_233	_234	3	59668	
3-09	System Forced OFF	21031189	SystemForcedOff	_233	_234	5	59669	
3-09	Air Direction (setting)	8448278	AirDirectionCommand	_233	_234	2	59670	
3-09	Air Direction (status)	59671	AirDirectionStatus	_233	_234	0	59671	
3-09	Forced Thermostat OFF (setting)	16836888	ForcedThermoOFFCommand	_233	_234	4	59672	
3-09	Forced Thermostat OFF (status)	12642585	ForcedThermoOFFStatus	_233	_234	3	59673	
3-09	Energy Efficiency Command (setting)	16836890	EnergyEfficiencyCommand	_233	_234	4	59674	
3-09	Energy Efficiency Command (status)	12642587	EnergyEfficiencyStatus	_233	_234	3	59675	
3-09	Thermostat Status	12642588	ThermoStatus	_233	_234	3	59676	
3-09	Compressor Status	12642589	CompressorStatus	_233	_234	3	59677	
3-09	Indoor Fan Status	12642590	IndoorFanStatus	_233	_234	3	59678	
3-09	Heater Operation Status	12642591	HeaterStatus	_233	_234	3	59679	
3-09	Ventilation Mode (setting)	58779936	VentilationModeCommand	_233	_234	14	59680	
3-09	Ventilation Mode (status)	54585633	VentilationModeStatus	_233	_234	13	59681	
3-09	Ventilation Amount (setting)	58779938	VentilationAmountCommand	_233	_234	14	59682	
3-09	Ventilation Amount (status)	54585635	VentilationAmountStatus	_233	_234	13	59683	
3-10	ON/OFF (setting)	16837121	StartStopCommand	_234	_235	4	59905	set
3-10	ON/OFF (status)	12642818	StartStopStatus	_234	_235	3	59906	Fb
3-10	Alarm Sign	12642819	Alarm	_234	_235	3	59907	
3-10	Error Code	54585860	MalfunctionCode	_234	_235	13	59908	
3-10	Operation Mode (setting)	58780165	AirConModeCommand	_234	_235	14	59909	set
3-10	Operation Mode (status)	54585862	AirConModeStatus	_234	_235	13	59910	Fb
3-10	Airflow Rate (setting)	58780167	AirFlowRateCommand	_234	_235	14	59911	set
3-10	Airflow Rate (status)	54585864	AirFlowRateStatus	_234	_235	13	59912	Fb
3-10	Measured Room Temperature	59913	RoomTemp	_234	_235	0	59913	
3-10	Set Room Temperature	8448522	TempAdjust	_234	_235	2	59914	set
3-10	Filer Limit Sign	12642827	FilterSign	_234	_235	3	59915	
3-10	Filter Limit Sign Reset	21031436	FilterSignReset	_234	_235	5	59916	
3-10	Remote Control Operation (ON/OFF)	21031437	RemoteControlStart	_234	_235	5	59917	
3-10	Remote Control Operation (Operation Mode)	21031438	RemoteControlAirConModeSet	_234	_235	5	59918	
3-10	Remote Control Operation (Set Temperature)	21031440	RemoteControlTempAdjust	_234	_235	5	59920	
3-10	Remote Control Operation (Sub Group Address Control Reject)	21031441	CL_Rejection	_234	_235	5	59921	
3-10	Elec Total Power	96528915	ElecTotalPower	_234	_235	23	59923	
3-10	Communication Status	12642836	CommunicationStatus	_234	_235	3	59924	
3-10	System Forced OFF	21031445	SystemForcedOff	_234	_235	5	59925	
3-10	Air Direction (setting)	8448534	AirDirectionCommand	_234	_235	2	59926	
3-10	Air Direction (status)	59927	AirDirectionStatus	_234	_235	0	59927	
3-10	Forced Thermostat OFF (setting)	16837144	ForcedThermoOFFCommand	_234	_235	4	59928	
3-10	Forced Thermostat OFF (status)	12642841	ForcedThermoOFFStatus	_234	_235	3	59929	
3-10	Energy Efficiency Command (setting)	16837146	EnergyEfficiencyCommand	_234	_235	4	59930	
3-10	Energy Efficiency Command (status)	12642843	EnergyEfficiencyStatus	_234	_235	3	59931	
3-10	Thermostat Status	12642844	ThermoStatus	_234	_235	3	59932	
3-10	Compressor Status	12642845	CompressorStatus	_234	_235	3	59933	
3-10	Indoor Fan Status	12642846	IndoorFanStatus	_234	_235	3	59934	
3-10	Heater Operation Status	12642847	HeaterStatus	_234	_235	3	59935	
3-10	Ventilation Mode (setting)	58780192	VentilationModeCommand	_234	_235	14	59936	
3-10	Ventilation Mode (status)	54585889	VentilationModeStatus	_234	_235	13	59937	
3-10	Ventilation Amount (setting)	58780194	VentilationAmountCommand	_234	_235	14	59938	
3-10	Ventilation Amount (status)	54585891	VentilationAmountStatus	_234	_235	13	59939	
3-11	ON/OFF (setting)	16837377	StartStopCommand	_235	_236	4	60161	set
3-11	ON/OFF (status)	12643074	StartStopStatus	_235	_236	3	60162	Fb

3-11	Alarm Sign	12643075	Alarm	_235	_236	3	60163	
3-11	Error Code	54586116	MalfunctionCode	_235	_236	13	60164	
3-11	Operation Mode (setting)	58780421	AirConModeCommand	_235	_236	14	60165	set
3-11	Operation Mode (status)	54586118	AirConModeStatus	_235	_236	13	60166	Fb
3-11	Airflow Rate (setting)	58780423	AirFlowRateCommand	_235	_236	14	60167	set
3-11	Airflow Rate (status)	54586120	AirFlowRateStatus	_235	_236	13	60168	Fb
3-11	Measured Room Temperature	60169	RoomTemp	_235	_236	0	60169	
3-11	Set Room Temperature	8448778	TempAdjust	_235	_236	2	60170	set
3-11	Filer Limit Sign	12643083	FilterSign	_235	_236	3	60171	
3-11	Filter Limit Sign Reset	21031692	FilterSignReset	_235	_236	5	60172	
3-11	Remote Control Operation (ON/OFF)	21031693	RemoteControlStart	_235	_236	5	60173	
3-11	Remote Control Operation (Operation Mode)	21031694	RemoteControlAirConModeSet	_235	_236	5	60174	
3-11	Remote Control Operation (Set Temperature)	21031696	RemoteControlTempAdjust	_235	_236	5	60176	
3-11	Remote Control Operation (Sub Group Address Control Reject)	21031697	CL_Rejection	_235	_236	5	60177	
3-11	Elec Total Power	96529171	ElecTotalPower	_235	_236	23	60179	
3-11	Communication Status	12643092	CommunicationStatus	_235	_236	3	60180	
3-11	System Forced OFF	21031701	SystemForcedOff	_235	_236	5	60181	
3-11	Air Direction (setting)	8448790	AirDirectionCommand	_235	_236	2	60182	
3-11	Air Direction (status)	60183	AirDirectionStatus	_235	_236	0	60183	
3-11	Forced Thermostat OFF (setting)	16837400	ForcedThermoOFFCommand	_235	_236	4	60184	
3-11	Forced Thermostat OFF (status)	12643097	ForcedThermoOFFStatus	_235	_236	3	60185	
3-11	Energy Efficiency Command (setting)	16837402	EnergyEfficiencyCommand	_235	_236	4	60186	
3-11	Energy Efficiency Command (status)	12643099	EnergyEfficiencyStatus	_235	_236	3	60187	
3-11	Thermostat Status	12643100	ThermoStatus	_235	_236	3	60188	
3-11	Compressor Status	12643101	CompressorStatus	_235	_236	3	60189	
3-11	Indoor Fan Status	12643102	IndoorFanStatus	_235	_236	3	60190	
3-11	Heater Operation Status	12643103	HeaterStatus	_235	_236	3	60191	
3-11	Ventilation Mode (setting)	58780448	VentilationModeCommand	_235	_236	14	60192	
3-11	Ventilation Mode (status)	54586145	VentilationModeStatus	_235	_236	13	60193	
3-11	Ventilation Amount (setting)	58780450	VentilationAmountCommand	_235	_236	14	60194	
3-11	Ventilation Amount (status)	54586147	VentilationAmountStatus	_235	_236	13	60195	
3-12	ON/OFF (setting)	16837633	StartStopCommand	_236	_237	4	60417	set
3-12	ON/OFF (status)	12643330	StartStopStatus	_236	_237	3	60418	Fb
3-12	Alarm Sign	12643331	Alarm	_236	_237	3	60419	
3-12	Error Code	54586372	MalfunctionCode	_236	_237	13	60420	
3-12	Operation Mode (setting)	58780677	AirConModeCommand	_236	_237	14	60421	set
3-12	Operation Mode (status)	54586374	AirConModeStatus	_236	_237	13	60422	Fb
3-12	Airflow Rate (setting)	58780679	AirFlowRateCommand	_236	_237	14	60423	set
3-12	Airflow Rate (status)	54586376	AirFlowRateStatus	_236	_237	13	60424	Fb
3-12	Measured Room Temperature	60425	RoomTemp	_236	_237	0	60425	
3-12	Set Room Temperature	8449034	TempAdjust	_236	_237	2	60426	set
3-12	Filer Limit Sign	12643339	FilterSign	_236	_237	3	60427	
3-12	Filter Limit Sign Reset	21031948	FilterSignReset	_236	_237	5	60428	
3-12	Remote Control Operation (ON/OFF)	21031949	RemoteControlStart	_236	_237	5	60429	
3-12	Remote Control Operation (Operation Mode)	21031950	RemoteControlAirConModeSet	_236	_237	5	60430	
3-12	Remote Control Operation (Set Temperature)	21031952	RemoteControlTempAdjust	_236	_237	5	60432	
3-12	Remote Control Operation (Sub Group Address Control Reject)	21031953	CL_Rejection	_236	_237	5	60433	
3-12	Elec Total Power	96529427	ElecTotalPower	_236	_237	23	60435	
3-12	Communication Status	12643348	CommunicationStatus	_236	_237	3	60436	
3-12	System Forced OFF	21031957	SystemForcedOff	_236	_237	5	60437	
3-12	Air Direction (setting)	8449046	AirDirectionCommand	_236	_237	2	60438	
3-12	Air Direction (status)	60439	AirDirectionStatus	_236	_237	0	60439	
3-12	Forced Thermostat OFF (setting)	16837656	ForcedThermoOFFCommand	_236	_237	4	60440	
3-12	Forced Thermostat OFF (status)	12643353	ForcedThermoOFFStatus	_236	_237	3	60441	
3-12	Energy Efficiency Command (setting)	16837658	EnergyEfficiencyCommand	_236	_237	4	60442	
3-12	Energy Efficiency Command (status)	12643355	EnergyEfficiencyStatus	_236	_237	3	60443	
3-12	Thermostat Status	12643356	ThermoStatus	_236	_237	3	60444	
3-12	Compressor Status	12643357	CompressorStatus	_236	_237	3	60445	
3-12	Indoor Fan Status	12643358	IndoorFanStatus	_236	_237	3	60446	
3-12	Heater Operation Status	12643359	HeaterStatus	_236	_237	3	60447	
3-12	Ventilation Mode (setting)	58780704	VentilationModeCommand	_236	_237	14	60448	
3-12	Ventilation Mode (status)	54586401	VentilationModeStatus	_236	_237	13	60449	
3-12	Ventilation Amount (setting)	58780706	VentilationAmountCommand	_236	_237	14	60450	
3-12	Ventilation Amount (status)	54586403	VentilationAmountStatus	_236	_237	13	60451	
3-13	ON/OFF (setting)	16837889	StartStopCommand	_237	_238	4	60673	set
3-13	ON/OFF (status)	12643586	StartStopStatus	_237	_238	3	60674	Fb
3-13	Alarm Sign	12643587	Alarm	_237	_238	3	60675	
3-13	Error Code	54586628	MalfunctionCode	_237	_238	13	60676	
3-13	Operation Mode (setting)	58780933	AirConModeCommand	_237	_238	14	60677	set

3-13	Operation Mode (status)	54586630	AirConModeStatus	_237	_238	13	60678	Fb
3-13	Airflow Rate (setting)	58780935	AirFlowRateCommand	_237	_238	14	60679	set
3-13	Airflow Rate (status)	54586632	AirFlowRateStatus	_237	_238	13	60680	Fb
3-13	Measured Room Temperature	60681	RoomTemp	_237	_238	0	60681	
3-13	Set Room Temperature	8449290	TempAdjust	_237	_238	2	60682	set
3-13	Filer Limit Sign	12643595	FilterSign	_237	_238	3	60683	
3-13	Filter Limit Sign Reset	21032204	FilterSignReset	_237	_238	5	60684	
3-13	Remote Control Operation (ON/OFF)	21032205	RemoteControlStart	_237	_238	5	60685	
3-13	Remote Control Operation (Operation Mode)	21032206	RemoteControlAirConModeSet	_237	_238	5	60686	
3-13	Remote Control Operation (Set Temperature)	21032208	RemoteControlTempAdjust	_237	_238	5	60688	
3-13	Remote Control Operation (Sub Group Address Control Reject)	21032209	CL_Rejection	_237	_238	5	60689	
3-13	Elec Total Power	96529683	ElecTotalPower	_237	_238	23	60691	
3-13	Communication Status	12643604	CommunicationStatus	_237	_238	3	60692	
3-13	System Forced OFF	21032213	SystemForcedOff	_237	_238	5	60693	
3-13	Air Direction (setting)	8449302	AirDirectionCommand	_237	_238	2	60694	
3-13	Air Direction (status)	60695	AirDirectionStatus	_237	_238	0	60695	
3-13	Forced Thermostat OFF (setting)	16837912	ForcedThermoOFFCommand	_237	_238	4	60696	
3-13	Forced Thermostat OFF (status)	12643609	ForcedThermoOFFStatus	_237	_238	3	60697	
3-13	Energy Efficiency Command (setting)	16837914	EnergyEfficiencyCommand	_237	_238	4	60698	
3-13	Energy Efficiency Command (status)	12643611	EnergyEfficiencyStatus	_237	_238	3	60699	
3-13	Thermostat Status	12643612	ThermoStatus	_237	_238	3	60700	
3-13	Compressor Status	12643613	CompressorStatus	_237	_238	3	60701	
3-13	Indoor Fan Status	12643614	IndoorFanStatus	_237	_238	3	60702	
3-13	Heater Operation Status	12643615	HeaterStatus	_237	_238	3	60703	
3-13	Ventilation Mode (setting)	58780960	VentilationModeCommand	_237	_238	14	60704	
3-13	Ventilation Mode (status)	54586657	VentilationModeStatus	_237	_238	13	60705	
3-13	Ventilation Amount (setting)	58780962	VentilationAmountCommand	_237	_238	14	60706	
3-13	Ventilation Amount (status)	54586659	VentilationAmountStatus	_237	_238	13	60707	
3-14	ON/OFF (setting)	16838145	StartStopCommand	_238	_239	4	60929	set
3-14	ON/OFF (status)	12643842	StartStopStatus	_238	_239	3	60930	Fb
3-14	Alarm Sign	12643843	Alarm	_238	_239	3	60931	
3-14	Error Code	54586884	MalfunctionCode	_238	_239	13	60932	
3-14	Operation Mode (setting)	58781189	AirConModeCommand	_238	_239	14	60933	set
3-14	Operation Mode (status)	54586886	AirConModeStatus	_238	_239	13	60934	Fb
3-14	Airflow Rate (setting)	58781191	AirFlowRateCommand	_238	_239	14	60935	set
3-14	Airflow Rate (status)	54586888	AirFlowRateStatus	_238	_239	13	60936	Fb
3-14	Measured Room Temperature	60937	RoomTemp	_238	_239	0	60937	
3-14	Set Room Temperature	8449546	TempAdjust	_238	_239	2	60938	set
3-14	Filer Limit Sign	12643851	FilterSign	_238	_239	3	60939	
3-14	Filter Limit Sign Reset	21032460	FilterSignReset	_238	_239	5	60940	
3-14	Remote Control Operation (ON/OFF)	21032461	RemoteControlStart	_238	_239	5	60941	
3-14	Remote Control Operation (Operation Mode)	21032462	RemoteControlAirConModeSet	_238	_239	5	60942	
3-14	Remote Control Operation (Set Temperature)	21032464	RemoteControlTempAdjust	_238	_239	5	60944	
3-14	Remote Control Operation (Sub Group Address Control Reject)	21032465	CL_Rejection	_238	_239	5	60945	
3-14	Elec Total Power	96529939	ElecTotalPower	_238	_239	23	60947	
3-14	Communication Status	12643860	CommunicationStatus	_238	_239	3	60948	
3-14	System Forced OFF	21032469	SystemForcedOff	_238	_239	5	60949	
3-14	Air Direction (setting)	8449558	AirDirectionCommand	_238	_239	2	60950	
3-14	Air Direction (status)	60951	AirDirectionStatus	_238	_239	0	60951	
3-14	Forced Thermostat OFF (setting)	16838168	ForcedThermoOFFCommand	_238	_239	4	60952	
3-14	Forced Thermostat OFF (status)	12643865	ForcedThermoOFFStatus	_238	_239	3	60953	
3-14	Energy Efficiency Command (setting)	16838170	EnergyEfficiencyCommand	_238	_239	4	60954	
3-14	Energy Efficiency Command (status)	12643867	EnergyEfficiencyStatus	_238	_239	3	60955	
3-14	Thermostat Status	12643868	ThermoStatus	_238	_239	3	60956	
3-14	Compressor Status	12643869	CompressorStatus	_238	_239	3	60957	
3-14	Indoor Fan Status	12643870	IndoorFanStatus	_238	_239	3	60958	
3-14	Heater Operation Status	12643871	HeaterStatus	_238	_239	3	60959	
3-14	Ventilation Mode (setting)	58781216	VentilationModeCommand	_238	_239	14	60960	
3-14	Ventilation Mode (status)	54586913	VentilationModeStatus	_238	_239	13	60961	
3-14	Ventilation Amount (setting)	58781218	VentilationAmountCommand	_238	_239	14	60962	
3-14	Ventilation Amount (status)	54586915	VentilationAmountStatus	_238	_239	13	60963	
3-15	ON/OFF (setting)	16838401	StartStopCommand	_239	_240	4	61185	set
3-15	ON/OFF (status)	12644098	StartStopStatus	_239	_240	3	61186	Fb
3-15	Alarm Sign	12644099	Alarm	_239	_240	3	61187	
3-15	Error Code	54587140	MalfunctionCode	_239	_240	13	61188	
3-15	Operation Mode (setting)	58781445	AirConModeCommand	_239	_240	14	61189	set
3-15	Operation Mode (status)	54587142	AirConModeStatus	_239	_240	13	61190	Fb
3-15	Airflow Rate (setting)	58781447	AirFlowRateCommand	_239	_240	14	61191	set
3-15	Airflow Rate (status)	54587144	AirFlowRateStatus	_239	_240	13	61192	Fb

3-15	Measured Room Temperature	61193	RoomTemp	_239	_240	0	61193	
3-15	Set Room Temperature	8449802	TempAdjust	_239	_240	2	61194	set
3-15	Filer Limit Sign	12644107	FilterSign	_239	_240	3	61195	
3-15	Filter Limit Sign Reset	21032716	FilterSignReset	_239	_240	5	61196	
3-15	Remote Control Operation (ON/OFF)	21032717	RemoteControlStart	_239	_240	5	61197	
3-15	Remote Control Operation (Operation Mode)	21032718	RemoteControlAirConModeSet	_239	_240	5	61198	
3-15	Remote Control Operation (Set Temperature)	21032720	RemoteControlTempAdjust	_239	_240	5	61200	
3-15	Remote Control Operation (Sub Group Address Control Rejecti	21032721	CL_Rejection	_239	_240	5	61201	
3-15	Elec Total Power	96530195	ElecTotalPower	_239	_240	23	61203	
3-15	Communication Status	12644116	CommunicationStatus	_239	_240	3	61204	
3-15	System Forced OFF	21032725	SystemForcedOff	_239	_240	5	61205	
3-15	Air Direction (setting)	8449814	AirDirectionCommand	_239	_240	2	61206	
3-15	Air Direction (status)	61207	AirDirectionStatus	_239	_240	0	61207	
3-15	Forced Thermostat OFF (setting)	16838424	ForcedThermoOFFCommand	_239	_240	4	61208	
3-15	Forced Thermostat OFF (status)	12644121	ForcedThermoOFFStatus	_239	_240	3	61209	
3-15	Energy Efficiency Command (setting)	16838426	EnergyEfficiencyCommand	_239	_240	4	61210	
3-15	Energy Efficiency Command (status)	12644123	EnergyEfficiencyStatus	_239	_240	3	61211	
3-15	Thermostat Status	12644124	ThermoStatus	_239	_240	3	61212	
3-15	Compressor Status	12644125	CompressorStatus	_239	_240	3	61213	
3-15	Indoor Fan Status	12644126	IndoorFanStatus	_239	_240	3	61214	
3-15	Heater Operation Status	12644127	HeaterStatus	_239	_240	3	61215	
3-15	Ventilation Mode (setting)	58781472	VentilationModeCommand	_239	_240	14	61216	
3-15	Ventilation Mode (status)	54587169	VentilationModeStatus	_239	_240	13	61217	
3-15	Ventilation Amount (setting)	58781474	VentilationAmountCommand	_239	_240	14	61218	
3-15	Ventilation Amount (status)	54587171	VentilationAmountStatus	_239	_240	13	61219	
4-00	ON/OFF (setting)	16838657	StartStopCommand	_240	_241	4	61441	set
4-00	ON/OFF (status)	12644354	StartStopStatus	_240	_241	3	61442	Fb
4-00	Alarm Sign	12644355	Alarm	_240	_241	3	61443	
4-00	Error Code	54587396	MalfunctionCode	_240	_241	13	61444	
4-00	Operation Mode (setting)	58781701	AirConModeCommand	_240	_241	14	61445	set
4-00	Operation Mode (status)	54587398	AirConModeStatus	_240	_241	13	61446	Fb
4-00	Airflow Rate (setting)	58781703	AirFlowRateCommand	_240	_241	14	61447	set
4-00	Airflow Rate (status)	54587400	AirFlowRateStatus	_240	_241	13	61448	Fb
4-00	Measured Room Temperature	61449	RoomTemp	_240	_241	0	61449	
4-00	Set Room Temperature	8450058	TempAdjust	_240	_241	2	61450	set
4-00	Filer Limit Sign	12644363	FilterSign	_240	_241	3	61451	
4-00	Filter Limit Sign Reset	21032972	FilterSignReset	_240	_241	5	61452	
4-00	Remote Control Operation (ON/OFF)	21032973	RemoteControlStart	_240	_241	5	61453	
4-00	Remote Control Operation (Operation Mode)	21032974	RemoteControlAirConModeSet	_240	_241	5	61454	
4-00	Remote Control Operation (Set Temperature)	21032976	RemoteControlTempAdjust	_240	_241	5	61456	
4-00	Remote Control Operation (Sub Group Address Control Rejecti	21032977	CL_Rejection	_240	_241	5	61457	
4-00	Elec Total Power	96530451	ElecTotalPower	_240	_241	23	61459	
4-00	Communication Status	12644372	CommunicationStatus	_240	_241	3	61460	
4-00	System Forced OFF	21032981	SystemForcedOff	_240	_241	5	61461	
4-00	Air Direction (setting)	8450070	AirDirectionCommand	_240	_241	2	61462	
4-00	Air Direction (status)	61463	AirDirectionStatus	_240	_241	0	61463	
4-00	Forced Thermostat OFF (setting)	16838680	ForcedThermoOFFCommand	_240	_241	4	61464	
4-00	Forced Thermostat OFF (status)	12644377	ForcedThermoOFFStatus	_240	_241	3	61465	
4-00	Energy Efficiency Command (setting)	16838682	EnergyEfficiencyCommand	_240	_241	4	61466	
4-00	Energy Efficiency Command (status)	12644379	EnergyEfficiencyStatus	_240	_241	3	61467	
4-00	Thermostat Status	12644380	ThermoStatus	_240	_241	3	61468	
4-00	Compressor Status	12644381	CompressorStatus	_240	_241	3	61469	
4-00	Indoor Fan Status	12644382	IndoorFanStatus	_240	_241	3	61470	
4-00	Heater Operation Status	12644383	HeaterStatus	_240	_241	3	61471	
4-00	Ventilation Mode (setting)	58781728	VentilationModeCommand	_240	_241	14	61472	
4-00	Ventilation Mode (status)	54587425	VentilationModeStatus	_240	_241	13	61473	
4-00	Ventilation Amount (setting)	58781730	VentilationAmountCommand	_240	_241	14	61474	
4-00	Ventilation Amount (status)	54587427	VentilationAmountStatus	_240	_241	13	61475	
4-01	ON/OFF (setting)	16838913	StartStopCommand	_241	_242	4	61697	set
4-01	ON/OFF (status)	12644610	StartStopStatus	_241	_242	3	61698	Fb
4-01	Alarm Sign	12644611	Alarm	_241	_242	3	61699	
4-01	Error Code	54587652	MalfunctionCode	_241	_242	13	61700	
4-01	Operation Mode (setting)	58781957	AirConModeCommand	_241	_242	14	61701	set
4-01	Operation Mode (status)	54587654	AirConModeStatus	_241	_242	13	61702	Fb
4-01	Airflow Rate (setting)	58781959	AirFlowRateCommand	_241	_242	14	61703	set
4-01	Airflow Rate (status)	54587656	AirFlowRateStatus	_241	_242	13	61704	Fb
4-01	Measured Room Temperature	61705	RoomTemp	_241	_242	0	61705	
4-01	Set Room Temperature	8450314	TempAdjust	_241	_242	2	61706	set
4-01	Filer Limit Sign	12644619	FilterSign	_241	_242	3	61707	

4-01	Filter Limit Sign Reset	21033228	FilterSignReset	_241	_242	5	61708	
4-01	Remote Control Operation (ON/OFF)	21033229	RemoteControlStart	_241	_242	5	61709	
4-01	Remote Control Operation (Operation Mode)	21033230	RemoteControlAirConModeSet	_241	_242	5	61710	
4-01	Remote Control Operation (Set Temperature)	21033232	RemoteControlTempAdjust	_241	_242	5	61712	
4-01	Remote Control Operation (Sub Group Address Control Rejecti	21033233	CL_Rejection	_241	_242	5	61713	
4-01	Elec Total Power	96530707	ElecTotalPower	_241	_242	23	61715	
4-01	Communication Status	12644628	CommunicationStatus	_241	_242	3	61716	
4-01	System Forced OFF	21033237	SystemForcedOff	_241	_242	5	61717	
4-01	Air Direction (setting)	8450326	AirDirectionCommand	_241	_242	2	61718	
4-01	Air Direction (status)	61719	AirDirectionStatus	_241	_242	0	61719	
4-01	Forced Thermostat OFF (setting)	16838936	ForcedThermoOFFCommand	_241	_242	4	61720	
4-01	Forced Thermostat OFF (status)	12644633	ForcedThermoOFFStatus	_241	_242	3	61721	
4-01	Energy Efficiency Command (setting)	16838938	EnergyEfficiencyCommand	_241	_242	4	61722	
4-01	Energy Efficiency Command (status)	12644635	EnergyEfficiencyStatus	_241	_242	3	61723	
4-01	Thermostat Status	12644636	ThermoStatus	_241	_242	3	61724	
4-01	Compressor Status	12644637	CompressorStatus	_241	_242	3	61725	
4-01	Indoor Fan Status	12644638	IndoorFanStatus	_241	_242	3	61726	
4-01	Heater Operation Status	12644639	HeaterStatus	_241	_242	3	61727	
4-01	Ventilation Mode (setting)	58781984	VentilationModeCommand	_241	_242	14	61728	
4-01	Ventilation Mode (status)	54587681	VentilationModeStatus	_241	_242	13	61729	
4-01	Ventilation Amount (setting)	58781986	VentilationAmountCommand	_241	_242	14	61730	
4-01	Ventilation Amount (status)	54587683	VentilationAmountStatus	_241	_242	13	61731	
4-02	ON/OFF (setting)	16839169	StartStopCommand	_242	_243	4	61953	set
4-02	ON/OFF (status)	12644866	StartStopStatus	_242	_243	3	61954	Fb
4-02	Alarm Sign	12644867	Alarm	_242	_243	3	61955	
4-02	Error Code	54587908	MalfunctionCode	_242	_243	13	61956	
4-02	Operation Mode (setting)	58782213	AirConModeCommand	_242	_243	14	61957	set
4-02	Operation Mode (status)	54587910	AirConModeStatus	_242	_243	13	61958	Fb
4-02	Airflow Rate (setting)	58782215	AirFlowRateCommand	_242	_243	14	61959	set
4-02	Airflow Rate (status)	54587912	AirFlowRateStatus	_242	_243	13	61960	Fb
4-02	Measured Room Temperature	61961	RoomTemp	_242	_243	0	61961	
4-02	Set Room Temperature	8450570	TempAdjust	_242	_243	2	61962	set
4-02	Filer Limit Sign	12644875	FilterSign	_242	_243	3	61963	
4-02	Filter Limit Sign Reset	21033484	FilterSignReset	_242	_243	5	61964	
4-02	Remote Control Operation (ON/OFF)	21033485	RemoteControlStart	_242	_243	5	61965	
4-02	Remote Control Operation (Operation Mode)	21033486	RemoteControlAirConModeSet	_242	_243	5	61966	
4-02	Remote Control Operation (Set Temperature)	21033488	RemoteControlTempAdjust	_242	_243	5	61968	
4-02	Remote Control Operation (Sub Group Address Control Rejecti	21033489	CL_Rejection	_242	_243	5	61969	
4-02	Elec Total Power	96530963	ElecTotalPower	_242	_243	23	61971	
4-02	Communication Status	12644884	CommunicationStatus	_242	_243	3	61972	
4-02	System Forced OFF	21033493	SystemForcedOff	_242	_243	5	61973	
4-02	Air Direction (setting)	8450582	AirDirectionCommand	_242	_243	2	61974	
4-02	Air Direction (status)	61975	AirDirectionStatus	_242	_243	0	61975	
4-02	Forced Thermostat OFF (setting)	16839192	ForcedThermoOFFCommand	_242	_243	4	61976	
4-02	Forced Thermostat OFF (status)	12644889	ForcedThermoOFFStatus	_242	_243	3	61977	
4-02	Energy Efficiency Command (setting)	16839194	EnergyEfficiencyCommand	_242	_243	4	61978	
4-02	Energy Efficiency Command (status)	12644891	EnergyEfficiencyStatus	_242	_243	3	61979	
4-02	Thermostat Status	12644892	ThermoStatus	_242	_243	3	61980	
4-02	Compressor Status	12644893	CompressorStatus	_242	_243	3	61981	
4-02	Indoor Fan Status	12644894	IndoorFanStatus	_242	_243	3	61982	
4-02	Heater Operation Status	12644895	HeaterStatus	_242	_243	3	61983	
4-02	Ventilation Mode (setting)	58782240	VentilationModeCommand	_242	_243	14	61984	
4-02	Ventilation Mode (status)	54587937	VentilationModeStatus	_242	_243	13	61985	
4-02	Ventilation Amount (setting)	58782242	VentilationAmountCommand	_242	_243	14	61986	
4-02	Ventilation Amount (status)	54587939	VentilationAmountStatus	_242	_243	13	61987	
4-03	ON/OFF (setting)	16839425	StartStopCommand	_243	_244	4	62209	set
4-03	ON/OFF (status)	12645122	StartStopStatus	_243	_244	3	62210	Fb
4-03	Alarm Sign	12645123	Alarm	_243	_244	3	62211	
4-03	Error Code	54588164	MalfunctionCode	_243	_244	13	62212	
4-03	Operation Mode (setting)	58782469	AirConModeCommand	_243	_244	14	62213	set
4-03	Operation Mode (status)	54588166	AirConModeStatus	_243	_244	13	62214	Fb
4-03	Airflow Rate (setting)	58782471	AirFlowRateCommand	_243	_244	14	62215	set
4-03	Airflow Rate (status)	54588168	AirFlowRateStatus	_243	_244	13	62216	Fb
4-03	Measured Room Temperature	62217	RoomTemp	_243	_244	0	62217	
4-03	Set Room Temperature	8450826	TempAdjust	_243	_244	2	62218	set
4-03	Filer Limit Sign	12645131	FilterSign	_243	_244	3	62219	
4-03	Filter Limit Sign Reset	21033740	FilterSignReset	_243	_244	5	62220	
4-03	Remote Control Operation (ON/OFF)	21033741	RemoteControlStart	_243	_244	5	62221	
4-03	Remote Control Operation (Operation Mode)	21033742	RemoteControlAirConModeSet	_243	_244	5	62222	

4-03	Remote Control Operation (Set Temperature)	21033744	RemoteControlTempAdjust	_243	_244	5	62224	
4-03	Remote Control Operation (Sub Group Address Control Rejecti	21033745	CL_Rejection	_243	_244	5	62225	
4-03	Elec Total Power	96531219	ElecTotalPower	_243	_244	23	62227	
4-03	Communication Status	12645140	CommunicationStatus	_243	_244	3	62228	
4-03	System Forced OFF	21033749	SystemForcedOff	_243	_244	5	62229	
4-03	Air Direction (setting)	8450838	AirDirectionCommand	_243	_244	2	62230	
4-03	Air Direction (status)	62231	AirDirectionStatus	_243	_244	0	62231	
4-03	Forced Thermostat OFF (setting)	16839448	ForcedThermoOFFCommand	_243	_244	4	62232	
4-03	Forced Thermostat OFF (status)	12645145	ForcedThermoOFFStatus	_243	_244	3	62233	
4-03	Energy Efficiency Command (setting)	16839450	EnergyEfficiencyCommand	_243	_244	4	62234	
4-03	Energy Efficiency Command (status)	12645147	EnergyEfficiencyStatus	_243	_244	3	62235	
4-03	Thermostat Status	12645148	ThermoStatus	_243	_244	3	62236	
4-03	Compressor Status	12645149	CompressorStatus	_243	_244	3	62237	
4-03	Indoor Fan Status	12645150	IndoorFanStatus	_243	_244	3	62238	
4-03	Heater Operation Status	12645151	HeaterStatus	_243	_244	3	62239	
4-03	Ventilation Mode (setting)	58782496	VentilationModeCommand	_243	_244	14	62240	
4-03	Ventilation Mode (status)	54588193	VentilationModeStatus	_243	_244	13	62241	
4-03	Ventilation Amount (setting)	58782498	VentilationAmountCommand	_243	_244	14	62242	
4-03	Ventilation Amount (status)	54588195	VentilationAmountStatus	_243	_244	13	62243	
4-04	ON/OFF (setting)	16839681	StartStopCommand	_244	_245	4	62465	set
4-04	ON/OFF (status)	12645378	StartStopStatus	_244	_245	3	62466	Fb
4-04	Alarm Sign	12645379	Alarm	_244	_245	3	62467	
4-04	Error Code	54588420	MalfunctionCode	_244	_245	13	62468	
4-04	Operation Mode (setting)	58782725	AirConModeCommand	_244	_245	14	62469	set
4-04	Operation Mode (status)	54588422	AirConModeStatus	_244	_245	13	62470	Fb
4-04	Airflow Rate (setting)	58782727	AirFlowRateCommand	_244	_245	14	62471	set
4-04	Airflow Rate (status)	54588424	AirFlowRateStatus	_244	_245	13	62472	Fb
4-04	Measured Room Temperature	62473	RoomTemp	_244	_245	0	62473	
4-04	Set Room Temperature	8451082	TempAdjust	_244	_245	2	62474	set
4-04	Filer Limit Sign	12645387	FilterSign	_244	_245	3	62475	
4-04	Filter Limit Sign Reset	21033996	FilterSignReset	_244	_245	5	62476	
4-04	Remote Control Operation (ON/OFF)	21033997	RemoteControlStart	_244	_245	5	62477	
4-04	Remote Control Operation (Operation Mode)	21033998	RemoteControlAirConModeSet	_244	_245	5	62478	
4-04	Remote Control Operation (Set Temperature)	21034000	RemoteControlTempAdjust	_244	_245	5	62480	
4-04	Remote Control Operation (Sub Group Address Control Rejecti	21034001	CL_Rejection	_244	_245	5	62481	
4-04	Elec Total Power	96531475	ElecTotalPower	_244	_245	23	62483	
4-04	Communication Status	12645396	CommunicationStatus	_244	_245	3	62484	
4-04	System Forced OFF	21034005	SystemForcedOff	_244	_245	5	62485	
4-04	Air Direction (setting)	8451094	AirDirectionCommand	_244	_245	2	62486	
4-04	Air Direction (status)	62487	AirDirectionStatus	_244	_245	0	62487	
4-04	Forced Thermostat OFF (setting)	16839704	ForcedThermoOFFCommand	_244	_245	4	62488	
4-04	Forced Thermostat OFF (status)	12645401	ForcedThermoOFFStatus	_244	_245	3	62489	
4-04	Energy Efficiency Command (setting)	16839706	EnergyEfficiencyCommand	_244	_245	4	62490	
4-04	Energy Efficiency Command (status)	12645403	EnergyEfficiencyStatus	_244	_245	3	62491	
4-04	Thermostat Status	12645404	ThermoStatus	_244	_245	3	62492	
4-04	Compressor Status	12645405	CompressorStatus	_244	_245	3	62493	
4-04	Indoor Fan Status	12645406	IndoorFanStatus	_244	_245	3	62494	
4-04	Heater Operation Status	12645407	HeaterStatus	_244	_245	3	62495	
4-04	Ventilation Mode (setting)	58782752	VentilationModeCommand	_244	_245	14	62496	
4-04	Ventilation Mode (status)	54588449	VentilationModeStatus	_244	_245	13	62497	
4-04	Ventilation Amount (setting)	58782754	VentilationAmountCommand	_244	_245	14	62498	
4-04	Ventilation Amount (status)	54588451	VentilationAmountStatus	_244	_245	13	62499	
4-05	ON/OFF (setting)	16839937	StartStopCommand	_245	_246	4	62721	set
4-05	ON/OFF (status)	12645634	StartStopStatus	_245	_246	3	62722	Fb
4-05	Alarm Sign	12645635	Alarm	_245	_246	3	62723	
4-05	Error Code	54588676	MalfunctionCode	_245	_246	13	62724	
4-05	Operation Mode (setting)	58782981	AirConModeCommand	_245	_246	14	62725	set
4-05	Operation Mode (status)	54588678	AirConModeStatus	_245	_246	13	62726	Fb
4-05	Airflow Rate (setting)	58782983	AirFlowRateCommand	_245	_246	14	62727	set
4-05	Airflow Rate (status)	54588680	AirFlowRateStatus	_245	_246	13	62728	Fb
4-05	Measured Room Temperature	62729	RoomTemp	_245	_246	0	62729	
4-05	Set Room Temperature	8451338	TempAdjust	_245	_246	2	62730	set
4-05	Filer Limit Sign	12645643	FilterSign	_245	_246	3	62731	
4-05	Filter Limit Sign Reset	21034252	FilterSignReset	_245	_246	5	62732	
4-05	Remote Control Operation (ON/OFF)	21034253	RemoteControlStart	_245	_246	5	62733	
4-05	Remote Control Operation (Operation Mode)	21034254	RemoteControlAirConModeSet	_245	_246	5	62734	
4-05	Remote Control Operation (Set Temperature)	21034256	RemoteControlTempAdjust	_245	_246	5	62736	
4-05	Remote Control Operation (Sub Group Address Control Rejecti	21034257	CL_Rejection	_245	_246	5	62737	
4-05	Elec Total Power	96531731	ElecTotalPower	_245	_246	23	62739	

4-05	Communication Status	12645652	CommunicationStatus	_245	_246	3	62740	
4-05	System Forced OFF	21034261	SystemForcedOff	_245	_246	5	62741	
4-05	Air Direction (setting)	8451350	AirDirectionCommand	_245	_246	2	62742	
4-05	Air Direction (status)	62743	AirDirectionStatus	_245	_246	0	62743	
4-05	Forced Thermostat OFF (setting)	16839960	ForcedThermoOFFCommand	_245	_246	4	62744	
4-05	Forced Thermostat OFF (status)	12645657	ForcedThermoOFFStatus	_245	_246	3	62745	
4-05	Energy Efficiency Command (setting)	16839962	EnergyEfficiencyCommand	_245	_246	4	62746	
4-05	Energy Efficiency Command (status)	12645659	EnergyEfficiencyStatus	_245	_246	3	62747	
4-05	Thermostat Status	12645660	ThermoStatus	_245	_246	3	62748	
4-05	Compressor Status	12645661	CompressorStatus	_245	_246	3	62749	
4-05	Indoor Fan Status	12645662	IndoorFanStatus	_245	_246	3	62750	
4-05	Heater Operation Status	12645663	HeaterStatus	_245	_246	3	62751	
4-05	Ventilation Mode (setting)	58783008	VentilationModeCommand	_245	_246	14	62752	
4-05	Ventilation Mode (status)	54588705	VentilationModeStatus	_245	_246	13	62753	
4-05	Ventilation Amount (setting)	58783010	VentilationAmountCommand	_245	_246	14	62754	
4-05	Ventilation Amount (status)	54588707	VentilationAmountStatus	_245	_246	13	62755	
4-06	ON/OFF (setting)	16840193	StartStopCommand	_246	_247	4	62977	set
4-06	ON/OFF (status)	12645890	StartStopStatus	_246	_247	3	62978	Fb
4-06	Alarm Sign	12645891	Alarm	_246	_247	3	62979	
4-06	Error Code	54588932	MalfunctionCode	_246	_247	13	62980	
4-06	Operation Mode (setting)	58783237	AirConModeCommand	_246	_247	14	62981	set
4-06	Operation Mode (status)	54588934	AirConModeStatus	_246	_247	13	62982	Fb
4-06	Airflow Rate (setting)	58783239	AirFlowRateCommand	_246	_247	14	62983	set
4-06	Airflow Rate (status)	54588936	AirFlowRateStatus	_246	_247	13	62984	Fb
4-06	Measured Room Temperature	62985	RoomTemp	_246	_247	0	62985	
4-06	Set Room Temperature	8451594	TempAdjust	_246	_247	2	62986	set
4-06	Filer Limit Sign	12645899	FilterSign	_246	_247	3	62987	
4-06	Filter Limit Sign Reset	21034508	FilterSignReset	_246	_247	5	62988	
4-06	Remote Control Operation (ON/OFF)	21034509	RemoteControlStart	_246	_247	5	62989	
4-06	Remote Control Operation (Operation Mode)	21034510	RemoteControlAirConModeSet	_246	_247	5	62990	
4-06	Remote Control Operation (Set Temperature)	21034512	RemoteControlTempAdjust	_246	_247	5	62992	
4-06	Remote Control Operation (Sub Group Address Control Reject)	21034513	CL_Rejection	_246	_247	5	62993	
4-06	Elec Total Power	96531987	ElecTotalPower	_246	_247	23	62995	
4-06	Communication Status	12645908	CommunicationStatus	_246	_247	3	62996	
4-06	System Forced OFF	21034517	SystemForcedOff	_246	_247	5	62997	
4-06	Air Direction (setting)	8451606	AirDirectionCommand	_246	_247	2	62998	
4-06	Air Direction (status)	62999	AirDirectionStatus	_246	_247	0	62999	
4-06	Forced Thermostat OFF (setting)	16840216	ForcedThermoOFFCommand	_246	_247	4	63000	
4-06	Forced Thermostat OFF (status)	12645913	ForcedThermoOFFStatus	_246	_247	3	63001	
4-06	Energy Efficiency Command (setting)	16840218	EnergyEfficiencyCommand	_246	_247	4	63002	
4-06	Energy Efficiency Command (status)	12645915	EnergyEfficiencyStatus	_246	_247	3	63003	
4-06	Thermostat Status	12645916	ThermoStatus	_246	_247	3	63004	
4-06	Compressor Status	12645917	CompressorStatus	_246	_247	3	63005	
4-06	Indoor Fan Status	12645918	IndoorFanStatus	_246	_247	3	63006	
4-06	Heater Operation Status	12645919	HeaterStatus	_246	_247	3	63007	
4-06	Ventilation Mode (setting)	58783264	VentilationModeCommand	_246	_247	14	63008	
4-06	Ventilation Mode (status)	54588961	VentilationModeStatus	_246	_247	13	63009	
4-06	Ventilation Amount (setting)	58783266	VentilationAmountCommand	_246	_247	14	63010	
4-06	Ventilation Amount (status)	54588963	VentilationAmountStatus	_246	_247	13	63011	
4-07	ON/OFF (setting)	16840449	StartStopCommand	_247	_248	4	63233	set
4-07	ON/OFF (status)	12646146	StartStopStatus	_247	_248	3	63234	Fb
4-07	Alarm Sign	12646147	Alarm	_247	_248	3	63235	
4-07	Error Code	54589188	MalfunctionCode	_247	_248	13	63236	
4-07	Operation Mode (setting)	58783493	AirConModeCommand	_247	_248	14	63237	set
4-07	Operation Mode (status)	54589190	AirConModeStatus	_247	_248	13	63238	Fb
4-07	Airflow Rate (setting)	58783495	AirFlowRateCommand	_247	_248	14	63239	set
4-07	Airflow Rate (status)	54589192	AirFlowRateStatus	_247	_248	13	63240	Fb
4-07	Measured Room Temperature	63241	RoomTemp	_247	_248	0	63241	
4-07	Set Room Temperature	8451850	TempAdjust	_247	_248	2	63242	set
4-07	Filer Limit Sign	12646155	FilterSign	_247	_248	3	63243	
4-07	Filter Limit Sign Reset	21034764	FilterSignReset	_247	_248	5	63244	
4-07	Remote Control Operation (ON/OFF)	21034765	RemoteControlStart	_247	_248	5	63245	
4-07	Remote Control Operation (Operation Mode)	21034766	RemoteControlAirConModeSet	_247	_248	5	63246	
4-07	Remote Control Operation (Set Temperature)	21034768	RemoteControlTempAdjust	_247	_248	5	63248	
4-07	Remote Control Operation (Sub Group Address Control Reject)	21034769	CL_Rejection	_247	_248	5	63249	
4-07	Elec Total Power	96532243	ElecTotalPower	_247	_248	23	63251	
4-07	Communication Status	12646164	CommunicationStatus	_247	_248	3	63252	
4-07	System Forced OFF	21034773	SystemForcedOff	_247	_248	5	63253	
4-07	Air Direction (setting)	8451862	AirDirectionCommand	_247	_248	2	63254	

4-07	Air Direction (status)	63255	AirDirectionStatus	_247	_248	0	63255	
4-07	Forced Thermostat OFF (setting)	16840472	ForcedThermoOFFCommand	_247	_248	4	63256	
4-07	Forced Thermostat OFF (status)	12646169	ForcedThermoOFFStatus	_247	_248	3	63257	
4-07	Energy Efficiency Command (setting)	16840474	EnergyEfficiencyCommand	_247	_248	4	63258	
4-07	Energy Efficiency Command (status)	12646171	EnergyEfficiencyStatus	_247	_248	3	63259	
4-07	Thermostat Status	12646172	ThermoStatus	_247	_248	3	63260	
4-07	Compressor Status	12646173	CompressorStatus	_247	_248	3	63261	
4-07	Indoor Fan Status	12646174	IndoorFanStatus	_247	_248	3	63262	
4-07	Heater Operation Status	12646175	HeaterStatus	_247	_248	3	63263	
4-07	Ventilation Mode (setting)	58783520	VentilationModeCommand	_247	_248	14	63264	
4-07	Ventilation Mode (status)	54589217	VentilationModeStatus	_247	_248	13	63265	
4-07	Ventilation Amount (setting)	58783522	VentilationAmountCommand	_247	_248	14	63266	
4-07	Ventilation Amount (status)	54589219	VentilationAmountStatus	_247	_248	13	63267	
4-08	ON/OFF (setting)	16840705	StartStopCommand	_248	_249	4	63489	set
4-08	ON/OFF (status)	12646402	StartStopStatus	_248	_249	3	63490	Fb
4-08	Alarm Sign	12646403	Alarm	_248	_249	3	63491	
4-08	Error Code	54589444	MalfunctionCode	_248	_249	13	63492	
4-08	Operation Mode (setting)	58783749	AirConModeCommand	_248	_249	14	63493	set
4-08	Operation Mode (status)	54589446	AirConModeStatus	_248	_249	13	63494	Fb
4-08	Airflow Rate (setting)	58783751	AirFlowRateCommand	_248	_249	14	63495	set
4-08	Airflow Rate (status)	54589448	AirFlowRateStatus	_248	_249	13	63496	Fb
4-08	Measured Room Temperature	63497	RoomTemp	_248	_249	0	63497	
4-08	Set Room Temperature	8452106	TempAdjust	_248	_249	2	63498	set
4-08	Filer Limit Sign	12646411	FilterSign	_248	_249	3	63499	
4-08	Filter Limit Sign Reset	21035020	FilterSignReset	_248	_249	5	63500	
4-08	Remote Control Operation (ON/OFF)	21035021	RemoteControlStart	_248	_249	5	63501	
4-08	Remote Control Operation (Operation Mode)	21035022	RemoteControlAirConModeSet	_248	_249	5	63502	
4-08	Remote Control Operation (Set Temperature)	21035024	RemoteControlTempAdjust	_248	_249	5	63504	
4-08	Remote Control Operation (Sub Group Address Control Reject)	21035025	CL_Rejection	_248	_249	5	63505	
4-08	Elec Total Power	96532499	ElecTotalPower	_248	_249	23	63507	
4-08	Communication Status	12646420	CommunicationStatus	_248	_249	3	63508	
4-08	System Forced OFF	21035029	SystemForcedOff	_248	_249	5	63509	
4-08	Air Direction (setting)	8452118	AirDirectionCommand	_248	_249	2	63510	
4-08	Air Direction (status)	63511	AirDirectionStatus	_248	_249	0	63511	
4-08	Forced Thermostat OFF (setting)	16840728	ForcedThermoOFFCommand	_248	_249	4	63512	
4-08	Forced Thermostat OFF (status)	12646425	ForcedThermoOFFStatus	_248	_249	3	63513	
4-08	Energy Efficiency Command (setting)	16840730	EnergyEfficiencyCommand	_248	_249	4	63514	
4-08	Energy Efficiency Command (status)	12646427	EnergyEfficiencyStatus	_248	_249	3	63515	
4-08	Thermostat Status	12646428	ThermoStatus	_248	_249	3	63516	
4-08	Compressor Status	12646429	CompressorStatus	_248	_249	3	63517	
4-08	Indoor Fan Status	12646430	IndoorFanStatus	_248	_249	3	63518	
4-08	Heater Operation Status	12646431	HeaterStatus	_248	_249	3	63519	
4-08	Ventilation Mode (setting)	58783776	VentilationModeCommand	_248	_249	14	63520	
4-08	Ventilation Mode (status)	54589473	VentilationModeStatus	_248	_249	13	63521	
4-08	Ventilation Amount (setting)	58783778	VentilationAmountCommand	_248	_249	14	63522	
4-08	Ventilation Amount (status)	54589475	VentilationAmountStatus	_248	_249	13	63523	
4-09	ON/OFF (setting)	16840961	StartStopCommand	_249	_250	4	63745	set
4-09	ON/OFF (status)	12646658	StartStopStatus	_249	_250	3	63746	Fb
4-09	Alarm Sign	12646659	Alarm	_249	_250	3	63747	
4-09	Error Code	54589700	MalfunctionCode	_249	_250	13	63748	
4-09	Operation Mode (setting)	58784005	AirConModeCommand	_249	_250	14	63749	set
4-09	Operation Mode (status)	54589702	AirConModeStatus	_249	_250	13	63750	Fb
4-09	Airflow Rate (setting)	58784007	AirFlowRateCommand	_249	_250	14	63751	set
4-09	Airflow Rate (status)	54589704	AirFlowRateStatus	_249	_250	13	63752	Fb
4-09	Measured Room Temperature	63753	RoomTemp	_249	_250	0	63753	
4-09	Set Room Temperature	8452362	TempAdjust	_249	_250	2	63754	set
4-09	Filer Limit Sign	12646667	FilterSign	_249	_250	3	63755	
4-09	Filter Limit Sign Reset	21035276	FilterSignReset	_249	_250	5	63756	
4-09	Remote Control Operation (ON/OFF)	21035277	RemoteControlStart	_249	_250	5	63757	
4-09	Remote Control Operation (Operation Mode)	21035278	RemoteControlAirConModeSet	_249	_250	5	63758	
4-09	Remote Control Operation (Set Temperature)	21035280	RemoteControlTempAdjust	_249	_250	5	63760	
4-09	Remote Control Operation (Sub Group Address Control Reject)	21035281	CL_Rejection	_249	_250	5	63761	
4-09	Elec Total Power	96532755	ElecTotalPower	_249	_250	23	63763	
4-09	Communication Status	12646676	CommunicationStatus	_249	_250	3	63764	
4-09	System Forced OFF	21035285	SystemForcedOff	_249	_250	5	63765	
4-09	Air Direction (setting)	8452374	AirDirectionCommand	_249	_250	2	63766	
4-09	Air Direction (status)	63767	AirDirectionStatus	_249	_250	0	63767	
4-09	Forced Thermostat OFF (setting)	16840984	ForcedThermoOFFCommand	_249	_250	4	63768	
4-09	Forced Thermostat OFF (status)	12646681	ForcedThermoOFFStatus	_249	_250	3	63769	

4-09	Energy Efficiency Command (setting)	16840986	EnergyEfficiencyCommand	_249	_250	4	63770	
4-09	Energy Efficiency Command (status)	12646683	EnergyEfficiencyStatus	_249	_250	3	63771	
4-09	Thermostat Status	12646684	ThermoStatus	_249	_250	3	63772	
4-09	Compressor Status	12646685	CompressorStatus	_249	_250	3	63773	
4-09	Indoor Fan Status	12646686	IndoorFanStatus	_249	_250	3	63774	
4-09	Heater Operation Status	12646687	HeaterStatus	_249	_250	3	63775	
4-09	Ventilation Mode (setting)	58784032	VentilationModeCommand	_249	_250	14	63776	
4-09	Ventilation Mode (status)	54589729	VentilationModeStatus	_249	_250	13	63777	
4-09	Ventilation Amount (setting)	58784034	VentilationAmountCommand	_249	_250	14	63778	
4-09	Ventilation Amount (status)	54589731	VentilationAmountStatus	_249	_250	13	63779	
4-10	ON/OFF (setting)	16841217	StartStopCommand	_250	_251	4	64001	set
4-10	ON/OFF (status)	12646914	StartStopStatus	_250	_251	3	64002	Fb
4-10	Alarm Sign	12646915	Alarm	_250	_251	3	64003	
4-10	Error Code	54589956	MalfunctionCode	_250	_251	13	64004	
4-10	Operation Mode (setting)	58784261	AirConModeCommand	_250	_251	14	64005	set
4-10	Operation Mode (status)	54589958	AirConModeStatus	_250	_251	13	64006	Fb
4-10	Airflow Rate (setting)	58784263	AirFlowRateCommand	_250	_251	14	64007	set
4-10	Airflow Rate (status)	54589960	AirFlowRateStatus	_250	_251	13	64008	Fb
4-10	Measured Room Temperature	64009	RoomTemp	_250	_251	0	64009	
4-10	Set Room Temperature	8452618	TempAdjust	_250	_251	2	64010	set
4-10	Filer Limit Sign	12646923	FilterSign	_250	_251	3	64011	
4-10	Filter Limit Sign Reset	21035532	FilterSignReset	_250	_251	5	64012	
4-10	Remote Control Operation (ON/OFF)	21035533	RemoteControlStart	_250	_251	5	64013	
4-10	Remote Control Operation (Operation Mode)	21035534	RemoteControlAirConModeSet	_250	_251	5	64014	
4-10	Remote Control Operation (Set Temperature)	21035536	RemoteControlTempAdjust	_250	_251	5	64016	
4-10	Remote Control Operation (Sub Group Address Control Rejecti	21035537	CL_Rejection	_250	_251	5	64017	
4-10	Elec Total Power	96533011	ElecTotalPower	_250	_251	23	64019	
4-10	Communication Status	12646932	CommunicationStatus	_250	_251	3	64020	
4-10	System Forced OFF	21035541	SystemForcedOff	_250	_251	5	64021	
4-10	Air Direction (setting)	8452630	AirDirectionCommand	_250	_251	2	64022	
4-10	Air Direction (status)	64023	AirDirectionStatus	_250	_251	0	64023	
4-10	Forced Thermostat OFF (setting)	16841240	ForcedThermoOFFCommand	_250	_251	4	64024	
4-10	Forced Thermostat OFF (status)	12646937	ForcedThermoOFFStatus	_250	_251	3	64025	
4-10	Energy Efficiency Command (setting)	16841242	EnergyEfficiencyCommand	_250	_251	4	64026	
4-10	Energy Efficiency Command (status)	12646939	EnergyEfficiencyStatus	_250	_251	3	64027	
4-10	Thermostat Status	12646940	ThermoStatus	_250	_251	3	64028	
4-10	Compressor Status	12646941	CompressorStatus	_250	_251	3	64029	
4-10	Indoor Fan Status	12646942	IndoorFanStatus	_250	_251	3	64030	
4-10	Heater Operation Status	12646943	HeaterStatus	_250	_251	3	64031	
4-10	Ventilation Mode (setting)	58784288	VentilationModeCommand	_250	_251	14	64032	
4-10	Ventilation Mode (status)	54589985	VentilationModeStatus	_250	_251	13	64033	
4-10	Ventilation Amount (setting)	58784290	VentilationAmountCommand	_250	_251	14	64034	
4-10	Ventilation Amount (status)	54589987	VentilationAmountStatus	_250	_251	13	64035	
4-11	ON/OFF (setting)	16841473	StartStopCommand	_251	_252	4	64257	set
4-11	ON/OFF (status)	12647170	StartStopStatus	_251	_252	3	64258	Fb
4-11	Alarm Sign	12647171	Alarm	_251	_252	3	64259	
4-11	Error Code	54590212	MalfunctionCode	_251	_252	13	64260	
4-11	Operation Mode (setting)	58784517	AirConModeCommand	_251	_252	14	64261	set
4-11	Operation Mode (status)	54590214	AirConModeStatus	_251	_252	13	64262	Fb
4-11	Airflow Rate (setting)	58784519	AirFlowRateCommand	_251	_252	14	64263	set
4-11	Airflow Rate (status)	54590216	AirFlowRateStatus	_251	_252	13	64264	Fb
4-11	Measured Room Temperature	64265	RoomTemp	_251	_252	0	64265	
4-11	Set Room Temperature	8452874	TempAdjust	_251	_252	2	64266	set
4-11	Filer Limit Sign	12647179	FilterSign	_251	_252	3	64267	
4-11	Filter Limit Sign Reset	21035788	FilterSignReset	_251	_252	5	64268	
4-11	Remote Control Operation (ON/OFF)	21035789	RemoteControlStart	_251	_252	5	64269	
4-11	Remote Control Operation (Operation Mode)	21035790	RemoteControlAirConModeSet	_251	_252	5	64270	
4-11	Remote Control Operation (Set Temperature)	21035792	RemoteControlTempAdjust	_251	_252	5	64272	
4-11	Remote Control Operation (Sub Group Address Control Rejecti	21035793	CL_Rejection	_251	_252	5	64273	
4-11	Elec Total Power	96533267	ElecTotalPower	_251	_252	23	64275	
4-11	Communication Status	12647188	CommunicationStatus	_251	_252	3	64276	
4-11	System Forced OFF	21035797	SystemForcedOff	_251	_252	5	64277	
4-11	Air Direction (setting)	8452886	AirDirectionCommand	_251	_252	2	64278	
4-11	Air Direction (status)	64279	AirDirectionStatus	_251	_252	0	64279	
4-11	Forced Thermostat OFF (setting)	16841496	ForcedThermoOFFCommand	_251	_252	4	64280	
4-11	Forced Thermostat OFF (status)	12647193	ForcedThermoOFFStatus	_251	_252	3	64281	
4-11	Energy Efficiency Command (setting)	16841498	EnergyEfficiencyCommand	_251	_252	4	64282	
4-11	Energy Efficiency Command (status)	12647195	EnergyEfficiencyStatus	_251	_252	3	64283	
4-11	Thermostat Status	12647196	ThermoStatus	_251	_252	3	64284	

4-11	Compressor Status	12647197	CompressorStatus	_251	_252	3	64285	
4-11	Indoor Fan Status	12647198	IndoorFanStatus	_251	_252	3	64286	
4-11	Heater Operation Status	12647199	HeaterStatus	_251	_252	3	64287	
4-11	Ventilation Mode (setting)	58784544	VentilationModeCommand	_251	_252	14	64288	
4-11	Ventilation Mode (status)	54590241	VentilationModeStatus	_251	_252	13	64289	
4-11	Ventilation Amount (setting)	58784546	VentilationAmountCommand	_251	_252	14	64290	
4-11	Ventilation Amount (status)	54590243	VentilationAmountStatus	_251	_252	13	64291	
4-12	ON/OFF (setting)	16841729	StartStopCommand	_252	_253	4	64513	set
4-12	ON/OFF (status)	12647426	StartStopStatus	_252	_253	3	64514	Fb
4-12	Alarm Sign	12647427	Alarm	_252	_253	3	64515	
4-12	Error Code	54590468	MalfunctionCode	_252	_253	13	64516	
4-12	Operation Mode (setting)	58784773	AirConModeCommand	_252	_253	14	64517	set
4-12	Operation Mode (status)	54590470	AirConModeStatus	_252	_253	13	64518	Fb
4-12	Airflow Rate (setting)	58784775	AirFlowRateCommand	_252	_253	14	64519	set
4-12	Airflow Rate (status)	54590472	AirFlowRateStatus	_252	_253	13	64520	Fb
4-12	Measured Room Temperature	64521	RoomTemp	_252	_253	0	64521	
4-12	Set Room Temperature	8453130	TempAdjust	_252	_253	2	64522	set
4-12	Filer Limit Sign	12647435	FilterSign	_252	_253	3	64523	
4-12	Filter Limit Sign Reset	21036044	FilterSignReset	_252	_253	5	64524	
4-12	Remote Control Operation (ON/OFF)	21036045	RemoteControlStart	_252	_253	5	64525	
4-12	Remote Control Operation (Operation Mode)	21036046	RemoteControlAirConModeSet	_252	_253	5	64526	
4-12	Remote Control Operation (Set Temperature)	21036048	RemoteControlTempAdjust	_252	_253	5	64528	
4-12	Remote Control Operation (Sub Group Address Control Reject)	21036049	CL_Rejection	_252	_253	5	64529	
4-12	Elec Total Power	96533523	ElecTotalPower	_252	_253	23	64531	
4-12	Communication Status	12647444	CommunicationStatus	_252	_253	3	64532	
4-12	System Forced OFF	21036053	SystemForcedOff	_252	_253	5	64533	
4-12	Air Direction (setting)	8453142	AirDirectionCommand	_252	_253	2	64534	
4-12	Air Direction (status)	64535	AirDirectionStatus	_252	_253	0	64535	
4-12	Forced Thermostat OFF (setting)	16841752	ForcedThermoOFFCommand	_252	_253	4	64536	
4-12	Forced Thermostat OFF (status)	12647449	ForcedThermoOFFStatus	_252	_253	3	64537	
4-12	Energy Efficiency Command (setting)	16841754	EnergyEfficiencyCommand	_252	_253	4	64538	
4-12	Energy Efficiency Command (status)	12647451	EnergyEfficiencyStatus	_252	_253	3	64539	
4-12	Thermostat Status	12647452	ThermoStatus	_252	_253	3	64540	
4-12	Compressor Status	12647453	CompressorStatus	_252	_253	3	64541	
4-12	Indoor Fan Status	12647454	IndoorFanStatus	_252	_253	3	64542	
4-12	Heater Operation Status	12647455	HeaterStatus	_252	_253	3	64543	
4-12	Ventilation Mode (setting)	58784800	VentilationModeCommand	_252	_253	14	64544	
4-12	Ventilation Mode (status)	54590497	VentilationModeStatus	_252	_253	13	64545	
4-12	Ventilation Amount (setting)	58784802	VentilationAmountCommand	_252	_253	14	64546	
4-12	Ventilation Amount (status)	54590499	VentilationAmountStatus	_252	_253	13	64547	
4-13	ON/OFF (setting)	16841985	StartStopCommand	_253	_254	4	64769	set
4-13	ON/OFF (status)	12647682	StartStopStatus	_253	_254	3	64770	Fb
4-13	Alarm Sign	12647683	Alarm	_253	_254	3	64771	
4-13	Error Code	54590724	MalfunctionCode	_253	_254	13	64772	
4-13	Operation Mode (setting)	58785029	AirConModeCommand	_253	_254	14	64773	set
4-13	Operation Mode (status)	54590726	AirConModeStatus	_253	_254	13	64774	Fb
4-13	Airflow Rate (setting)	58785031	AirFlowRateCommand	_253	_254	14	64775	set
4-13	Airflow Rate (status)	54590728	AirFlowRateStatus	_253	_254	13	64776	Fb
4-13	Measured Room Temperature	64777	RoomTemp	_253	_254	0	64777	
4-13	Set Room Temperature	8453386	TempAdjust	_253	_254	2	64778	set
4-13	Filer Limit Sign	12647691	FilterSign	_253	_254	3	64779	
4-13	Filter Limit Sign Reset	21036300	FilterSignReset	_253	_254	5	64780	
4-13	Remote Control Operation (ON/OFF)	21036301	RemoteControlStart	_253	_254	5	64781	
4-13	Remote Control Operation (Operation Mode)	21036302	RemoteControlAirConModeSet	_253	_254	5	64782	
4-13	Remote Control Operation (Set Temperature)	21036304	RemoteControlTempAdjust	_253	_254	5	64784	
4-13	Remote Control Operation (Sub Group Address Control Reject)	21036305	CL_Rejection	_253	_254	5	64785	
4-13	Elec Total Power	96533779	ElecTotalPower	_253	_254	23	64787	
4-13	Communication Status	12647700	CommunicationStatus	_253	_254	3	64788	
4-13	System Forced OFF	21036309	SystemForcedOff	_253	_254	5	64789	
4-13	Air Direction (setting)	8453398	AirDirectionCommand	_253	_254	2	64790	
4-13	Air Direction (status)	64791	AirDirectionStatus	_253	_254	0	64791	
4-13	Forced Thermostat OFF (setting)	16842008	ForcedThermoOFFCommand	_253	_254	4	64792	
4-13	Forced Thermostat OFF (status)	12647705	ForcedThermoOFFStatus	_253	_254	3	64793	
4-13	Energy Efficiency Command (setting)	16842010	EnergyEfficiencyCommand	_253	_254	4	64794	
4-13	Energy Efficiency Command (status)	12647707	EnergyEfficiencyStatus	_253	_254	3	64795	
4-13	Thermostat Status	12647708	ThermoStatus	_253	_254	3	64796	
4-13	Compressor Status	12647709	CompressorStatus	_253	_254	3	64797	
4-13	Indoor Fan Status	12647710	IndoorFanStatus	_253	_254	3	64798	
4-13	Heater Operation Status	12647711	HeaterStatus	_253	_254	3	64799	

4-13	Ventilation Mode (setting)	58785056	VentilationModeCommand	_253	_254	14	64800	
4-13	Ventilation Mode (status)	54590753	VentilationModeStatus	_253	_254	13	64801	
4-13	Ventilation Amount (setting)	58785058	VentilationAmountCommand	_253	_254	14	64802	
4-13	Ventilation Amount (status)	54590755	VentilationAmountStatus	_253	_254	13	64803	
4-14	ON/OFF (setting)	16842241	StartStopCommand	_254	_255	4	65025	set
4-14	ON/OFF (status)	12647938	StartStopStatus	_254	_255	3	65026	Fb
4-14	Alarm Sign	12647939	Alarm	_254	_255	3	65027	
4-14	Error Code	54590980	MalfunctionCode	_254	_255	13	65028	
4-14	Operation Mode (setting)	58785285	AirConModeCommand	_254	_255	14	65029	set
4-14	Operation Mode (status)	54590982	AirConModeStatus	_254	_255	13	65030	Fb
4-14	Airflow Rate (setting)	58785287	AirFlowRateCommand	_254	_255	14	65031	set
4-14	Airflow Rate (status)	54590984	AirFlowRateStatus	_254	_255	13	65032	Fb
4-14	Measured Room Temperature	65033	RoomTemp	_254	_255	0	65033	
4-14	Set Room Temperature	8453642	TempAdjust	_254	_255	2	65034	set
4-14	Filer Limit Sign	12647947	FilterSign	_254	_255	3	65035	
4-14	Filter Limit Sign Reset	21036556	FilterSignReset	_254	_255	5	65036	
4-14	Remote Control Operation (ON/OFF)	21036557	RemoteControlStart	_254	_255	5	65037	
4-14	Remote Control Operation (Operation Mode)	21036558	RemoteControlAirConModeSet	_254	_255	5	65038	
4-14	Remote Control Operation (Set Temperature)	21036560	RemoteControlTempAdjust	_254	_255	5	65040	
4-14	Remote Control Operation (Sub Group Address Control Reject)	21036561	CL_Rejection	_254	_255	5	65041	
4-14	Elec Total Power	96534035	ElecTotalPower	_254	_255	23	65043	
4-14	Communication Status	12647956	CommunicationStatus	_254	_255	3	65044	
4-14	System Forced OFF	21036565	SystemForcedOff	_254	_255	5	65045	
4-14	Air Direction (setting)	8453654	AirDirectionCommand	_254	_255	2	65046	
4-14	Air Direction (status)	65047	AirDirectionStatus	_254	_255	0	65047	
4-14	Forced Thermostat OFF (setting)	16842264	ForcedThermoOFFCommand	_254	_255	4	65048	
4-14	Forced Thermostat OFF (status)	12647961	ForcedThermoOFFStatus	_254	_255	3	65049	
4-14	Energy Efficiency Command (setting)	16842266	EnergyEfficiencyCommand	_254	_255	4	65050	
4-14	Energy Efficiency Command (status)	12647963	EnergyEfficiencyStatus	_254	_255	3	65051	
4-14	Thermostat Status	12647964	ThermoStatus	_254	_255	3	65052	
4-14	Compressor Status	12647965	CompressorStatus	_254	_255	3	65053	
4-14	Indoor Fan Status	12647966	IndoorFanStatus	_254	_255	3	65054	
4-14	Heater Operation Status	12647967	HeaterStatus	_254	_255	3	65055	
4-14	Ventilation Mode (setting)	58785312	VentilationModeCommand	_254	_255	14	65056	
4-14	Ventilation Mode (status)	54591009	VentilationModeStatus	_254	_255	13	65057	
4-14	Ventilation Amount (setting)	58785314	VentilationAmountCommand	_254	_255	14	65058	
4-14	Ventilation Amount (status)	54591011	VentilationAmountStatus	_254	_255	13	65059	
4-15	ON/OFF (setting)	16842497	StartStopCommand	_255	_256	4	65281	set
4-15	ON/OFF (status)	12648194	StartStopStatus	_255	_256	3	65282	Fb
4-15	Alarm Sign	12648195	Alarm	_255	_256	3	65283	
4-15	Error Code	54591236	MalfunctionCode	_255	_256	13	65284	
4-15	Operation Mode (setting)	58785541	AirConModeCommand	_255	_256	14	65285	set
4-15	Operation Mode (status)	54591238	AirConModeStatus	_255	_256	13	65286	Fb
4-15	Airflow Rate (setting)	58785543	AirFlowRateCommand	_255	_256	14	65287	set
4-15	Airflow Rate (status)	54591240	AirFlowRateStatus	_255	_256	13	65288	Fb
4-15	Measured Room Temperature	65289	RoomTemp	_255	_256	0	65289	
4-15	Set Room Temperature	8453898	TempAdjust	_255	_256	2	65290	set
4-15	Filer Limit Sign	12648203	FilterSign	_255	_256	3	65291	
4-15	Filter Limit Sign Reset	21036812	FilterSignReset	_255	_256	5	65292	
4-15	Remote Control Operation (ON/OFF)	21036813	RemoteControlStart	_255	_256	5	65293	
4-15	Remote Control Operation (Operation Mode)	21036814	RemoteControlAirConModeSet	_255	_256	5	65294	
4-15	Remote Control Operation (Set Temperature)	21036816	RemoteControlTempAdjust	_255	_256	5	65296	
4-15	Remote Control Operation (Sub Group Address Control Reject)	21036817	CL_Rejection	_255	_256	5	65297	
4-15	Elec Total Power	96534291	ElecTotalPower	_255	_256	23	65299	
4-15	Communication Status	12648212	CommunicationStatus	_255	_256	3	65300	
4-15	System Forced OFF	21036821	SystemForcedOff	_255	_256	5	65301	
4-15	Air Direction (setting)	8453910	AirDirectionCommand	_255	_256	2	65302	
4-15	Air Direction (status)	65303	AirDirectionStatus	_255	_256	0	65303	
4-15	Forced Thermostat OFF (setting)	16842520	ForcedThermoOFFCommand	_255	_256	4	65304	
4-15	Forced Thermostat OFF (status)	12648217	ForcedThermoOFFStatus	_255	_256	3	65305	
4-15	Energy Efficiency Command (setting)	16842522	EnergyEfficiencyCommand	_255	_256	4	65306	
4-15	Energy Efficiency Command (status)	12648219	EnergyEfficiencyStatus	_255	_256	3	65307	
4-15	Thermostat Status	12648220	ThermoStatus	_255	_256	3	65308	
4-15	Compressor Status	12648221	CompressorStatus	_255	_256	3	65309	
4-15	Indoor Fan Status	12648222	IndoorFanStatus	_255	_256	3	65310	
4-15	Heater Operation Status	12648223	HeaterStatus	_255	_256	3	65311	
4-15	Ventilation Mode (setting)	58785568	VentilationModeCommand	_255	_256	14	65312	
4-15	Ventilation Mode (status)	54591265	VentilationModeStatus	_255	_256	13	65313	
4-15	Ventilation Amount (setting)	58785570	VentilationAmountCommand	_255	_256	14	65314	

4-15	Ventilation Amount (status)	54591267	VentilationAmountStatus_255	_256	13	65315
------	-----------------------------	----------	-----------------------------	------	----	-------