

DIII Net Port-3							
編碼	point name	Object ID	Object Name	小工具 Indoor_xx	Object Type	Instance Number	
1-00	ON/OFF (setting) 開/關(設定)	16809985	StartStopCommand _128	_129	4	32769	set
1-00	ON/OFF (status) 開/關(狀態)	12615682	StartStopStatus _128	_129	3	32770	Fb
1-00	Alarm Sign 鬧鐘通知	12615683	Alarm _128	_129	3	32771	
1-00	Error Code 錯誤代碼	54558724	MalfunctionCode _128	_129	13	32772	
1-00	Operation Mode (setting) 運轉模式(設定)	58753029	AirConModeCommand _128	_129	14	32773	set
1-00	Operation Mode (status) 運轉模式(狀態)	54558726	AirConModeStatus _128	_129	13	32774	Fb
1-00	Airflow Rate (setting) 氣流比率(設定)	58753031	AirFlowRateCommand _128	_129	14	32775	set
1-00	Airflow Rate (status) 氣流比率(狀態)	54558728	AirFlowRateStatus _128	_129	13	32776	Fb
1-00	Measured Room Temperature 測量房間溫度	32777	RoomTemp _128	_129	0	32777	
1-00	Set Room Temperature 設定房間溫度	8421386	TempAdjust _128	_129	2	32778	set
1-00	Filer Limit Sign 過濾限制通知	12615691	FilterSign _128	_129	3	32779	
1-00	Filter Limit Sign Reset 重設過濾限制通知	21004300	FilterSignReset _128	_129	5	32780	
1-00	Remote Control Operation (ON/OFF) 遙控器運轉(開/關)	21004301	RemoteControlStart _128	_129	5	32781	
1-00	Remote Control Operation (Operation Mode) 遙控器運轉(運轉模式)	21004302	RemoteControlAirConModeSet _128	_129	5	32782	
1-00	Remote Control Operation (Set Temperature) 遙控器運轉(設定溫度)	21004304	RemoteControlTempAdjust _128	_129	5	32784	
1-00	Remote Control Operation (Sub Group Address Control Rejection) 遙控器運轉(子組位置拒絕控制)	21004305	CL_Rejection _128	_129	5	32785	
1-00	Elec Total Power Elec總功率	96501779	ElecTotalPower _128	_129	23	32787	
1-00	Communication Status 溝通狀態	12615700	CommunicationStatus _128	_129	3	32788	
1-00	System Forced OFF 系統強制關閉	21004309	SystemForcedOff _128	_129	5	32789	
1-00	Air Direction (setting) 風向(設定)	8421398	AirDirectionCommand _128	_129	2	32790	
1-00	Air Direction (status) 風向(狀態)	32791	AirDirectionStatus _128	_129	0	32791	
1-00	Forced Thermostat OFF (setting) 強制恆溫器關閉(設定)	16810008	ForcedThermoOFFCommand _128	_129	4	32792	
1-00	Forced Thermostat OFF (status) 強制恆溫器關閉(狀態)	12615705	ForcedThermoOFFStatus _128	_129	3	32793	
1-00	Energy Efficiency Command (setting) 能源效率指令(設定)	16810010	EnergyEfficiencyCommand _128	_129	4	32794	
1-00	Energy Efficiency Command (status) 能源效率指令(狀態)	12615707	EnergyEfficiencyStatus _128	_129	3	32795	
1-00	Thermostat Status 恆溫器狀態	12615708	ThermoStatus _128	_129	3	32796	
1-00	Compressor Status 壓縮機狀態	12615709	CompressorStatus _128	_129	3	32797	
1-00	Indoor Fan Status 室內風扇狀態	12615710	IndoorFanStatus _128	_129	3	32798	
1-00	Heater Operation Status 暖氣運轉狀態	12615711	HeaterStatus _128	_129	3	32799	
1-00	Ventilation Mode (setting) 通風模式(設定)	58753056	VentilationModeCommand _128	_129	14	32800	
1-00	Ventilation Mode (status) 通風模式(狀態)	54558753	VentilationModeStatus _128	_129	13	32801	
1-00	Ventilation Amount (setting) 通風總和(設定)	58753058	VentilationAmountCommand _128	_129	14	32802	
1-00	Ventilation Amount (status) 通風總和(狀態)	54558755	VentilationAmountStatus _128	_129	13	32803	
1-01	ON/OFF (setting)	16810241	StartStopCommand _129	_130	4	33025	set
1-01	ON/OFF (status)	12615938	StartStopStatus _129	_130	3	33026	Fb
1-01	Alarm Sign	12615939	Alarm _129	_130	3	33027	
1-01	Error Code	54558980	MalfunctionCode _129	_130	13	33028	
1-01	Operation Mode (setting)	58753285	AirConModeCommand _129	_130	14	33029	set
1-01	Operation Mode (status)	54558982	AirConModeStatus _129	_130	13	33030	Fb
1-01	Airflow Rate (setting)	58753287	AirFlowRateCommand _129	_130	14	33031	set
1-01	Airflow Rate (status)	54558984	AirFlowRateStatus _129	_130	13	33032	Fb

1-01	Measured Room Temperature	33033	RoomTemp	_129	_130	0	33033	
1-01	Set Room Temperature	8421642	TempAdjust	_129	_130	2	33034	set
1-01	Filer Limit Sign	12615947	FilterSign	_129	_130	3	33035	
1-01	Filter Limit Sign Reset	21004556	FilterSignReset	_129	_130	5	33036	
1-01	Remote Control Operation (ON/OFF)	21004557	RemoteControlStart	_129	_130	5	33037	
1-01	Remote Control Operation (Operation Mode)	21004558	RemoteControlAirConModeSet	_129	_130	5	33038	
1-01	Remote Control Operation (Set Temperature)	21004560	RemoteControlTempAdjust	_129	_130	5	33040	
1-01	Remote Control Operation (Sub Group Address Control Rejecti	21004561	CL_Rejection	_129	_130	5	33041	
1-01	Elec Total Power	96502035	ElecTotalPower	_129	_130	23	33043	
1-01	Communication Status	12615956	CommunicationStatus	_129	_130	3	33044	
1-01	System Forced OFF	21004565	SystemForcedOff	_129	_130	5	33045	
1-01	Air Direction (setting)	8421654	AirDirectionCommand	_129	_130	2	33046	
1-01	Air Direction (status)	33047	AirDirectionStatus	_129	_130	0	33047	
1-01	Forced Thermostat OFF (setting)	16810264	ForcedThermoOFFCommand	_129	_130	4	33048	
1-01	Forced Thermostat OFF (status)	12615961	ForcedThermoOFFStatus	_129	_130	3	33049	
1-01	Energy Efficiency Command (setting)	16810266	EnergyEfficiencyCommand	_129	_130	4	33050	
1-01	Energy Efficiency Command (status)	12615963	EnergyEfficiencyStatus	_129	_130	3	33051	
1-01	Thermostat Status	12615964	ThermoStatus	_129	_130	3	33052	
1-01	Compressor Status	12615965	CompressorStatus	_129	_130	3	33053	
1-01	Indoor Fan Status	12615966	IndoorFanStatus	_129	_130	3	33054	
1-01	Heater Operation Status	12615967	HeaterStatus	_129	_130	3	33055	
1-01	Ventilation Mode (setting)	58753312	VentilationModeCommand	_129	_130	14	33056	
1-01	Ventilation Mode (status)	54559009	VentilationModeStatus	_129	_130	13	33057	
1-01	Ventilation Amount (setting)	58753314	VentilationAmountCommand	_129	_130	14	33058	
1-01	Ventilation Amount (status)	54559011	VentilationAmountStatus	_129	_130	13	33059	
1-02	ON/OFF (setting)	16810497	StartStopCommand	_130	_131	4	33281	set
1-02	ON/OFF (status)	12616194	StartStopStatus	_130	_131	3	33282	Fb
1-02	Alarm Sign	12616195	Alarm	_130	_131	3	33283	
1-02	Error Code	54559236	MalfunctionCode	_130	_131	13	33284	
1-02	Operation Mode (setting)	58753541	AirConModeCommand	_130	_131	14	33285	set
1-02	Operation Mode (status)	54559238	AirConModeStatus	_130	_131	13	33286	Fb
1-02	Airflow Rate (setting)	58753543	AirFlowRateCommand	_130	_131	14	33287	set
1-02	Airflow Rate (status)	54559240	AirFlowRateStatus	_130	_131	13	33288	Fb
1-02	Measured Room Temperature	33289	RoomTemp	_130	_131	0	33289	
1-02	Set Room Temperature	8421898	TempAdjust	_130	_131	2	33290	set
1-02	Filer Limit Sign	12616203	FilterSign	_130	_131	3	33291	
1-02	Filter Limit Sign Reset	21004812	FilterSignReset	_130	_131	5	33292	
1-02	Remote Control Operation (ON/OFF)	21004813	RemoteControlStart	_130	_131	5	33293	
1-02	Remote Control Operation (Operation Mode)	21004814	RemoteControlAirConModeSet	_130	_131	5	33294	
1-02	Remote Control Operation (Set Temperature)	21004816	RemoteControlTempAdjust	_130	_131	5	33296	
1-02	Remote Control Operation (Sub Group Address Control Rejecti	21004817	CL_Rejection	_130	_131	5	33297	
1-02	Elec Total Power	96502291	ElecTotalPower	_130	_131	23	33299	
1-02	Communication Status	12616212	CommunicationStatus	_130	_131	3	33300	
1-02	System Forced OFF	21004821	SystemForcedOff	_130	_131	5	33301	
1-02	Air Direction (setting)	8421910	AirDirectionCommand	_130	_131	2	33302	
1-02	Air Direction (status)	33303	AirDirectionStatus	_130	_131	0	33303	
1-02	Forced Thermostat OFF (setting)	16810520	ForcedThermoOFFCommand	_130	_131	4	33304	
1-02	Forced Thermostat OFF (status)	12616217	ForcedThermoOFFStatus	_130	_131	3	33305	
1-02	Energy Efficiency Command (setting)	16810522	EnergyEfficiencyCommand	_130	_131	4	33306	
1-02	Energy Efficiency Command (status)	12616219	EnergyEfficiencyStatus	_130	_131	3	33307	
1-02	Thermostat Status	12616220	ThermoStatus	_130	_131	3	33308	
1-02	Compressor Status	12616221	CompressorStatus	_130	_131	3	33309	
1-02	Indoor Fan Status	12616222	IndoorFanStatus	_130	_131	3	33310	
1-02	Heater Operation Status	12616223	HeaterStatus	_130	_131	3	33311	
1-02	Ventilation Mode (setting)	58753568	VentilationModeCommand	_130	_131	14	33312	
1-02	Ventilation Mode (status)	54559265	VentilationModeStatus	_130	_131	13	33313	
1-02	Ventilation Amount (setting)	58753570	VentilationAmountCommand	_130	_131	14	33314	
1-02	Ventilation Amount (status)	54559267	VentilationAmountStatus	_130	_131	13	33315	
1-03	ON/OFF (setting)	16810753	StartStopCommand	_131	_132	4	33537	set
1-03	ON/OFF (status)	12616450	StartStopStatus	_131	_132	3	33538	Fb
1-03	Alarm Sign	12616451	Alarm	_131	_132	3	33539	
1-03	Error Code	54559492	MalfunctionCode	_131	_132	13	33540	
1-03	Operation Mode (setting)	58753797	AirConModeCommand	_131	_132	14	33541	set
1-03	Operation Mode (status)	54559494	AirConModeStatus	_131	_132	13	33542	Fb
1-03	Airflow Rate (setting)	58753799	AirFlowRateCommand	_131	_132	14	33543	set
1-03	Airflow Rate (status)	54559496	AirFlowRateStatus	_131	_132	13	33544	Fb
1-03	Measured Room Temperature	33545	RoomTemp	_131	_132	0	33545	
1-03	Set Room Temperature	8422154	TempAdjust	_131	_132	2	33546	set
1-03	Filer Limit Sign	12616459	FilterSign	_131	_132	3	33547	

1-03	Filter Limit Sign Reset	21005068	FilterSignReset	_131	_132	5	33548	
1-03	Remote Control Operation (ON/OFF)	21005069	RemoteControlStart	_131	_132	5	33549	
1-03	Remote Control Operation (Operation Mode)	21005070	RemoteControlAirConModeSet	_131	_132	5	33550	
1-03	Remote Control Operation (Set Temperature)	21005072	RemoteControlTempAdjust	_131	_132	5	33552	
1-03	Remote Control Operation (Sub Group Address Control Rejecti	21005073	CL_Rejection	_131	_132	5	33553	
1-03	Elec Total Power	96502547	ElecTotalPower	_131	_132	23	33555	
1-03	Communication Status	12616468	CommunicationStatus	_131	_132	3	33556	
1-03	System Forced OFF	21005077	SystemForcedOff	_131	_132	5	33557	
1-03	Air Direction (setting)	8422166	AirDirectionCommand	_131	_132	2	33558	
1-03	Air Direction (status)	33559	AirDirectionStatus	_131	_132	0	33559	
1-03	Forced Thermostat OFF (setting)	16810776	ForcedThermoOFFCommand	_131	_132	4	33560	
1-03	Forced Thermostat OFF (status)	12616473	ForcedThermoOFFStatus	_131	_132	3	33561	
1-03	Energy Efficiency Command (setting)	16810778	EnergyEfficiencyCommand	_131	_132	4	33562	
1-03	Energy Efficiency Command (status)	12616475	EnergyEfficiencyStatus	_131	_132	3	33563	
1-03	Thermostat Status	12616476	ThermoStatus	_131	_132	3	33564	
1-03	Compressor Status	12616477	CompressorStatus	_131	_132	3	33565	
1-03	Indoor Fan Status	12616478	IndoorFanStatus	_131	_132	3	33566	
1-03	Heater Operation Status	12616479	HeaterStatus	_131	_132	3	33567	
1-03	Ventilation Mode (setting)	58753824	VentilationModeCommand	_131	_132	14	33568	
1-03	Ventilation Mode (status)	54559521	VentilationModeStatus	_131	_132	13	33569	
1-03	Ventilation Amount (setting)	58753826	VentilationAmountCommand	_131	_132	14	33570	
1-03	Ventilation Amount (status)	54559523	VentilationAmountStatus	_131	_132	13	33571	
1-04	ON/OFF (setting)	16811009	StartStopCommand	_132	_133	4	33793	set
1-04	ON/OFF (status)	12616706	StartStopStatus	_132	_133	3	33794	Fb
1-04	Alarm Sign	12616707	Alarm	_132	_133	3	33795	
1-04	Error Code	54559748	MalfunctionCode	_132	_133	13	33796	
1-04	Operation Mode (setting)	58754053	AirConModeCommand	_132	_133	14	33797	set
1-04	Operation Mode (status)	54559750	AirConModeStatus	_132	_133	13	33798	Fb
1-04	Airflow Rate (setting)	58754055	AirFlowRateCommand	_132	_133	14	33799	set
1-04	Airflow Rate (status)	54559752	AirFlowRateStatus	_132	_133	13	33800	Fb
1-04	Measured Room Temperature	33801	RoomTemp	_132	_133	0	33801	
1-04	Set Room Temperature	8422410	TempAdjust	_132	_133	2	33802	set
1-04	Filer Limit Sign	12616715	FilterSign	_132	_133	3	33803	
1-04	Filter Limit Sign Reset	21005324	FilterSignReset	_132	_133	5	33804	
1-04	Remote Control Operation (ON/OFF)	21005325	RemoteControlStart	_132	_133	5	33805	
1-04	Remote Control Operation (Operation Mode)	21005326	RemoteControlAirConModeSet	_132	_133	5	33806	
1-04	Remote Control Operation (Set Temperature)	21005328	RemoteControlTempAdjust	_132	_133	5	33808	
1-04	Remote Control Operation (Sub Group Address Control Rejecti	21005329	CL_Rejection	_132	_133	5	33809	
1-04	Elec Total Power	96502803	ElecTotalPower	_132	_133	23	33811	
1-04	Communication Status	12616724	CommunicationStatus	_132	_133	3	33812	
1-04	System Forced OFF	21005333	SystemForcedOff	_132	_133	5	33813	
1-04	Air Direction (setting)	8422422	AirDirectionCommand	_132	_133	2	33814	
1-04	Air Direction (status)	33815	AirDirectionStatus	_132	_133	0	33815	
1-04	Forced Thermostat OFF (setting)	16811032	ForcedThermoOFFCommand	_132	_133	4	33816	
1-04	Forced Thermostat OFF (status)	12616729	ForcedThermoOFFStatus	_132	_133	3	33817	
1-04	Energy Efficiency Command (setting)	16811034	EnergyEfficiencyCommand	_132	_133	4	33818	
1-04	Energy Efficiency Command (status)	12616731	EnergyEfficiencyStatus	_132	_133	3	33819	
1-04	Thermostat Status	12616732	ThermoStatus	_132	_133	3	33820	
1-04	Compressor Status	12616733	CompressorStatus	_132	_133	3	33821	
1-04	Indoor Fan Status	12616734	IndoorFanStatus	_132	_133	3	33822	
1-04	Heater Operation Status	12616735	HeaterStatus	_132	_133	3	33823	
1-04	Ventilation Mode (setting)	58754080	VentilationModeCommand	_132	_133	14	33824	
1-04	Ventilation Mode (status)	54559777	VentilationModeStatus	_132	_133	13	33825	
1-04	Ventilation Amount (setting)	58754082	VentilationAmountCommand	_132	_133	14	33826	
1-04	Ventilation Amount (status)	54559779	VentilationAmountStatus	_132	_133	13	33827	
1-05	ON/OFF (setting)	16811265	StartStopCommand	_133	_134	4	34049	set
1-05	ON/OFF (status)	12616962	StartStopStatus	_133	_134	3	34050	Fb
1-05	Alarm Sign	12616963	Alarm	_133	_134	3	34051	
1-05	Error Code	54560004	MalfunctionCode	_133	_134	13	34052	
1-05	Operation Mode (setting)	58754309	AirConModeCommand	_133	_134	14	34053	set
1-05	Operation Mode (status)	54560006	AirConModeStatus	_133	_134	13	34054	Fb
1-05	Airflow Rate (setting)	58754311	AirFlowRateCommand	_133	_134	14	34055	set
1-05	Airflow Rate (status)	54560008	AirFlowRateStatus	_133	_134	13	34056	Fb
1-05	Measured Room Temperature	34057	RoomTemp	_133	_134	0	34057	
1-05	Set Room Temperature	8422666	TempAdjust	_133	_134	2	34058	set
1-05	Filer Limit Sign	12616971	FilterSign	_133	_134	3	34059	
1-05	Filter Limit Sign Reset	21005580	FilterSignReset	_133	_134	5	34060	
1-05	Remote Control Operation (ON/OFF)	21005581	RemoteControlStart	_133	_134	5	34061	
1-05	Remote Control Operation (Operation Mode)	21005582	RemoteControlAirConModeSet	_133	_134	5	34062	

1-05	Remote Control Operation (Set Temperature)	21005584	RemoteControlTempAdjust	_133	_134	5	34064	
1-05	Remote Control Operation (Sub Group Address Control Rejecti	21005585	CL_Rejection	_133	_134	5	34065	
1-05	Elec Total Power	96503059	ElecTotalPower	_133	_134	23	34067	
1-05	Communication Status	12616980	CommunicationStatus	_133	_134	3	34068	
1-05	System Forced OFF	21005589	SystemForcedOff	_133	_134	5	34069	
1-05	Air Direction (setting)	8422678	AirDirectionCommand	_133	_134	2	34070	
1-05	Air Direction (status)	34071	AirDirectionStatus	_133	_134	0	34071	
1-05	Forced Thermostat OFF (setting)	16811288	ForcedThermoOFFCommand	_133	_134	4	34072	
1-05	Forced Thermostat OFF (status)	12616985	ForcedThermoOFFStatus	_133	_134	3	34073	
1-05	Energy Efficiency Command (setting)	16811290	EnergyEfficiencyCommand	_133	_134	4	34074	
1-05	Energy Efficiency Command (status)	12616987	EnergyEfficiencyStatus	_133	_134	3	34075	
1-05	Thermostat Status	12616988	ThermoStatus	_133	_134	3	34076	
1-05	Compressor Status	12616989	CompressorStatus	_133	_134	3	34077	
1-05	Indoor Fan Status	12616990	IndoorFanStatus	_133	_134	3	34078	
1-05	Heater Operation Status	12616991	HeaterStatus	_133	_134	3	34079	
1-05	Ventilation Mode (setting)	58754336	VentilationModeCommand	_133	_134	14	34080	
1-05	Ventilation Mode (status)	54560033	VentilationModeStatus	_133	_134	13	34081	
1-05	Ventilation Amount (setting)	58754338	VentilationAmountCommand	_133	_134	14	34082	
1-05	Ventilation Amount (status)	54560035	VentilationAmountStatus	_133	_134	13	34083	
1-06	ON/OFF (setting)	16811521	StartStopCommand	_134	_135	4	34305	set
1-06	ON/OFF (status)	12617218	StartStopStatus	_134	_135	3	34306	Fb
1-06	Alarm Sign	12617219	Alarm	_134	_135	3	34307	
1-06	Error Code	54560260	MalfunctionCode	_134	_135	13	34308	
1-06	Operation Mode (setting)	58754565	AirConModeCommand	_134	_135	14	34309	set
1-06	Operation Mode (status)	54560262	AirConModeStatus	_134	_135	13	34310	Fb
1-06	Airflow Rate (setting)	58754567	AirFlowRateCommand	_134	_135	14	34311	set
1-06	Airflow Rate (status)	54560264	AirFlowRateStatus	_134	_135	13	34312	Fb
1-06	Measured Room Temperature	34313	RoomTemp	_134	_135	0	34313	
1-06	Set Room Temperature	8422922	TempAdjust	_134	_135	2	34314	set
1-06	Filer Limit Sign	12617227	FilterSign	_134	_135	3	34315	
1-06	Filter Limit Sign Reset	21005836	FilterSignReset	_134	_135	5	34316	
1-06	Remote Control Operation (ON/OFF)	21005837	RemoteControlStart	_134	_135	5	34317	
1-06	Remote Control Operation (Operation Mode)	21005838	RemoteControlAirConModeSet	_134	_135	5	34318	
1-06	Remote Control Operation (Set Temperature)	21005840	RemoteControlTempAdjust	_134	_135	5	34320	
1-06	Remote Control Operation (Sub Group Address Control Rejecti	21005841	CL_Rejection	_134	_135	5	34321	
1-06	Elec Total Power	96503315	ElecTotalPower	_134	_135	23	34323	
1-06	Communication Status	12617236	CommunicationStatus	_134	_135	3	34324	
1-06	System Forced OFF	21005845	SystemForcedOff	_134	_135	5	34325	
1-06	Air Direction (setting)	8422934	AirDirectionCommand	_134	_135	2	34326	
1-06	Air Direction (status)	34327	AirDirectionStatus	_134	_135	0	34327	
1-06	Forced Thermostat OFF (setting)	16811544	ForcedThermoOFFCommand	_134	_135	4	34328	
1-06	Forced Thermostat OFF (status)	12617241	ForcedThermoOFFStatus	_134	_135	3	34329	
1-06	Energy Efficiency Command (setting)	16811546	EnergyEfficiencyCommand	_134	_135	4	34330	
1-06	Energy Efficiency Command (status)	12617243	EnergyEfficiencyStatus	_134	_135	3	34331	
1-06	Thermostat Status	12617244	ThermoStatus	_134	_135	3	34332	
1-06	Compressor Status	12617245	CompressorStatus	_134	_135	3	34333	
1-06	Indoor Fan Status	12617246	IndoorFanStatus	_134	_135	3	34334	
1-06	Heater Operation Status	12617247	HeaterStatus	_134	_135	3	34335	
1-06	Ventilation Mode (setting)	58754592	VentilationModeCommand	_134	_135	14	34336	
1-06	Ventilation Mode (status)	54560289	VentilationModeStatus	_134	_135	13	34337	
1-06	Ventilation Amount (setting)	58754594	VentilationAmountCommand	_134	_135	14	34338	
1-06	Ventilation Amount (status)	54560291	VentilationAmountStatus	_134	_135	13	34339	
1-07	ON/OFF (setting)	16811777	StartStopCommand	_135	_136	4	34561	set
1-07	ON/OFF (status)	12617474	StartStopStatus	_135	_136	3	34562	Fb
1-07	Alarm Sign	12617475	Alarm	_135	_136	3	34563	
1-07	Error Code	54560516	MalfunctionCode	_135	_136	13	34564	
1-07	Operation Mode (setting)	58754821	AirConModeCommand	_135	_136	14	34565	set
1-07	Operation Mode (status)	54560518	AirConModeStatus	_135	_136	13	34566	Fb
1-07	Airflow Rate (setting)	58754823	AirFlowRateCommand	_135	_136	14	34567	set
1-07	Airflow Rate (status)	54560520	AirFlowRateStatus	_135	_136	13	34568	Fb
1-07	Measured Room Temperature	34569	RoomTemp	_135	_136	0	34569	
1-07	Set Room Temperature	8423178	TempAdjust	_135	_136	2	34570	set
1-07	Filer Limit Sign	12617483	FilterSign	_135	_136	3	34571	
1-07	Filter Limit Sign Reset	21006092	FilterSignReset	_135	_136	5	34572	
1-07	Remote Control Operation (ON/OFF)	21006093	RemoteControlStart	_135	_136	5	34573	
1-07	Remote Control Operation (Operation Mode)	21006094	RemoteControlAirConModeSet	_135	_136	5	34574	
1-07	Remote Control Operation (Set Temperature)	21006096	RemoteControlTempAdjust	_135	_136	5	34576	
1-07	Remote Control Operation (Sub Group Address Control Rejecti	21006097	CL_Rejection	_135	_136	5	34577	
1-07	Elec Total Power	96503571	ElecTotalPower	_135	_136	23	34579	

1-07	Communication Status	12617492	CommunicationStatus	_135	_136	3	34580	
1-07	System Forced OFF	21006101	SystemForcedOff	_135	_136	5	34581	
1-07	Air Direction (setting)	8423190	AirDirectionCommand	_135	_136	2	34582	
1-07	Air Direction (status)	34583	AirDirectionStatus	_135	_136	0	34583	
1-07	Forced Thermostat OFF (setting)	16811800	ForcedThermoOFFCommand	_135	_136	4	34584	
1-07	Forced Thermostat OFF (status)	12617497	ForcedThermoOFFStatus	_135	_136	3	34585	
1-07	Energy Efficiency Command (setting)	16811802	EnergyEfficiencyCommand	_135	_136	4	34586	
1-07	Energy Efficiency Command (status)	12617499	EnergyEfficiencyStatus	_135	_136	3	34587	
1-07	Thermostat Status	12617500	ThermoStatus	_135	_136	3	34588	
1-07	Compressor Status	12617501	CompressorStatus	_135	_136	3	34589	
1-07	Indoor Fan Status	12617502	IndoorFanStatus	_135	_136	3	34590	
1-07	Heater Operation Status	12617503	HeaterStatus	_135	_136	3	34591	
1-07	Ventilation Mode (setting)	58754848	VentilationModeCommand	_135	_136	14	34592	
1-07	Ventilation Mode (status)	54560545	VentilationModeStatus	_135	_136	13	34593	
1-07	Ventilation Amount (setting)	58754850	VentilationAmountCommand	_135	_136	14	34594	
1-07	Ventilation Amount (status)	54560547	VentilationAmountStatus	_135	_136	13	34595	
1-08	ON/OFF (setting)	16812033	StartStopCommand	_136	_137	4	34817	set
1-08	ON/OFF (status)	12617730	StartStopStatus	_136	_137	3	34818	Fb
1-08	Alarm Sign	12617731	Alarm	_136	_137	3	34819	
1-08	Error Code	54560772	MalfunctionCode	_136	_137	13	34820	
1-08	Operation Mode (setting)	58755077	AirConModeCommand	_136	_137	14	34821	set
1-08	Operation Mode (status)	54560774	AirConModeStatus	_136	_137	13	34822	Fb
1-08	Airflow Rate (setting)	58755079	AirFlowRateCommand	_136	_137	14	34823	set
1-08	Airflow Rate (status)	54560776	AirFlowRateStatus	_136	_137	13	34824	Fb
1-08	Measured Room Temperature	34825	RoomTemp	_136	_137	0	34825	
1-08	Set Room Temperature	8423434	TempAdjust	_136	_137	2	34826	set
1-08	Filer Limit Sign	12617739	FilterSign	_136	_137	3	34827	
1-08	Filter Limit Sign Reset	21006348	FilterSignReset	_136	_137	5	34828	
1-08	Remote Control Operation (ON/OFF)	21006349	RemoteControlStart	_136	_137	5	34829	
1-08	Remote Control Operation (Operation Mode)	21006350	RemoteControlAirConModeSet	_136	_137	5	34830	
1-08	Remote Control Operation (Set Temperature)	21006352	RemoteControlTempAdjust	_136	_137	5	34832	
1-08	Remote Control Operation (Sub Group Address Control Reject)	21006353	CL_Rejection	_136	_137	5	34833	
1-08	Elec Total Power	96503827	ElecTotalPower	_136	_137	23	34835	
1-08	Communication Status	12617748	CommunicationStatus	_136	_137	3	34836	
1-08	System Forced OFF	21006357	SystemForcedOff	_136	_137	5	34837	
1-08	Air Direction (setting)	8423446	AirDirectionCommand	_136	_137	2	34838	
1-08	Air Direction (status)	34839	AirDirectionStatus	_136	_137	0	34839	
1-08	Forced Thermostat OFF (setting)	16812056	ForcedThermoOFFCommand	_136	_137	4	34840	
1-08	Forced Thermostat OFF (status)	12617753	ForcedThermoOFFStatus	_136	_137	3	34841	
1-08	Energy Efficiency Command (setting)	16812058	EnergyEfficiencyCommand	_136	_137	4	34842	
1-08	Energy Efficiency Command (status)	12617755	EnergyEfficiencyStatus	_136	_137	3	34843	
1-08	Thermostat Status	12617756	ThermoStatus	_136	_137	3	34844	
1-08	Compressor Status	12617757	CompressorStatus	_136	_137	3	34845	
1-08	Indoor Fan Status	12617758	IndoorFanStatus	_136	_137	3	34846	
1-08	Heater Operation Status	12617759	HeaterStatus	_136	_137	3	34847	
1-08	Ventilation Mode (setting)	58755104	VentilationModeCommand	_136	_137	14	34848	
1-08	Ventilation Mode (status)	54560801	VentilationModeStatus	_136	_137	13	34849	
1-08	Ventilation Amount (setting)	58755106	VentilationAmountCommand	_136	_137	14	34850	
1-08	Ventilation Amount (status)	54560803	VentilationAmountStatus	_136	_137	13	34851	
1-09	ON/OFF (setting)	16812289	StartStopCommand	_137	_138	4	35073	set
1-09	ON/OFF (status)	12617986	StartStopStatus	_137	_138	3	35074	Fb
1-09	Alarm Sign	12617987	Alarm	_137	_138	3	35075	
1-09	Error Code	54561028	MalfunctionCode	_137	_138	13	35076	
1-09	Operation Mode (setting)	58755333	AirConModeCommand	_137	_138	14	35077	set
1-09	Operation Mode (status)	54561030	AirConModeStatus	_137	_138	13	35078	Fb
1-09	Airflow Rate (setting)	58755335	AirFlowRateCommand	_137	_138	14	35079	set
1-09	Airflow Rate (status)	54561032	AirFlowRateStatus	_137	_138	13	35080	Fb
1-09	Measured Room Temperature	35081	RoomTemp	_137	_138	0	35081	
1-09	Set Room Temperature	8423690	TempAdjust	_137	_138	2	35082	set
1-09	Filer Limit Sign	12617995	FilterSign	_137	_138	3	35083	
1-09	Filter Limit Sign Reset	21006604	FilterSignReset	_137	_138	5	35084	
1-09	Remote Control Operation (ON/OFF)	21006605	RemoteControlStart	_137	_138	5	35085	
1-09	Remote Control Operation (Operation Mode)	21006606	RemoteControlAirConModeSet	_137	_138	5	35086	
1-09	Remote Control Operation (Set Temperature)	21006608	RemoteControlTempAdjust	_137	_138	5	35088	
1-09	Remote Control Operation (Sub Group Address Control Reject)	21006609	CL_Rejection	_137	_138	5	35089	
1-09	Elec Total Power	96504083	ElecTotalPower	_137	_138	23	35091	
1-09	Communication Status	12618004	CommunicationStatus	_137	_138	3	35092	
1-09	System Forced OFF	21006613	SystemForcedOff	_137	_138	5	35093	
1-09	Air Direction (setting)	8423702	AirDirectionCommand	_137	_138	2	35094	

1-09	Air Direction (status)	35095	AirDirectionStatus	_137	_138	0	35095	
1-09	Forced Thermostat OFF (setting)	16812312	ForcedThermoOFFCommand	_137	_138	4	35096	
1-09	Forced Thermostat OFF (status)	12618009	ForcedThermoOFFStatus	_137	_138	3	35097	
1-09	Energy Efficiency Command (setting)	16812314	EnergyEfficiencyCommand	_137	_138	4	35098	
1-09	Energy Efficiency Command (status)	12618011	EnergyEfficiencyStatus	_137	_138	3	35099	
1-09	Thermostat Status	12618012	ThermoStatus	_137	_138	3	35100	
1-09	Compressor Status	12618013	CompressorStatus	_137	_138	3	35101	
1-09	Indoor Fan Status	12618014	IndoorFanStatus	_137	_138	3	35102	
1-09	Heater Operation Status	12618015	HeaterStatus	_137	_138	3	35103	
1-09	Ventilation Mode (setting)	58755360	VentilationModeCommand	_137	_138	14	35104	
1-09	Ventilation Mode (status)	54561057	VentilationModeStatus	_137	_138	13	35105	
1-09	Ventilation Amount (setting)	58755362	VentilationAmountCommand	_137	_138	14	35106	
1-09	Ventilation Amount (status)	54561059	VentilationAmountStatus	_137	_138	13	35107	
1-10	ON/OFF (setting)	16812545	StartStopCommand	_138	_139	4	35329	set
1-10	ON/OFF (status)	12618242	StartStopStatus	_138	_139	3	35330	Fb
1-10	Alarm Sign	12618243	Alarm	_138	_139	3	35331	
1-10	Error Code	54561284	MalfunctionCode	_138	_139	13	35332	
1-10	Operation Mode (setting)	58755589	AirConModeCommand	_138	_139	14	35333	set
1-10	Operation Mode (status)	54561286	AirConModeStatus	_138	_139	13	35334	Fb
1-10	Airflow Rate (setting)	58755591	AirFlowRateCommand	_138	_139	14	35335	set
1-10	Airflow Rate (status)	54561288	AirFlowRateStatus	_138	_139	13	35336	Fb
1-10	Measured Room Temperature	35337	RoomTemp	_138	_139	0	35337	
1-10	Set Room Temperature	8423946	TempAdjust	_138	_139	2	35338	set
1-10	Filer Limit Sign	12618251	FilterSign	_138	_139	3	35339	
1-10	Filter Limit Sign Reset	21006860	FilterSignReset	_138	_139	5	35340	
1-10	Remote Control Operation (ON/OFF)	21006861	RemoteControlStart	_138	_139	5	35341	
1-10	Remote Control Operation (Operation Mode)	21006862	RemoteControlAirConModeSet	_138	_139	5	35342	
1-10	Remote Control Operation (Set Temperature)	21006864	RemoteControlTempAdjust	_138	_139	5	35344	
1-10	Remote Control Operation (Sub Group Address Control Reject)	21006865	CL_Rejection	_138	_139	5	35345	
1-10	Elec Total Power	96504339	ElecTotalPower	_138	_139	23	35347	
1-10	Communication Status	12618260	CommunicationStatus	_138	_139	3	35348	
1-10	System Forced OFF	21006869	SystemForcedOff	_138	_139	5	35349	
1-10	Air Direction (setting)	8423958	AirDirectionCommand	_138	_139	2	35350	
1-10	Air Direction (status)	35351	AirDirectionStatus	_138	_139	0	35351	
1-10	Forced Thermostat OFF (setting)	16812568	ForcedThermoOFFCommand	_138	_139	4	35352	
1-10	Forced Thermostat OFF (status)	12618265	ForcedThermoOFFStatus	_138	_139	3	35353	
1-10	Energy Efficiency Command (setting)	16812570	EnergyEfficiencyCommand	_138	_139	4	35354	
1-10	Energy Efficiency Command (status)	12618267	EnergyEfficiencyStatus	_138	_139	3	35355	
1-10	Thermostat Status	12618268	ThermoStatus	_138	_139	3	35356	
1-10	Compressor Status	12618269	CompressorStatus	_138	_139	3	35357	
1-10	Indoor Fan Status	12618270	IndoorFanStatus	_138	_139	3	35358	
1-10	Heater Operation Status	12618271	HeaterStatus	_138	_139	3	35359	
1-10	Ventilation Mode (setting)	58755616	VentilationModeCommand	_138	_139	14	35360	
1-10	Ventilation Mode (status)	54561313	VentilationModeStatus	_138	_139	13	35361	
1-10	Ventilation Amount (setting)	58755618	VentilationAmountCommand	_138	_139	14	35362	
1-10	Ventilation Amount (status)	54561315	VentilationAmountStatus	_138	_139	13	35363	
1-11	ON/OFF (setting)	16812801	StartStopCommand	_139	_140	4	35585	set
1-11	ON/OFF (status)	12618498	StartStopStatus	_139	_140	3	35586	Fb
1-11	Alarm Sign	12618499	Alarm	_139	_140	3	35587	
1-11	Error Code	54561540	MalfunctionCode	_139	_140	13	35588	
1-11	Operation Mode (setting)	58755845	AirConModeCommand	_139	_140	14	35589	set
1-11	Operation Mode (status)	54561542	AirConModeStatus	_139	_140	13	35590	Fb
1-11	Airflow Rate (setting)	58755847	AirFlowRateCommand	_139	_140	14	35591	set
1-11	Airflow Rate (status)	54561544	AirFlowRateStatus	_139	_140	13	35592	Fb
1-11	Measured Room Temperature	35593	RoomTemp	_139	_140	0	35593	
1-11	Set Room Temperature	8424202	TempAdjust	_139	_140	2	35594	set
1-11	Filer Limit Sign	12618507	FilterSign	_139	_140	3	35595	
1-11	Filter Limit Sign Reset	21007116	FilterSignReset	_139	_140	5	35596	
1-11	Remote Control Operation (ON/OFF)	21007117	RemoteControlStart	_139	_140	5	35597	
1-11	Remote Control Operation (Operation Mode)	21007118	RemoteControlAirConModeSet	_139	_140	5	35598	
1-11	Remote Control Operation (Set Temperature)	21007120	RemoteControlTempAdjust	_139	_140	5	35600	
1-11	Remote Control Operation (Sub Group Address Control Reject)	21007121	CL_Rejection	_139	_140	5	35601	
1-11	Elec Total Power	96504595	ElecTotalPower	_139	_140	23	35603	
1-11	Communication Status	12618516	CommunicationStatus	_139	_140	3	35604	
1-11	System Forced OFF	21007125	SystemForcedOff	_139	_140	5	35605	
1-11	Air Direction (setting)	8424214	AirDirectionCommand	_139	_140	2	35606	
1-11	Air Direction (status)	35607	AirDirectionStatus	_139	_140	0	35607	
1-11	Forced Thermostat OFF (setting)	16812824	ForcedThermoOFFCommand	_139	_140	4	35608	
1-11	Forced Thermostat OFF (status)	12618521	ForcedThermoOFFStatus	_139	_140	3	35609	

1-11	Energy Efficiency Command (setting)	16812826	EnergyEfficiencyCommand	_139	_140	4	35610	
1-11	Energy Efficiency Command (status)	12618523	EnergyEfficiencyStatus	_139	_140	3	35611	
1-11	Thermostat Status	12618524	ThermoStatus	_139	_140	3	35612	
1-11	Compressor Status	12618525	CompressorStatus	_139	_140	3	35613	
1-11	Indoor Fan Status	12618526	IndoorFanStatus	_139	_140	3	35614	
1-11	Heater Operation Status	12618527	HeaterStatus	_139	_140	3	35615	
1-11	Ventilation Mode (setting)	58755872	VentilationModeCommand	_139	_140	14	35616	
1-11	Ventilation Mode (status)	54561569	VentilationModeStatus	_139	_140	13	35617	
1-11	Ventilation Amount (setting)	58755874	VentilationAmountCommand	_139	_140	14	35618	
1-11	Ventilation Amount (status)	54561571	VentilationAmountStatus	_139	_140	13	35619	
1-12	ON/OFF (setting)	16813057	StartStopCommand	_140	_141	4	35841	set
1-12	ON/OFF (status)	12618754	StartStopStatus	_140	_141	3	35842	Fb
1-12	Alarm Sign	12618755	Alarm	_140	_141	3	35843	
1-12	Error Code	54561796	MalfunctionCode	_140	_141	13	35844	
1-12	Operation Mode (setting)	58756101	AirConModeCommand	_140	_141	14	35845	set
1-12	Operation Mode (status)	54561798	AirConModeStatus	_140	_141	13	35846	Fb
1-12	Airflow Rate (setting)	58756103	AirFlowRateCommand	_140	_141	14	35847	set
1-12	Airflow Rate (status)	54561800	AirFlowRateStatus	_140	_141	13	35848	Fb
1-12	Measured Room Temperature	35849	RoomTemp	_140	_141	0	35849	
1-12	Set Room Temperature	8424458	TempAdjust	_140	_141	2	35850	set
1-12	Filer Limit Sign	12618763	FilterSign	_140	_141	3	35851	
1-12	Filter Limit Sign Reset	21007372	FilterSignReset	_140	_141	5	35852	
1-12	Remote Control Operation (ON/OFF)	21007373	RemoteControlStart	_140	_141	5	35853	
1-12	Remote Control Operation (Operation Mode)	21007374	RemoteControlAirConModeSet	_140	_141	5	35854	
1-12	Remote Control Operation (Set Temperature)	21007376	RemoteControlTempAdjust	_140	_141	5	35856	
1-12	Remote Control Operation (Sub Group Address Control Reject)	21007377	CL_Rejection	_140	_141	5	35857	
1-12	Elec Total Power	96504851	ElecTotalPower	_140	_141	23	35859	
1-12	Communication Status	12618772	CommunicationStatus	_140	_141	3	35860	
1-12	System Forced OFF	21007381	SystemForcedOff	_140	_141	5	35861	
1-12	Air Direction (setting)	8424470	AirDirectionCommand	_140	_141	2	35862	
1-12	Air Direction (status)	35863	AirDirectionStatus	_140	_141	0	35863	
1-12	Forced Thermostat OFF (setting)	16813080	ForcedThermoOFFCommand	_140	_141	4	35864	
1-12	Forced Thermostat OFF (status)	12618777	ForcedThermoOFFStatus	_140	_141	3	35865	
1-12	Energy Efficiency Command (setting)	16813082	EnergyEfficiencyCommand	_140	_141	4	35866	
1-12	Energy Efficiency Command (status)	12618779	EnergyEfficiencyStatus	_140	_141	3	35867	
1-12	Thermostat Status	12618780	ThermoStatus	_140	_141	3	35868	
1-12	Compressor Status	12618781	CompressorStatus	_140	_141	3	35869	
1-12	Indoor Fan Status	12618782	IndoorFanStatus	_140	_141	3	35870	
1-12	Heater Operation Status	12618783	HeaterStatus	_140	_141	3	35871	
1-12	Ventilation Mode (setting)	58756128	VentilationModeCommand	_140	_141	14	35872	
1-12	Ventilation Mode (status)	54561825	VentilationModeStatus	_140	_141	13	35873	
1-12	Ventilation Amount (setting)	58756130	VentilationAmountCommand	_140	_141	14	35874	
1-12	Ventilation Amount (status)	54561827	VentilationAmountStatus	_140	_141	13	35875	
1-13	ON/OFF (setting)	16813313	StartStopCommand	_141	_142	4	36097	set
1-13	ON/OFF (status)	12619010	StartStopStatus	_141	_142	3	36098	Fb
1-13	Alarm Sign	12619011	Alarm	_141	_142	3	36099	
1-13	Error Code	54562052	MalfunctionCode	_141	_142	13	36100	
1-13	Operation Mode (setting)	58756357	AirConModeCommand	_141	_142	14	36101	set
1-13	Operation Mode (status)	54562054	AirConModeStatus	_141	_142	13	36102	Fb
1-13	Airflow Rate (setting)	58756359	AirFlowRateCommand	_141	_142	14	36103	set
1-13	Airflow Rate (status)	54562056	AirFlowRateStatus	_141	_142	13	36104	Fb
1-13	Measured Room Temperature	36105	RoomTemp	_141	_142	0	36105	
1-13	Set Room Temperature	8424714	TempAdjust	_141	_142	2	36106	set
1-13	Filer Limit Sign	12619019	FilterSign	_141	_142	3	36107	
1-13	Filter Limit Sign Reset	21007628	FilterSignReset	_141	_142	5	36108	
1-13	Remote Control Operation (ON/OFF)	21007629	RemoteControlStart	_141	_142	5	36109	
1-13	Remote Control Operation (Operation Mode)	21007630	RemoteControlAirConModeSet	_141	_142	5	36110	
1-13	Remote Control Operation (Set Temperature)	21007632	RemoteControlTempAdjust	_141	_142	5	36112	
1-13	Remote Control Operation (Sub Group Address Control Reject)	21007633	CL_Rejection	_141	_142	5	36113	
1-13	Elec Total Power	96505107	ElecTotalPower	_141	_142	23	36115	
1-13	Communication Status	12619028	CommunicationStatus	_141	_142	3	36116	
1-13	System Forced OFF	21007637	SystemForcedOff	_141	_142	5	36117	
1-13	Air Direction (setting)	8424726	AirDirectionCommand	_141	_142	2	36118	
1-13	Air Direction (status)	36119	AirDirectionStatus	_141	_142	0	36119	
1-13	Forced Thermostat OFF (setting)	16813336	ForcedThermoOFFCommand	_141	_142	4	36120	
1-13	Forced Thermostat OFF (status)	12619033	ForcedThermoOFFStatus	_141	_142	3	36121	
1-13	Energy Efficiency Command (setting)	16813338	EnergyEfficiencyCommand	_141	_142	4	36122	
1-13	Energy Efficiency Command (status)	12619035	EnergyEfficiencyStatus	_141	_142	3	36123	
1-13	Thermostat Status	12619036	ThermoStatus	_141	_142	3	36124	

1-13	Compressor Status	12619037	CompressorStatus	_141	_142	3	36125	
1-13	Indoor Fan Status	12619038	IndoorFanStatus	_141	_142	3	36126	
1-13	Heater Operation Status	12619039	HeaterStatus	_141	_142	3	36127	
1-13	Ventilation Mode (setting)	58756384	VentilationModeCommand	_141	_142	14	36128	
1-13	Ventilation Mode (status)	54562081	VentilationModeStatus	_141	_142	13	36129	
1-13	Ventilation Amount (setting)	58756386	VentilationAmountCommand	_141	_142	14	36130	
1-13	Ventilation Amount (status)	54562083	VentilationAmountStatus	_141	_142	13	36131	
1-14	ON/OFF (setting)	16813569	StartStopCommand	_142	_143	4	36353	set
1-14	ON/OFF (status)	12619266	StartStopStatus	_142	_143	3	36354	Fb
1-14	Alarm Sign	12619267	Alarm	_142	_143	3	36355	
1-14	Error Code	54562308	MalfunctionCode	_142	_143	13	36356	
1-14	Operation Mode (setting)	58756613	AirConModeCommand	_142	_143	14	36357	set
1-14	Operation Mode (status)	54562310	AirConModeStatus	_142	_143	13	36358	Fb
1-14	Airflow Rate (setting)	58756615	AirFlowRateCommand	_142	_143	14	36359	set
1-14	Airflow Rate (status)	54562312	AirFlowRateStatus	_142	_143	13	36360	Fb
1-14	Measured Room Temperature	36361	RoomTemp	_142	_143	0	36361	
1-14	Set Room Temperature	8424970	TempAdjust	_142	_143	2	36362	set
1-14	Filer Limit Sign	12619275	FilterSign	_142	_143	3	36363	
1-14	Filter Limit Sign Reset	21007884	FilterSignReset	_142	_143	5	36364	
1-14	Remote Control Operation (ON/OFF)	21007885	RemoteControlStart	_142	_143	5	36365	
1-14	Remote Control Operation (Operation Mode)	21007886	RemoteControlAirConModeSet	_142	_143	5	36366	
1-14	Remote Control Operation (Set Temperature)	21007888	RemoteControlTempAdjust	_142	_143	5	36368	
1-14	Remote Control Operation (Sub Group Address Control Reject)	21007889	CL_Rejection	_142	_143	5	36369	
1-14	Elec Total Power	96505363	ElecTotalPower	_142	_143	23	36371	
1-14	Communication Status	12619284	CommunicationStatus	_142	_143	3	36372	
1-14	System Forced OFF	21007893	SystemForcedOff	_142	_143	5	36373	
1-14	Air Direction (setting)	8424982	AirDirectionCommand	_142	_143	2	36374	
1-14	Air Direction (status)	36375	AirDirectionStatus	_142	_143	0	36375	
1-14	Forced Thermostat OFF (setting)	16813592	ForcedThermoOFFCommand	_142	_143	4	36376	
1-14	Forced Thermostat OFF (status)	12619289	ForcedThermoOFFStatus	_142	_143	3	36377	
1-14	Energy Efficiency Command (setting)	16813594	EnergyEfficiencyCommand	_142	_143	4	36378	
1-14	Energy Efficiency Command (status)	12619291	EnergyEfficiencyStatus	_142	_143	3	36379	
1-14	Thermostat Status	12619292	ThermoStatus	_142	_143	3	36380	
1-14	Compressor Status	12619293	CompressorStatus	_142	_143	3	36381	
1-14	Indoor Fan Status	12619294	IndoorFanStatus	_142	_143	3	36382	
1-14	Heater Operation Status	12619295	HeaterStatus	_142	_143	3	36383	
1-14	Ventilation Mode (setting)	58756640	VentilationModeCommand	_142	_143	14	36384	
1-14	Ventilation Mode (status)	54562337	VentilationModeStatus	_142	_143	13	36385	
1-14	Ventilation Amount (setting)	58756642	VentilationAmountCommand	_142	_143	14	36386	
1-14	Ventilation Amount (status)	54562339	VentilationAmountStatus	_142	_143	13	36387	
1-15	ON/OFF (setting)	16813825	StartStopCommand	_143	_144	4	36609	set
1-15	ON/OFF (status)	12619522	StartStopStatus	_143	_144	3	36610	Fb
1-15	Alarm Sign	12619523	Alarm	_143	_144	3	36611	
1-15	Error Code	54562564	MalfunctionCode	_143	_144	13	36612	
1-15	Operation Mode (setting)	58756869	AirConModeCommand	_143	_144	14	36613	set
1-15	Operation Mode (status)	54562566	AirConModeStatus	_143	_144	13	36614	Fb
1-15	Airflow Rate (setting)	58756871	AirFlowRateCommand	_143	_144	14	36615	set
1-15	Airflow Rate (status)	54562568	AirFlowRateStatus	_143	_144	13	36616	Fb
1-15	Measured Room Temperature	36617	RoomTemp	_143	_144	0	36617	
1-15	Set Room Temperature	8425226	TempAdjust	_143	_144	2	36618	set
1-15	Filer Limit Sign	12619531	FilterSign	_143	_144	3	36619	
1-15	Filter Limit Sign Reset	21008140	FilterSignReset	_143	_144	5	36620	
1-15	Remote Control Operation (ON/OFF)	21008141	RemoteControlStart	_143	_144	5	36621	
1-15	Remote Control Operation (Operation Mode)	21008142	RemoteControlAirConModeSet	_143	_144	5	36622	
1-15	Remote Control Operation (Set Temperature)	21008144	RemoteControlTempAdjust	_143	_144	5	36624	
1-15	Remote Control Operation (Sub Group Address Control Reject)	21008145	CL_Rejection	_143	_144	5	36625	
1-15	Elec Total Power	96505619	ElecTotalPower	_143	_144	23	36627	
1-15	Communication Status	12619540	CommunicationStatus	_143	_144	3	36628	
1-15	System Forced OFF	21008149	SystemForcedOff	_143	_144	5	36629	
1-15	Air Direction (setting)	8425238	AirDirectionCommand	_143	_144	2	36630	
1-15	Air Direction (status)	36631	AirDirectionStatus	_143	_144	0	36631	
1-15	Forced Thermostat OFF (setting)	16813848	ForcedThermoOFFCommand	_143	_144	4	36632	
1-15	Forced Thermostat OFF (status)	12619545	ForcedThermoOFFStatus	_143	_144	3	36633	
1-15	Energy Efficiency Command (setting)	16813850	EnergyEfficiencyCommand	_143	_144	4	36634	
1-15	Energy Efficiency Command (status)	12619547	EnergyEfficiencyStatus	_143	_144	3	36635	
1-15	Thermostat Status	12619548	ThermoStatus	_143	_144	3	36636	
1-15	Compressor Status	12619549	CompressorStatus	_143	_144	3	36637	
1-15	Indoor Fan Status	12619550	IndoorFanStatus	_143	_144	3	36638	
1-15	Heater Operation Status	12619551	HeaterStatus	_143	_144	3	36639	

1-15	Ventilation Mode (setting)	58756896	VentilationModeCommand	_143	_144	14	36640	
1-15	Ventilation Mode (status)	54562593	VentilationModeStatus	_143	_144	13	36641	
1-15	Ventilation Amount (setting)	58756898	VentilationAmountCommand	_143	_144	14	36642	
1-15	Ventilation Amount (status)	54562595	VentilationAmountStatus	_143	_144	13	36643	
2-00	ON/OFF (setting)	16814081	StartStopCommand	_144	_145	4	36865	set
2-00	ON/OFF (status)	12619778	StartStopStatus	_144	_145	3	36866	Fb
2-00	Alarm Sign	12619779	Alarm	_144	_145	3	36867	
2-00	Error Code	54562820	MalfunctionCode	_144	_145	13	36868	
2-00	Operation Mode (setting)	58757125	AirConModeCommand	_144	_145	14	36869	set
2-00	Operation Mode (status)	54562822	AirConModeStatus	_144	_145	13	36870	Fb
2-00	Airflow Rate (setting)	58757127	AirFlowRateCommand	_144	_145	14	36871	set
2-00	Airflow Rate (status)	54562824	AirFlowRateStatus	_144	_145	13	36872	Fb
2-00	Measured Room Temperature	36873	RoomTemp	_144	_145	0	36873	
2-00	Set Room Temperature	8425482	TempAdjust	_144	_145	2	36874	set
2-00	Filer Limit Sign	12619787	FilterSign	_144	_145	3	36875	
2-00	Filter Limit Sign Reset	21008396	FilterSignReset	_144	_145	5	36876	
2-00	Remote Control Operation (ON/OFF)	21008397	RemoteControlStart	_144	_145	5	36877	
2-00	Remote Control Operation (Operation Mode)	21008398	RemoteControlAirConModeSet	_144	_145	5	36878	
2-00	Remote Control Operation (Set Temperature)	21008400	RemoteControlTempAdjust	_144	_145	5	36880	
2-00	Remote Control Operation (Sub Group Address Control Reject)	21008401	CL_Rejection	_144	_145	5	36881	
2-00	Elec Total Power	96505875	ElecTotalPower	_144	_145	23	36883	
2-00	Communication Status	12619796	CommunicationStatus	_144	_145	3	36884	
2-00	System Forced OFF	21008405	SystemForcedOff	_144	_145	5	36885	
2-00	Air Direction (setting)	8425494	AirDirectionCommand	_144	_145	2	36886	
2-00	Air Direction (status)	36887	AirDirectionStatus	_144	_145	0	36887	
2-00	Forced Thermostat OFF (setting)	16814104	ForcedThermoOFFCommand	_144	_145	4	36888	
2-00	Forced Thermostat OFF (status)	12619801	ForcedThermoOFFStatus	_144	_145	3	36889	
2-00	Energy Efficiency Command (setting)	16814106	EnergyEfficiencyCommand	_144	_145	4	36890	
2-00	Energy Efficiency Command (status)	12619803	EnergyEfficiencyStatus	_144	_145	3	36891	
2-00	Thermostat Status	12619804	ThermoStatus	_144	_145	3	36892	
2-00	Compressor Status	12619805	CompressorStatus	_144	_145	3	36893	
2-00	Indoor Fan Status	12619806	IndoorFanStatus	_144	_145	3	36894	
2-00	Heater Operation Status	12619807	HeaterStatus	_144	_145	3	36895	
2-00	Ventilation Mode (setting)	58757152	VentilationModeCommand	_144	_145	14	36896	
2-00	Ventilation Mode (status)	54562849	VentilationModeStatus	_144	_145	13	36897	
2-00	Ventilation Amount (setting)	58757154	VentilationAmountCommand	_144	_145	14	36898	
2-00	Ventilation Amount (status)	54562851	VentilationAmountStatus	_144	_145	13	36899	
2-01	ON/OFF (setting)	16814337	StartStopCommand	_145	_146	4	37121	set
2-01	ON/OFF (status)	12620034	StartStopStatus	_145	_146	3	37122	Fb
2-01	Alarm Sign	12620035	Alarm	_145	_146	3	37123	
2-01	Error Code	54563076	MalfunctionCode	_145	_146	13	37124	
2-01	Operation Mode (setting)	58757381	AirConModeCommand	_145	_146	14	37125	set
2-01	Operation Mode (status)	54563078	AirConModeStatus	_145	_146	13	37126	Fb
2-01	Airflow Rate (setting)	58757383	AirFlowRateCommand	_145	_146	14	37127	set
2-01	Airflow Rate (status)	54563080	AirFlowRateStatus	_145	_146	13	37128	Fb
2-01	Measured Room Temperature	37129	RoomTemp	_145	_146	0	37129	
2-01	Set Room Temperature	8425738	TempAdjust	_145	_146	2	37130	set
2-01	Filer Limit Sign	12620043	FilterSign	_145	_146	3	37131	
2-01	Filter Limit Sign Reset	21008652	FilterSignReset	_145	_146	5	37132	
2-01	Remote Control Operation (ON/OFF)	21008653	RemoteControlStart	_145	_146	5	37133	
2-01	Remote Control Operation (Operation Mode)	21008654	RemoteControlAirConModeSet	_145	_146	5	37134	
2-01	Remote Control Operation (Set Temperature)	21008656	RemoteControlTempAdjust	_145	_146	5	37136	
2-01	Remote Control Operation (Sub Group Address Control Reject)	21008657	CL_Rejection	_145	_146	5	37137	
2-01	Elec Total Power	96506131	ElecTotalPower	_145	_146	23	37139	
2-01	Communication Status	12620052	CommunicationStatus	_145	_146	3	37140	
2-01	System Forced OFF	21008661	SystemForcedOff	_145	_146	5	37141	
2-01	Air Direction (setting)	8425750	AirDirectionCommand	_145	_146	2	37142	
2-01	Air Direction (status)	37143	AirDirectionStatus	_145	_146	0	37143	
2-01	Forced Thermostat OFF (setting)	16814360	ForcedThermoOFFCommand	_145	_146	4	37144	
2-01	Forced Thermostat OFF (status)	12620057	ForcedThermoOFFStatus	_145	_146	3	37145	
2-01	Energy Efficiency Command (setting)	16814362	EnergyEfficiencyCommand	_145	_146	4	37146	
2-01	Energy Efficiency Command (status)	12620059	EnergyEfficiencyStatus	_145	_146	3	37147	
2-01	Thermostat Status	12620060	ThermoStatus	_145	_146	3	37148	
2-01	Compressor Status	12620061	CompressorStatus	_145	_146	3	37149	
2-01	Indoor Fan Status	12620062	IndoorFanStatus	_145	_146	3	37150	
2-01	Heater Operation Status	12620063	HeaterStatus	_145	_146	3	37151	
2-01	Ventilation Mode (setting)	58757408	VentilationModeCommand	_145	_146	14	37152	
2-01	Ventilation Mode (status)	54563105	VentilationModeStatus	_145	_146	13	37153	
2-01	Ventilation Amount (setting)	58757410	VentilationAmountCommand	_145	_146	14	37154	

2-01	Ventilation Amount (status)	54563107	VentilationAmountStatus	_145	_146	13	37155	
2-02	ON/OFF (setting)	16814593	StartStopCommand	_146	_147	4	37377	set
2-02	ON/OFF (status)	12620290	StartStopStatus	_146	_147	3	37378	Fb
2-02	Alarm Sign	12620291	Alarm	_146	_147	3	37379	
2-02	Error Code	54563332	MalfunctionCode	_146	_147	13	37380	
2-02	Operation Mode (setting)	58757637	AirConModeCommand	_146	_147	14	37381	set
2-02	Operation Mode (status)	54563334	AirConModeStatus	_146	_147	13	37382	Fb
2-02	Airflow Rate (setting)	58757639	AirFlowRateCommand	_146	_147	14	37383	set
2-02	Airflow Rate (status)	54563336	AirFlowRateStatus	_146	_147	13	37384	Fb
2-02	Measured Room Temperature	37385	RoomTemp	_146	_147	0	37385	
2-02	Set Room Temperature	8425994	TempAdjust	_146	_147	2	37386	set
2-02	Filer Limit Sign	12620299	FilterSign	_146	_147	3	37387	
2-02	Filter Limit Sign Reset	21008908	FilterSignReset	_146	_147	5	37388	
2-02	Remote Control Operation (ON/OFF)	21008909	RemoteControlStart	_146	_147	5	37389	
2-02	Remote Control Operation (Operation Mode)	21008910	RemoteControlAirConModeSet	_146	_147	5	37390	
2-02	Remote Control Operation (Set Temperature)	21008912	RemoteControlTempAdjust	_146	_147	5	37392	
2-02	Remote Control Operation (Sub Group Address Control Reject)	21008913	CL_Rejection	_146	_147	5	37393	
2-02	Elec Total Power	96506387	ElecTotalPower	_146	_147	23	37395	
2-02	Communication Status	12620308	CommunicationStatus	_146	_147	3	37396	
2-02	System Forced OFF	21008917	SystemForcedOff	_146	_147	5	37397	
2-02	Air Direction (setting)	8426006	AirDirectionCommand	_146	_147	2	37398	
2-02	Air Direction (status)	37399	AirDirectionStatus	_146	_147	0	37399	
2-02	Forced Thermostat OFF (setting)	16814616	ForcedThermoOFFCommand	_146	_147	4	37400	
2-02	Forced Thermostat OFF (status)	12620313	ForcedThermoOFFStatus	_146	_147	3	37401	
2-02	Energy Efficiency Command (setting)	16814618	EnergyEfficiencyCommand	_146	_147	4	37402	
2-02	Energy Efficiency Command (status)	12620315	EnergyEfficiencyStatus	_146	_147	3	37403	
2-02	Thermostat Status	12620316	ThermoStatus	_146	_147	3	37404	
2-02	Compressor Status	12620317	CompressorStatus	_146	_147	3	37405	
2-02	Indoor Fan Status	12620318	IndoorFanStatus	_146	_147	3	37406	
2-02	Heater Operation Status	12620319	HeaterStatus	_146	_147	3	37407	
2-02	Ventilation Mode (setting)	58757664	VentilationModeCommand	_146	_147	14	37408	
2-02	Ventilation Mode (status)	54563361	VentilationModeStatus	_146	_147	13	37409	
2-02	Ventilation Amount (setting)	58757666	VentilationAmountCommand	_146	_147	14	37410	
2-02	Ventilation Amount (status)	54563363	VentilationAmountStatus	_146	_147	13	37411	
2-03	ON/OFF (setting)	16814849	StartStopCommand	_147	_148	4	37633	set
2-03	ON/OFF (status)	12620546	StartStopStatus	_147	_148	3	37634	Fb
2-03	Alarm Sign	12620547	Alarm	_147	_148	3	37635	
2-03	Error Code	54563588	MalfunctionCode	_147	_148	13	37636	
2-03	Operation Mode (setting)	58757893	AirConModeCommand	_147	_148	14	37637	set
2-03	Operation Mode (status)	54563590	AirConModeStatus	_147	_148	13	37638	Fb
2-03	Airflow Rate (setting)	58757895	AirFlowRateCommand	_147	_148	14	37639	set
2-03	Airflow Rate (status)	54563592	AirFlowRateStatus	_147	_148	13	37640	Fb
2-03	Measured Room Temperature	37641	RoomTemp	_147	_148	0	37641	
2-03	Set Room Temperature	8426250	TempAdjust	_147	_148	2	37642	set
2-03	Filer Limit Sign	12620555	FilterSign	_147	_148	3	37643	
2-03	Filter Limit Sign Reset	21009164	FilterSignReset	_147	_148	5	37644	
2-03	Remote Control Operation (ON/OFF)	21009165	RemoteControlStart	_147	_148	5	37645	
2-03	Remote Control Operation (Operation Mode)	21009166	RemoteControlAirConModeSet	_147	_148	5	37646	
2-03	Remote Control Operation (Set Temperature)	21009168	RemoteControlTempAdjust	_147	_148	5	37648	
2-03	Remote Control Operation (Sub Group Address Control Reject)	21009169	CL_Rejection	_147	_148	5	37649	
2-03	Elec Total Power	96506643	ElecTotalPower	_147	_148	23	37651	
2-03	Communication Status	12620564	CommunicationStatus	_147	_148	3	37652	
2-03	System Forced OFF	21009173	SystemForcedOff	_147	_148	5	37653	
2-03	Air Direction (setting)	8426262	AirDirectionCommand	_147	_148	2	37654	
2-03	Air Direction (status)	37655	AirDirectionStatus	_147	_148	0	37655	
2-03	Forced Thermostat OFF (setting)	16814872	ForcedThermoOFFCommand	_147	_148	4	37656	
2-03	Forced Thermostat OFF (status)	12620569	ForcedThermoOFFStatus	_147	_148	3	37657	
2-03	Energy Efficiency Command (setting)	16814874	EnergyEfficiencyCommand	_147	_148	4	37658	
2-03	Energy Efficiency Command (status)	12620571	EnergyEfficiencyStatus	_147	_148	3	37659	
2-03	Thermostat Status	12620572	ThermoStatus	_147	_148	3	37660	
2-03	Compressor Status	12620573	CompressorStatus	_147	_148	3	37661	
2-03	Indoor Fan Status	12620574	IndoorFanStatus	_147	_148	3	37662	
2-03	Heater Operation Status	12620575	HeaterStatus	_147	_148	3	37663	
2-03	Ventilation Mode (setting)	58757920	VentilationModeCommand	_147	_148	14	37664	
2-03	Ventilation Mode (status)	54563617	VentilationModeStatus	_147	_148	13	37665	
2-03	Ventilation Amount (setting)	58757922	VentilationAmountCommand	_147	_148	14	37666	
2-03	Ventilation Amount (status)	54563619	VentilationAmountStatus	_147	_148	13	37667	
2-04	ON/OFF (setting)	16815105	StartStopCommand	_148	_149	4	37889	set
2-04	ON/OFF (status)	12620802	StartStopStatus	_148	_149	3	37890	Fb

2-04	Alarm Sign	12620803	Alarm	_148	_149	3	37891	
2-04	Error Code	54563844	MalfunctionCode	_148	_149	13	37892	
2-04	Operation Mode (setting)	58758149	AirConModeCommand	_148	_149	14	37893	set
2-04	Operation Mode (status)	54563846	AirConModeStatus	_148	_149	13	37894	Fb
2-04	Airflow Rate (setting)	58758151	AirFlowRateCommand	_148	_149	14	37895	set
2-04	Airflow Rate (status)	54563848	AirFlowRateStatus	_148	_149	13	37896	Fb
2-04	Measured Room Temperature	37897	RoomTemp	_148	_149	0	37897	
2-04	Set Room Temperature	8426506	TempAdjust	_148	_149	2	37898	set
2-04	Filer Limit Sign	12620811	FilterSign	_148	_149	3	37899	
2-04	Filter Limit Sign Reset	21009420	FilterSignReset	_148	_149	5	37900	
2-04	Remote Control Operation (ON/OFF)	21009421	RemoteControlStart	_148	_149	5	37901	
2-04	Remote Control Operation (Operation Mode)	21009422	RemoteControlAirConModeSet	_148	_149	5	37902	
2-04	Remote Control Operation (Set Temperature)	21009424	RemoteControlTempAdjust	_148	_149	5	37904	
2-04	Remote Control Operation (Sub Group Address Control Reject)	21009425	CL_Rejection	_148	_149	5	37905	
2-04	Elec Total Power	96506899	ElecTotalPower	_148	_149	23	37907	
2-04	Communication Status	12620820	CommunicationStatus	_148	_149	3	37908	
2-04	System Forced OFF	21009429	SystemForcedOff	_148	_149	5	37909	
2-04	Air Direction (setting)	8426518	AirDirectionCommand	_148	_149	2	37910	
2-04	Air Direction (status)	37911	AirDirectionStatus	_148	_149	0	37911	
2-04	Forced Thermostat OFF (setting)	16815128	ForcedThermoOFFCommand	_148	_149	4	37912	
2-04	Forced Thermostat OFF (status)	12620825	ForcedThermoOFFStatus	_148	_149	3	37913	
2-04	Energy Efficiency Command (setting)	16815130	EnergyEfficiencyCommand	_148	_149	4	37914	
2-04	Energy Efficiency Command (status)	12620827	EnergyEfficiencyStatus	_148	_149	3	37915	
2-04	Thermostat Status	12620828	ThermoStatus	_148	_149	3	37916	
2-04	Compressor Status	12620829	CompressorStatus	_148	_149	3	37917	
2-04	Indoor Fan Status	12620830	IndoorFanStatus	_148	_149	3	37918	
2-04	Heater Operation Status	12620831	HeaterStatus	_148	_149	3	37919	
2-04	Ventilation Mode (setting)	58758176	VentilationModeCommand	_148	_149	14	37920	
2-04	Ventilation Mode (status)	54563873	VentilationModeStatus	_148	_149	13	37921	
2-04	Ventilation Amount (setting)	58758178	VentilationAmountCommand	_148	_149	14	37922	
2-04	Ventilation Amount (status)	54563875	VentilationAmountStatus	_148	_149	13	37923	
2-05	ON/OFF (setting)	16815361	StartStopCommand	_149	_150	4	38145	set
2-05	ON/OFF (status)	12621058	StartStopStatus	_149	_150	3	38146	Fb
2-05	Alarm Sign	12621059	Alarm	_149	_150	3	38147	
2-05	Error Code	54564100	MalfunctionCode	_149	_150	13	38148	
2-05	Operation Mode (setting)	58758405	AirConModeCommand	_149	_150	14	38149	set
2-05	Operation Mode (status)	54564102	AirConModeStatus	_149	_150	13	38150	Fb
2-05	Airflow Rate (setting)	58758407	AirFlowRateCommand	_149	_150	14	38151	set
2-05	Airflow Rate (status)	54564104	AirFlowRateStatus	_149	_150	13	38152	Fb
2-05	Measured Room Temperature	38153	RoomTemp	_149	_150	0	38153	
2-05	Set Room Temperature	8426762	TempAdjust	_149	_150	2	38154	set
2-05	Filer Limit Sign	12621067	FilterSign	_149	_150	3	38155	
2-05	Filter Limit Sign Reset	21009676	FilterSignReset	_149	_150	5	38156	
2-05	Remote Control Operation (ON/OFF)	21009677	RemoteControlStart	_149	_150	5	38157	
2-05	Remote Control Operation (Operation Mode)	21009678	RemoteControlAirConModeSet	_149	_150	5	38158	
2-05	Remote Control Operation (Set Temperature)	21009680	RemoteControlTempAdjust	_149	_150	5	38160	
2-05	Remote Control Operation (Sub Group Address Control Reject)	21009681	CL_Rejection	_149	_150	5	38161	
2-05	Elec Total Power	96507155	ElecTotalPower	_149	_150	23	38163	
2-05	Communication Status	12621076	CommunicationStatus	_149	_150	3	38164	
2-05	System Forced OFF	21009685	SystemForcedOff	_149	_150	5	38165	
2-05	Air Direction (setting)	8426774	AirDirectionCommand	_149	_150	2	38166	
2-05	Air Direction (status)	38167	AirDirectionStatus	_149	_150	0	38167	
2-05	Forced Thermostat OFF (setting)	16815384	ForcedThermoOFFCommand	_149	_150	4	38168	
2-05	Forced Thermostat OFF (status)	12621081	ForcedThermoOFFStatus	_149	_150	3	38169	
2-05	Energy Efficiency Command (setting)	16815386	EnergyEfficiencyCommand	_149	_150	4	38170	
2-05	Energy Efficiency Command (status)	12621083	EnergyEfficiencyStatus	_149	_150	3	38171	
2-05	Thermostat Status	12621084	ThermoStatus	_149	_150	3	38172	
2-05	Compressor Status	12621085	CompressorStatus	_149	_150	3	38173	
2-05	Indoor Fan Status	12621086	IndoorFanStatus	_149	_150	3	38174	
2-05	Heater Operation Status	12621087	HeaterStatus	_149	_150	3	38175	
2-05	Ventilation Mode (setting)	58758432	VentilationModeCommand	_149	_150	14	38176	
2-05	Ventilation Mode (status)	54564129	VentilationModeStatus	_149	_150	13	38177	
2-05	Ventilation Amount (setting)	58758434	VentilationAmountCommand	_149	_150	14	38178	
2-05	Ventilation Amount (status)	54564131	VentilationAmountStatus	_149	_150	13	38179	
2-06	ON/OFF (setting)	16815617	StartStopCommand	_150	_151	4	38401	set
2-06	ON/OFF (status)	12621314	StartStopStatus	_150	_151	3	38402	Fb
2-06	Alarm Sign	12621315	Alarm	_150	_151	3	38403	
2-06	Error Code	54564356	MalfunctionCode	_150	_151	13	38404	
2-06	Operation Mode (setting)	58758661	AirConModeCommand	_150	_151	14	38405	set

2-06	Operation Mode (status)	54564358	AirConModeStatus	_150	_151	13	38406	Fb
2-06	Airflow Rate (setting)	58758663	AirFlowRateCommand	_150	_151	14	38407	set
2-06	Airflow Rate (status)	54564360	AirFlowRateStatus	_150	_151	13	38408	Fb
2-06	Measured Room Temperature	38409	RoomTemp	_150	_151	0	38409	
2-06	Set Room Temperature	8427018	TempAdjust	_150	_151	2	38410	set
2-06	Filer Limit Sign	12621323	FilterSign	_150	_151	3	38411	
2-06	Filter Limit Sign Reset	21009932	FilterSignReset	_150	_151	5	38412	
2-06	Remote Control Operation (ON/OFF)	21009933	RemoteControlStart	_150	_151	5	38413	
2-06	Remote Control Operation (Operation Mode)	21009934	RemoteControlAirConModeSet	_150	_151	5	38414	
2-06	Remote Control Operation (Set Temperature)	21009936	RemoteControlTempAdjust	_150	_151	5	38416	
2-06	Remote Control Operation (Sub Group Address Control Reject)	21009937	CL_Rejection	_150	_151	5	38417	
2-06	Elec Total Power	96507411	ElecTotalPower	_150	_151	23	38419	
2-06	Communication Status	12621332	CommunicationStatus	_150	_151	3	38420	
2-06	System Forced OFF	21009941	SystemForcedOff	_150	_151	5	38421	
2-06	Air Direction (setting)	8427030	AirDirectionCommand	_150	_151	2	38422	
2-06	Air Direction (status)	38423	AirDirectionStatus	_150	_151	0	38423	
2-06	Forced Thermostat OFF (setting)	16815640	ForcedThermoOFFCommand	_150	_151	4	38424	
2-06	Forced Thermostat OFF (status)	12621337	ForcedThermoOFFStatus	_150	_151	3	38425	
2-06	Energy Efficiency Command (setting)	16815642	EnergyEfficiencyCommand	_150	_151	4	38426	
2-06	Energy Efficiency Command (status)	12621339	EnergyEfficiencyStatus	_150	_151	3	38427	
2-06	Thermostat Status	12621340	ThermoStatus	_150	_151	3	38428	
2-06	Compressor Status	12621341	CompressorStatus	_150	_151	3	38429	
2-06	Indoor Fan Status	12621342	IndoorFanStatus	_150	_151	3	38430	
2-06	Heater Operation Status	12621343	HeaterStatus	_150	_151	3	38431	
2-06	Ventilation Mode (setting)	58758688	VentilationModeCommand	_150	_151	14	38432	
2-06	Ventilation Mode (status)	54564385	VentilationModeStatus	_150	_151	13	38433	
2-06	Ventilation Amount (setting)	58758690	VentilationAmountCommand	_150	_151	14	38434	
2-06	Ventilation Amount (status)	54564387	VentilationAmountStatus	_150	_151	13	38435	
2-07	ON/OFF (setting)	16815873	StartStopCommand	_151	_152	4	38657	set
2-07	ON/OFF (status)	12621570	StartStopStatus	_151	_152	3	38658	Fb
2-07	Alarm Sign	12621571	Alarm	_151	_152	3	38659	
2-07	Error Code	54564612	MalfunctionCode	_151	_152	13	38660	
2-07	Operation Mode (setting)	58758917	AirConModeCommand	_151	_152	14	38661	set
2-07	Operation Mode (status)	54564614	AirConModeStatus	_151	_152	13	38662	Fb
2-07	Airflow Rate (setting)	58758919	AirFlowRateCommand	_151	_152	14	38663	set
2-07	Airflow Rate (status)	54564616	AirFlowRateStatus	_151	_152	13	38664	Fb
2-07	Measured Room Temperature	38665	RoomTemp	_151	_152	0	38665	
2-07	Set Room Temperature	8427274	TempAdjust	_151	_152	2	38666	set
2-07	Filer Limit Sign	12621579	FilterSign	_151	_152	3	38667	
2-07	Filter Limit Sign Reset	21010188	FilterSignReset	_151	_152	5	38668	
2-07	Remote Control Operation (ON/OFF)	21010189	RemoteControlStart	_151	_152	5	38669	
2-07	Remote Control Operation (Operation Mode)	21010190	RemoteControlAirConModeSet	_151	_152	5	38670	
2-07	Remote Control Operation (Set Temperature)	21010192	RemoteControlTempAdjust	_151	_152	5	38672	
2-07	Remote Control Operation (Sub Group Address Control Reject)	21010193	CL_Rejection	_151	_152	5	38673	
2-07	Elec Total Power	96507667	ElecTotalPower	_151	_152	23	38675	
2-07	Communication Status	12621588	CommunicationStatus	_151	_152	3	38676	
2-07	System Forced OFF	21010197	SystemForcedOff	_151	_152	5	38677	
2-07	Air Direction (setting)	8427286	AirDirectionCommand	_151	_152	2	38678	
2-07	Air Direction (status)	38679	AirDirectionStatus	_151	_152	0	38679	
2-07	Forced Thermostat OFF (setting)	16815896	ForcedThermoOFFCommand	_151	_152	4	38680	
2-07	Forced Thermostat OFF (status)	12621593	ForcedThermoOFFStatus	_151	_152	3	38681	
2-07	Energy Efficiency Command (setting)	16815898	EnergyEfficiencyCommand	_151	_152	4	38682	
2-07	Energy Efficiency Command (status)	12621595	EnergyEfficiencyStatus	_151	_152	3	38683	
2-07	Thermostat Status	12621596	ThermoStatus	_151	_152	3	38684	
2-07	Compressor Status	12621597	CompressorStatus	_151	_152	3	38685	
2-07	Indoor Fan Status	12621598	IndoorFanStatus	_151	_152	3	38686	
2-07	Heater Operation Status	12621599	HeaterStatus	_151	_152	3	38687	
2-07	Ventilation Mode (setting)	58758944	VentilationModeCommand	_151	_152	14	38688	
2-07	Ventilation Mode (status)	54564641	VentilationModeStatus	_151	_152	13	38689	
2-07	Ventilation Amount (setting)	58758946	VentilationAmountCommand	_151	_152	14	38690	
2-07	Ventilation Amount (status)	54564643	VentilationAmountStatus	_151	_152	13	38691	
2-08	ON/OFF (setting)	16816129	StartStopCommand	_152	_153	4	38913	set
2-08	ON/OFF (status)	12621826	StartStopStatus	_152	_153	3	38914	Fb
2-08	Alarm Sign	12621827	Alarm	_152	_153	3	38915	
2-08	Error Code	54564868	MalfunctionCode	_152	_153	13	38916	
2-08	Operation Mode (setting)	58759173	AirConModeCommand	_152	_153	14	38917	set
2-08	Operation Mode (status)	54564870	AirConModeStatus	_152	_153	13	38918	Fb
2-08	Airflow Rate (setting)	58759175	AirFlowRateCommand	_152	_153	14	38919	set
2-08	Airflow Rate (status)	54564872	AirFlowRateStatus	_152	_153	13	38920	Fb

2-08	Measured Room Temperature	38921	RoomTemp	_152	_153	0	38921	
2-08	Set Room Temperature	8427530	TempAdjust	_152	_153	2	38922	set
2-08	Filer Limit Sign	12621835	FilterSign	_152	_153	3	38923	
2-08	Filter Limit Sign Reset	21010444	FilterSignReset	_152	_153	5	38924	
2-08	Remote Control Operation (ON/OFF)	21010445	RemoteControlStart	_152	_153	5	38925	
2-08	Remote Control Operation (Operation Mode)	21010446	RemoteControlAirConModeSet	_152	_153	5	38926	
2-08	Remote Control Operation (Set Temperature)	21010448	RemoteControlTempAdjust	_152	_153	5	38928	
2-08	Remote Control Operation (Sub Group Address Control Rejecti	21010449	CL_Rejection	_152	_153	5	38929	
2-08	Elec Total Power	96507923	ElecTotalPower	_152	_153	23	38931	
2-08	Communication Status	12621844	CommunicationStatus	_152	_153	3	38932	
2-08	System Forced OFF	21010453	SystemForcedOff	_152	_153	5	38933	
2-08	Air Direction (setting)	8427542	AirDirectionCommand	_152	_153	2	38934	
2-08	Air Direction (status)	38935	AirDirectionStatus	_152	_153	0	38935	
2-08	Forced Thermostat OFF (setting)	16816152	ForcedThermoOFFCommand	_152	_153	4	38936	
2-08	Forced Thermostat OFF (status)	12621849	ForcedThermoOFFStatus	_152	_153	3	38937	
2-08	Energy Efficiency Command (setting)	16816154	EnergyEfficiencyCommand	_152	_153	4	38938	
2-08	Energy Efficiency Command (status)	12621851	EnergyEfficiencyStatus	_152	_153	3	38939	
2-08	Thermostat Status	12621852	ThermoStatus	_152	_153	3	38940	
2-08	Compressor Status	12621853	CompressorStatus	_152	_153	3	38941	
2-08	Indoor Fan Status	12621854	IndoorFanStatus	_152	_153	3	38942	
2-08	Heater Operation Status	12621855	HeaterStatus	_152	_153	3	38943	
2-08	Ventilation Mode (setting)	58759200	VentilationModeCommand	_152	_153	14	38944	
2-08	Ventilation Mode (status)	54564897	VentilationModeStatus	_152	_153	13	38945	
2-08	Ventilation Amount (setting)	58759202	VentilationAmountCommand	_152	_153	14	38946	
2-08	Ventilation Amount (status)	54564899	VentilationAmountStatus	_152	_153	13	38947	
2-09	ON/OFF (setting)	16816385	StartStopCommand	_153	_154	4	39169	set
2-09	ON/OFF (status)	12622082	StartStopStatus	_153	_154	3	39170	Fb
2-09	Alarm Sign	12622083	Alarm	_153	_154	3	39171	
2-09	Error Code	54565124	MalfunctionCode	_153	_154	13	39172	
2-09	Operation Mode (setting)	58759429	AirConModeCommand	_153	_154	14	39173	set
2-09	Operation Mode (status)	54565126	AirConModeStatus	_153	_154	13	39174	Fb
2-09	Airflow Rate (setting)	58759431	AirFlowRateCommand	_153	_154	14	39175	set
2-09	Airflow Rate (status)	54565128	AirFlowRateStatus	_153	_154	13	39176	Fb
2-09	Measured Room Temperature	39177	RoomTemp	_153	_154	0	39177	
2-09	Set Room Temperature	8427786	TempAdjust	_153	_154	2	39178	set
2-09	Filer Limit Sign	12622091	FilterSign	_153	_154	3	39179	
2-09	Filter Limit Sign Reset	21010700	FilterSignReset	_153	_154	5	39180	
2-09	Remote Control Operation (ON/OFF)	21010701	RemoteControlStart	_153	_154	5	39181	
2-09	Remote Control Operation (Operation Mode)	21010702	RemoteControlAirConModeSet	_153	_154	5	39182	
2-09	Remote Control Operation (Set Temperature)	21010704	RemoteControlTempAdjust	_153	_154	5	39184	
2-09	Remote Control Operation (Sub Group Address Control Rejecti	21010705	CL_Rejection	_153	_154	5	39185	
2-09	Elec Total Power	96508179	ElecTotalPower	_153	_154	23	39187	
2-09	Communication Status	12622100	CommunicationStatus	_153	_154	3	39188	
2-09	System Forced OFF	21010709	SystemForcedOff	_153	_154	5	39189	
2-09	Air Direction (setting)	8427798	AirDirectionCommand	_153	_154	2	39190	
2-09	Air Direction (status)	39191	AirDirectionStatus	_153	_154	0	39191	
2-09	Forced Thermostat OFF (setting)	16816408	ForcedThermoOFFCommand	_153	_154	4	39192	
2-09	Forced Thermostat OFF (status)	12622105	ForcedThermoOFFStatus	_153	_154	3	39193	
2-09	Energy Efficiency Command (setting)	16816410	EnergyEfficiencyCommand	_153	_154	4	39194	
2-09	Energy Efficiency Command (status)	12622107	EnergyEfficiencyStatus	_153	_154	3	39195	
2-09	Thermostat Status	12622108	ThermoStatus	_153	_154	3	39196	
2-09	Compressor Status	12622109	CompressorStatus	_153	_154	3	39197	
2-09	Indoor Fan Status	12622110	IndoorFanStatus	_153	_154	3	39198	
2-09	Heater Operation Status	12622111	HeaterStatus	_153	_154	3	39199	
2-09	Ventilation Mode (setting)	58759456	VentilationModeCommand	_153	_154	14	39200	
2-09	Ventilation Mode (status)	54565153	VentilationModeStatus	_153	_154	13	39201	
2-09	Ventilation Amount (setting)	58759458	VentilationAmountCommand	_153	_154	14	39202	
2-09	Ventilation Amount (status)	54565155	VentilationAmountStatus	_153	_154	13	39203	
2-10	ON/OFF (setting)	16816641	StartStopCommand	_154	_155	4	39425	set
2-10	ON/OFF (status)	12622338	StartStopStatus	_154	_155	3	39426	Fb
2-10	Alarm Sign	12622339	Alarm	_154	_155	3	39427	
2-10	Error Code	54565380	MalfunctionCode	_154	_155	13	39428	
2-10	Operation Mode (setting)	58759685	AirConModeCommand	_154	_155	14	39429	set
2-10	Operation Mode (status)	54565382	AirConModeStatus	_154	_155	13	39430	Fb
2-10	Airflow Rate (setting)	58759687	AirFlowRateCommand	_154	_155	14	39431	set
2-10	Airflow Rate (status)	54565384	AirFlowRateStatus	_154	_155	13	39432	Fb
2-10	Measured Room Temperature	39433	RoomTemp	_154	_155	0	39433	
2-10	Set Room Temperature	8428042	TempAdjust	_154	_155	2	39434	set
2-10	Filer Limit Sign	12622347	FilterSign	_154	_155	3	39435	

2-10	Filter Limit Sign Reset	21010956	FilterSignReset	_154	_155	5	39436	
2-10	Remote Control Operation (ON/OFF)	21010957	RemoteControlStart	_154	_155	5	39437	
2-10	Remote Control Operation (Operation Mode)	21010958	RemoteControlAirConModeSet	_154	_155	5	39438	
2-10	Remote Control Operation (Set Temperature)	21010960	RemoteControlTempAdjust	_154	_155	5	39440	
2-10	Remote Control Operation (Sub Group Address Control Rejecti	21010961	CL_Rejection	_154	_155	5	39441	
2-10	Elec Total Power	96508435	ElecTotalPower	_154	_155	23	39443	
2-10	Communication Status	12622356	CommunicationStatus	_154	_155	3	39444	
2-10	System Forced OFF	21010965	SystemForcedOff	_154	_155	5	39445	
2-10	Air Direction (setting)	8428054	AirDirectionCommand	_154	_155	2	39446	
2-10	Air Direction (status)	39447	AirDirectionStatus	_154	_155	0	39447	
2-10	Forced Thermostat OFF (setting)	16816664	ForcedThermoOFFCommand	_154	_155	4	39448	
2-10	Forced Thermostat OFF (status)	12622361	ForcedThermoOFFStatus	_154	_155	3	39449	
2-10	Energy Efficiency Command (setting)	16816666	EnergyEfficiencyCommand	_154	_155	4	39450	
2-10	Energy Efficiency Command (status)	12622363	EnergyEfficiencyStatus	_154	_155	3	39451	
2-10	Thermostat Status	12622364	ThermoStatus	_154	_155	3	39452	
2-10	Compressor Status	12622365	CompressorStatus	_154	_155	3	39453	
2-10	Indoor Fan Status	12622366	IndoorFanStatus	_154	_155	3	39454	
2-10	Heater Operation Status	12622367	HeaterStatus	_154	_155	3	39455	
2-10	Ventilation Mode (setting)	58759712	VentilationModeCommand	_154	_155	14	39456	
2-10	Ventilation Mode (status)	54565409	VentilationModeStatus	_154	_155	13	39457	
2-10	Ventilation Amount (setting)	58759714	VentilationAmountCommand	_154	_155	14	39458	
2-10	Ventilation Amount (status)	54565411	VentilationAmountStatus	_154	_155	13	39459	
2-11	ON/OFF (setting)	16816897	StartStopCommand	_155	_156	4	39681	set
2-11	ON/OFF (status)	12622594	StartStopStatus	_155	_156	3	39682	Fb
2-11	Alarm Sign	12622595	Alarm	_155	_156	3	39683	
2-11	Error Code	54565636	MalfunctionCode	_155	_156	13	39684	
2-11	Operation Mode (setting)	58759941	AirConModeCommand	_155	_156	14	39685	set
2-11	Operation Mode (status)	54565638	AirConModeStatus	_155	_156	13	39686	Fb
2-11	Airflow Rate (setting)	58759943	AirFlowRateCommand	_155	_156	14	39687	set
2-11	Airflow Rate (status)	54565640	AirFlowRateStatus	_155	_156	13	39688	Fb
2-11	Measured Room Temperature	39689	RoomTemp	_155	_156	0	39689	
2-11	Set Room Temperature	8428298	TempAdjust	_155	_156	2	39690	set
2-11	Filer Limit Sign	12622603	FilterSign	_155	_156	3	39691	
2-11	Filter Limit Sign Reset	21011212	FilterSignReset	_155	_156	5	39692	
2-11	Remote Control Operation (ON/OFF)	21011213	RemoteControlStart	_155	_156	5	39693	
2-11	Remote Control Operation (Operation Mode)	21011214	RemoteControlAirConModeSet	_155	_156	5	39694	
2-11	Remote Control Operation (Set Temperature)	21011216	RemoteControlTempAdjust	_155	_156	5	39696	
2-11	Remote Control Operation (Sub Group Address Control Rejecti	21011217	CL_Rejection	_155	_156	5	39697	
2-11	Elec Total Power	96508691	ElecTotalPower	_155	_156	23	39699	
2-11	Communication Status	12622612	CommunicationStatus	_155	_156	3	39700	
2-11	System Forced OFF	21011221	SystemForcedOff	_155	_156	5	39701	
2-11	Air Direction (setting)	8428310	AirDirectionCommand	_155	_156	2	39702	
2-11	Air Direction (status)	39703	AirDirectionStatus	_155	_156	0	39703	
2-11	Forced Thermostat OFF (setting)	16816920	ForcedThermoOFFCommand	_155	_156	4	39704	
2-11	Forced Thermostat OFF (status)	12622617	ForcedThermoOFFStatus	_155	_156	3	39705	
2-11	Energy Efficiency Command (setting)	16816922	EnergyEfficiencyCommand	_155	_156	4	39706	
2-11	Energy Efficiency Command (status)	12622619	EnergyEfficiencyStatus	_155	_156	3	39707	
2-11	Thermostat Status	12622620	ThermoStatus	_155	_156	3	39708	
2-11	Compressor Status	12622621	CompressorStatus	_155	_156	3	39709	
2-11	Indoor Fan Status	12622622	IndoorFanStatus	_155	_156	3	39710	
2-11	Heater Operation Status	12622623	HeaterStatus	_155	_156	3	39711	
2-11	Ventilation Mode (setting)	58759968	VentilationModeCommand	_155	_156	14	39712	
2-11	Ventilation Mode (status)	54565665	VentilationModeStatus	_155	_156	13	39713	
2-11	Ventilation Amount (setting)	58759970	VentilationAmountCommand	_155	_156	14	39714	
2-11	Ventilation Amount (status)	54565667	VentilationAmountStatus	_155	_156	13	39715	
2-12	ON/OFF (setting)	16817153	StartStopCommand	_156	_157	4	39937	set
2-12	ON/OFF (status)	12622850	StartStopStatus	_156	_157	3	39938	Fb
2-12	Alarm Sign	12622851	Alarm	_156	_157	3	39939	
2-12	Error Code	54565892	MalfunctionCode	_156	_157	13	39940	
2-12	Operation Mode (setting)	58760197	AirConModeCommand	_156	_157	14	39941	set
2-12	Operation Mode (status)	54565894	AirConModeStatus	_156	_157	13	39942	Fb
2-12	Airflow Rate (setting)	58760199	AirFlowRateCommand	_156	_157	14	39943	set
2-12	Airflow Rate (status)	54565896	AirFlowRateStatus	_156	_157	13	39944	Fb
2-12	Measured Room Temperature	39945	RoomTemp	_156	_157	0	39945	
2-12	Set Room Temperature	8428554	TempAdjust	_156	_157	2	39946	set
2-12	Filer Limit Sign	12622859	FilterSign	_156	_157	3	39947	
2-12	Filter Limit Sign Reset	21011468	FilterSignReset	_156	_157	5	39948	
2-12	Remote Control Operation (ON/OFF)	21011469	RemoteControlStart	_156	_157	5	39949	
2-12	Remote Control Operation (Operation Mode)	21011470	RemoteControlAirConModeSet	_156	_157	5	39950	

2-12	Remote Control Operation (Set Temperature)	21011472	RemoteControlTempAdjust	_156	_157	5	39952	
2-12	Remote Control Operation (Sub Group Address Control Rejecti	21011473	CL_Rejection	_156	_157	5	39953	
2-12	Elec Total Power	96508947	ElecTotalPower	_156	_157	23	39955	
2-12	Communication Status	12622868	CommunicationStatus	_156	_157	3	39956	
2-12	System Forced OFF	21011477	SystemForcedOff	_156	_157	5	39957	
2-12	Air Direction (setting)	8428566	AirDirectionCommand	_156	_157	2	39958	
2-12	Air Direction (status)	39959	AirDirectionStatus	_156	_157	0	39959	
2-12	Forced Thermostat OFF (setting)	16817176	ForcedThermoOFFCommand	_156	_157	4	39960	
2-12	Forced Thermostat OFF (status)	12622873	ForcedThermoOFFStatus	_156	_157	3	39961	
2-12	Energy Efficiency Command (setting)	16817178	EnergyEfficiencyCommand	_156	_157	4	39962	
2-12	Energy Efficiency Command (status)	12622875	EnergyEfficiencyStatus	_156	_157	3	39963	
2-12	Thermostat Status	12622876	ThermoStatus	_156	_157	3	39964	
2-12	Compressor Status	12622877	CompressorStatus	_156	_157	3	39965	
2-12	Indoor Fan Status	12622878	IndoorFanStatus	_156	_157	3	39966	
2-12	Heater Operation Status	12622879	HeaterStatus	_156	_157	3	39967	
2-12	Ventilation Mode (setting)	58760224	VentilationModeCommand	_156	_157	14	39968	
2-12	Ventilation Mode (status)	54565921	VentilationModeStatus	_156	_157	13	39969	
2-12	Ventilation Amount (setting)	58760226	VentilationAmountCommand	_156	_157	14	39970	
2-12	Ventilation Amount (status)	54565923	VentilationAmountStatus	_156	_157	13	39971	
2-13	ON/OFF (setting)	16817409	StartStopCommand	_157	_158	4	40193	set
2-13	ON/OFF (status)	12623106	StartStopStatus	_157	_158	3	40194	Fb
2-13	Alarm Sign	12623107	Alarm	_157	_158	3	40195	
2-13	Error Code	54566148	MalfunctionCode	_157	_158	13	40196	
2-13	Operation Mode (setting)	58760453	AirConModeCommand	_157	_158	14	40197	set
2-13	Operation Mode (status)	54566150	AirConModeStatus	_157	_158	13	40198	Fb
2-13	Airflow Rate (setting)	58760455	AirFlowRateCommand	_157	_158	14	40199	set
2-13	Airflow Rate (status)	54566152	AirFlowRateStatus	_157	_158	13	40200	Fb
2-13	Measured Room Temperature	40201	RoomTemp	_157	_158	0	40201	
2-13	Set Room Temperature	8428810	TempAdjust	_157	_158	2	40202	set
2-13	Filer Limit Sign	12623115	FilterSign	_157	_158	3	40203	
2-13	Filter Limit Sign Reset	21011724	FilterSignReset	_157	_158	5	40204	
2-13	Remote Control Operation (ON/OFF)	21011725	RemoteControlStart	_157	_158	5	40205	
2-13	Remote Control Operation (Operation Mode)	21011726	RemoteControlAirConModeSet	_157	_158	5	40206	
2-13	Remote Control Operation (Set Temperature)	21011728	RemoteControlTempAdjust	_157	_158	5	40208	
2-13	Remote Control Operation (Sub Group Address Control Rejecti	21011729	CL_Rejection	_157	_158	5	40209	
2-13	Elec Total Power	96509203	ElecTotalPower	_157	_158	23	40211	
2-13	Communication Status	12623124	CommunicationStatus	_157	_158	3	40212	
2-13	System Forced OFF	21011733	SystemForcedOff	_157	_158	5	40213	
2-13	Air Direction (setting)	8428822	AirDirectionCommand	_157	_158	2	40214	
2-13	Air Direction (status)	40215	AirDirectionStatus	_157	_158	0	40215	
2-13	Forced Thermostat OFF (setting)	16817432	ForcedThermoOFFCommand	_157	_158	4	40216	
2-13	Forced Thermostat OFF (status)	12623129	ForcedThermoOFFStatus	_157	_158	3	40217	
2-13	Energy Efficiency Command (setting)	16817434	EnergyEfficiencyCommand	_157	_158	4	40218	
2-13	Energy Efficiency Command (status)	12623131	EnergyEfficiencyStatus	_157	_158	3	40219	
2-13	Thermostat Status	12623132	ThermoStatus	_157	_158	3	40220	
2-13	Compressor Status	12623133	CompressorStatus	_157	_158	3	40221	
2-13	Indoor Fan Status	12623134	IndoorFanStatus	_157	_158	3	40222	
2-13	Heater Operation Status	12623135	HeaterStatus	_157	_158	3	40223	
2-13	Ventilation Mode (setting)	58760480	VentilationModeCommand	_157	_158	14	40224	
2-13	Ventilation Mode (status)	54566177	VentilationModeStatus	_157	_158	13	40225	
2-13	Ventilation Amount (setting)	58760482	VentilationAmountCommand	_157	_158	14	40226	
2-13	Ventilation Amount (status)	54566179	VentilationAmountStatus	_157	_158	13	40227	
2-14	ON/OFF (setting)	16817665	StartStopCommand	_158	_159	4	40449	set
2-14	ON/OFF (status)	12623362	StartStopStatus	_158	_159	3	40450	Fb
2-14	Alarm Sign	12623363	Alarm	_158	_159	3	40451	
2-14	Error Code	54566404	MalfunctionCode	_158	_159	13	40452	
2-14	Operation Mode (setting)	58760709	AirConModeCommand	_158	_159	14	40453	set
2-14	Operation Mode (status)	54566406	AirConModeStatus	_158	_159	13	40454	Fb
2-14	Airflow Rate (setting)	58760711	AirFlowRateCommand	_158	_159	14	40455	set
2-14	Airflow Rate (status)	54566408	AirFlowRateStatus	_158	_159	13	40456	Fb
2-14	Measured Room Temperature	40457	RoomTemp	_158	_159	0	40457	
2-14	Set Room Temperature	8429066	TempAdjust	_158	_159	2	40458	set
2-14	Filer Limit Sign	12623371	FilterSign	_158	_159	3	40459	
2-14	Filter Limit Sign Reset	21011980	FilterSignReset	_158	_159	5	40460	
2-14	Remote Control Operation (ON/OFF)	21011981	RemoteControlStart	_158	_159	5	40461	
2-14	Remote Control Operation (Operation Mode)	21011982	RemoteControlAirConModeSet	_158	_159	5	40462	
2-14	Remote Control Operation (Set Temperature)	21011984	RemoteControlTempAdjust	_158	_159	5	40464	
2-14	Remote Control Operation (Sub Group Address Control Rejecti	21011985	CL_Rejection	_158	_159	5	40465	
2-14	Elec Total Power	96509459	ElecTotalPower	_158	_159	23	40467	

2-14	Communication Status	12623380	CommunicationStatus	_158	_159	3	40468	
2-14	System Forced OFF	21011989	SystemForcedOff	_158	_159	5	40469	
2-14	Air Direction (setting)	8429078	AirDirectionCommand	_158	_159	2	40470	
2-14	Air Direction (status)	40471	AirDirectionStatus	_158	_159	0	40471	
2-14	Forced Thermostat OFF (setting)	16817688	ForcedThermoOFFCommand	_158	_159	4	40472	
2-14	Forced Thermostat OFF (status)	12623385	ForcedThermoOFFStatus	_158	_159	3	40473	
2-14	Energy Efficiency Command (setting)	16817690	EnergyEfficiencyCommand	_158	_159	4	40474	
2-14	Energy Efficiency Command (status)	12623387	EnergyEfficiencyStatus	_158	_159	3	40475	
2-14	Thermostat Status	12623388	ThermoStatus	_158	_159	3	40476	
2-14	Compressor Status	12623389	CompressorStatus	_158	_159	3	40477	
2-14	Indoor Fan Status	12623390	IndoorFanStatus	_158	_159	3	40478	
2-14	Heater Operation Status	12623391	HeaterStatus	_158	_159	3	40479	
2-14	Ventilation Mode (setting)	58760736	VentilationModeCommand	_158	_159	14	40480	
2-14	Ventilation Mode (status)	54566433	VentilationModeStatus	_158	_159	13	40481	
2-14	Ventilation Amount (setting)	58760738	VentilationAmountCommand	_158	_159	14	40482	
2-14	Ventilation Amount (status)	54566435	VentilationAmountStatus	_158	_159	13	40483	
2-15	ON/OFF (setting)	16817921	StartStopCommand	_159	_160	4	40705	set
2-15	ON/OFF (status)	12623618	StartStopStatus	_159	_160	3	40706	Fb
2-15	Alarm Sign	12623619	Alarm	_159	_160	3	40707	
2-15	Error Code	54566660	MalfunctionCode	_159	_160	13	40708	
2-15	Operation Mode (setting)	58760965	AirConModeCommand	_159	_160	14	40709	set
2-15	Operation Mode (status)	54566662	AirConModeStatus	_159	_160	13	40710	Fb
2-15	Airflow Rate (setting)	58760967	AirFlowRateCommand	_159	_160	14	40711	set
2-15	Airflow Rate (status)	54566664	AirFlowRateStatus	_159	_160	13	40712	Fb
2-15	Measured Room Temperature	40713	RoomTemp	_159	_160	0	40713	
2-15	Set Room Temperature	8429322	TempAdjust	_159	_160	2	40714	set
2-15	Filer Limit Sign	12623627	FilterSign	_159	_160	3	40715	
2-15	Filter Limit Sign Reset	21012236	FilterSignReset	_159	_160	5	40716	
2-15	Remote Control Operation (ON/OFF)	21012237	RemoteControlStart	_159	_160	5	40717	
2-15	Remote Control Operation (Operation Mode)	21012238	RemoteControlAirConModeSet	_159	_160	5	40718	
2-15	Remote Control Operation (Set Temperature)	21012240	RemoteControlTempAdjust	_159	_160	5	40720	
2-15	Remote Control Operation (Sub Group Address Control Reject)	21012241	CL_Rejection	_159	_160	5	40721	
2-15	Elec Total Power	96509715	ElecTotalPower	_159	_160	23	40723	
2-15	Communication Status	12623636	CommunicationStatus	_159	_160	3	40724	
2-15	System Forced OFF	21012245	SystemForcedOff	_159	_160	5	40725	
2-15	Air Direction (setting)	8429334	AirDirectionCommand	_159	_160	2	40726	
2-15	Air Direction (status)	40727	AirDirectionStatus	_159	_160	0	40727	
2-15	Forced Thermostat OFF (setting)	16817944	ForcedThermoOFFCommand	_159	_160	4	40728	
2-15	Forced Thermostat OFF (status)	12623641	ForcedThermoOFFStatus	_159	_160	3	40729	
2-15	Energy Efficiency Command (setting)	16817946	EnergyEfficiencyCommand	_159	_160	4	40730	
2-15	Energy Efficiency Command (status)	12623643	EnergyEfficiencyStatus	_159	_160	3	40731	
2-15	Thermostat Status	12623644	ThermoStatus	_159	_160	3	40732	
2-15	Compressor Status	12623645	CompressorStatus	_159	_160	3	40733	
2-15	Indoor Fan Status	12623646	IndoorFanStatus	_159	_160	3	40734	
2-15	Heater Operation Status	12623647	HeaterStatus	_159	_160	3	40735	
2-15	Ventilation Mode (setting)	58760992	VentilationModeCommand	_159	_160	14	40736	
2-15	Ventilation Mode (status)	54566689	VentilationModeStatus	_159	_160	13	40737	
2-15	Ventilation Amount (setting)	58760994	VentilationAmountCommand	_159	_160	14	40738	
2-15	Ventilation Amount (status)	54566691	VentilationAmountStatus	_159	_160	13	40739	
3-00	ON/OFF (setting)	16818177	StartStopCommand	_160	_161	4	40961	set
3-00	ON/OFF (status)	12623874	StartStopStatus	_160	_161	3	40962	Fb
3-00	Alarm Sign	12623875	Alarm	_160	_161	3	40963	
3-00	Error Code	54566916	MalfunctionCode	_160	_161	13	40964	
3-00	Operation Mode (setting)	58761221	AirConModeCommand	_160	_161	14	40965	set
3-00	Operation Mode (status)	54566918	AirConModeStatus	_160	_161	13	40966	Fb
3-00	Airflow Rate (setting)	58761223	AirFlowRateCommand	_160	_161	14	40967	set
3-00	Airflow Rate (status)	54566920	AirFlowRateStatus	_160	_161	13	40968	Fb
3-00	Measured Room Temperature	40969	RoomTemp	_160	_161	0	40969	
3-00	Set Room Temperature	8429578	TempAdjust	_160	_161	2	40970	set
3-00	Filer Limit Sign	12623883	FilterSign	_160	_161	3	40971	
3-00	Filter Limit Sign Reset	21012492	FilterSignReset	_160	_161	5	40972	
3-00	Remote Control Operation (ON/OFF)	21012493	RemoteControlStart	_160	_161	5	40973	
3-00	Remote Control Operation (Operation Mode)	21012494	RemoteControlAirConModeSet	_160	_161	5	40974	
3-00	Remote Control Operation (Set Temperature)	21012496	RemoteControlTempAdjust	_160	_161	5	40976	
3-00	Remote Control Operation (Sub Group Address Control Reject)	21012497	CL_Rejection	_160	_161	5	40977	
3-00	Elec Total Power	96509971	ElecTotalPower	_160	_161	23	40979	
3-00	Communication Status	12623892	CommunicationStatus	_160	_161	3	40980	
3-00	System Forced OFF	21012501	SystemForcedOff	_160	_161	5	40981	
3-00	Air Direction (setting)	8429590	AirDirectionCommand	_160	_161	2	40982	

3-00	Air Direction (status)	40983	AirDirectionStatus	_160	_161	0	40983	
3-00	Forced Thermostat OFF (setting)	16818200	ForcedThermoOFFCommand	_160	_161	4	40984	
3-00	Forced Thermostat OFF (status)	12623897	ForcedThermoOFFStatus	_160	_161	3	40985	
3-00	Energy Efficiency Command (setting)	16818202	EnergyEfficiencyCommand	_160	_161	4	40986	
3-00	Energy Efficiency Command (status)	12623899	EnergyEfficiencyStatus	_160	_161	3	40987	
3-00	Thermostat Status	12623900	ThermoStatus	_160	_161	3	40988	
3-00	Compressor Status	12623901	CompressorStatus	_160	_161	3	40989	
3-00	Indoor Fan Status	12623902	IndoorFanStatus	_160	_161	3	40990	
3-00	Heater Operation Status	12623903	HeaterStatus	_160	_161	3	40991	
3-00	Ventilation Mode (setting)	58761248	VentilationModeCommand	_160	_161	14	40992	
3-00	Ventilation Mode (status)	54566945	VentilationModeStatus	_160	_161	13	40993	
3-00	Ventilation Amount (setting)	58761250	VentilationAmountCommand	_160	_161	14	40994	
3-00	Ventilation Amount (status)	54566947	VentilationAmountStatus	_160	_161	13	40995	
3-01	ON/OFF (setting)	16818433	StartStopCommand	_161	_162	4	41217	set
3-01	ON/OFF (status)	12624130	StartStopStatus	_161	_162	3	41218	Fb
3-01	Alarm Sign	12624131	Alarm	_161	_162	3	41219	
3-01	Error Code	54567172	MalfunctionCode	_161	_162	13	41220	
3-01	Operation Mode (setting)	58761477	AirConModeCommand	_161	_162	14	41221	set
3-01	Operation Mode (status)	54567174	AirConModeStatus	_161	_162	13	41222	Fb
3-01	Airflow Rate (setting)	58761479	AirFlowRateCommand	_161	_162	14	41223	set
3-01	Airflow Rate (status)	54567176	AirFlowRateStatus	_161	_162	13	41224	Fb
3-01	Measured Room Temperature	41225	RoomTemp	_161	_162	0	41225	
3-01	Set Room Temperature	8429834	TempAdjust	_161	_162	2	41226	set
3-01	Filer Limit Sign	12624139	FilterSign	_161	_162	3	41227	
3-01	Filter Limit Sign Reset	21012748	FilterSignReset	_161	_162	5	41228	
3-01	Remote Control Operation (ON/OFF)	21012749	RemoteControlStart	_161	_162	5	41229	
3-01	Remote Control Operation (Operation Mode)	21012750	RemoteControlAirConModeSet	_161	_162	5	41230	
3-01	Remote Control Operation (Set Temperature)	21012752	RemoteControlTempAdjust	_161	_162	5	41232	
3-01	Remote Control Operation (Sub Group Address Control Reject)	21012753	CL_Rejection	_161	_162	5	41233	
3-01	Elec Total Power	96510227	ElecTotalPower	_161	_162	23	41235	
3-01	Communication Status	12624148	CommunicationStatus	_161	_162	3	41236	
3-01	System Forced OFF	21012757	SystemForcedOff	_161	_162	5	41237	
3-01	Air Direction (setting)	8429846	AirDirectionCommand	_161	_162	2	41238	
3-01	Air Direction (status)	41239	AirDirectionStatus	_161	_162	0	41239	
3-01	Forced Thermostat OFF (setting)	16818456	ForcedThermoOFFCommand	_161	_162	4	41240	
3-01	Forced Thermostat OFF (status)	12624153	ForcedThermoOFFStatus	_161	_162	3	41241	
3-01	Energy Efficiency Command (setting)	16818458	EnergyEfficiencyCommand	_161	_162	4	41242	
3-01	Energy Efficiency Command (status)	12624155	EnergyEfficiencyStatus	_161	_162	3	41243	
3-01	Thermostat Status	12624156	ThermoStatus	_161	_162	3	41244	
3-01	Compressor Status	12624157	CompressorStatus	_161	_162	3	41245	
3-01	Indoor Fan Status	12624158	IndoorFanStatus	_161	_162	3	41246	
3-01	Heater Operation Status	12624159	HeaterStatus	_161	_162	3	41247	
3-01	Ventilation Mode (setting)	58761504	VentilationModeCommand	_161	_162	14	41248	
3-01	Ventilation Mode (status)	54567201	VentilationModeStatus	_161	_162	13	41249	
3-01	Ventilation Amount (setting)	58761506	VentilationAmountCommand	_161	_162	14	41250	
3-01	Ventilation Amount (status)	54567203	VentilationAmountStatus	_161	_162	13	41251	
3-02	ON/OFF (setting)	16818689	StartStopCommand	_162	_163	4	41473	set
3-02	ON/OFF (status)	12624386	StartStopStatus	_162	_163	3	41474	Fb
3-02	Alarm Sign	12624387	Alarm	_162	_163	3	41475	
3-02	Error Code	54567428	MalfunctionCode	_162	_163	13	41476	
3-02	Operation Mode (setting)	58761733	AirConModeCommand	_162	_163	14	41477	set
3-02	Operation Mode (status)	54567430	AirConModeStatus	_162	_163	13	41478	Fb
3-02	Airflow Rate (setting)	58761735	AirFlowRateCommand	_162	_163	14	41479	set
3-02	Airflow Rate (status)	54567432	AirFlowRateStatus	_162	_163	13	41480	Fb
3-02	Measured Room Temperature	41481	RoomTemp	_162	_163	0	41481	
3-02	Set Room Temperature	8430090	TempAdjust	_162	_163	2	41482	set
3-02	Filer Limit Sign	12624395	FilterSign	_162	_163	3	41483	
3-02	Filter Limit Sign Reset	21013004	FilterSignReset	_162	_163	5	41484	
3-02	Remote Control Operation (ON/OFF)	21013005	RemoteControlStart	_162	_163	5	41485	
3-02	Remote Control Operation (Operation Mode)	21013006	RemoteControlAirConModeSet	_162	_163	5	41486	
3-02	Remote Control Operation (Set Temperature)	21013008	RemoteControlTempAdjust	_162	_163	5	41488	
3-02	Remote Control Operation (Sub Group Address Control Reject)	21013009	CL_Rejection	_162	_163	5	41489	
3-02	Elec Total Power	96510483	ElecTotalPower	_162	_163	23	41491	
3-02	Communication Status	12624404	CommunicationStatus	_162	_163	3	41492	
3-02	System Forced OFF	21013013	SystemForcedOff	_162	_163	5	41493	
3-02	Air Direction (setting)	8430102	AirDirectionCommand	_162	_163	2	41494	
3-02	Air Direction (status)	41495	AirDirectionStatus	_162	_163	0	41495	
3-02	Forced Thermostat OFF (setting)	16818712	ForcedThermoOFFCommand	_162	_163	4	41496	
3-02	Forced Thermostat OFF (status)	12624409	ForcedThermoOFFStatus	_162	_163	3	41497	

3-02	Energy Efficiency Command (setting)	16818714	EnergyEfficiencyCommand	_162	_163	4	41498	
3-02	Energy Efficiency Command (status)	12624411	EnergyEfficiencyStatus	_162	_163	3	41499	
3-02	Thermostat Status	12624412	ThermoStatus	_162	_163	3	41500	
3-02	Compressor Status	12624413	CompressorStatus	_162	_163	3	41501	
3-02	Indoor Fan Status	12624414	IndoorFanStatus	_162	_163	3	41502	
3-02	Heater Operation Status	12624415	HeaterStatus	_162	_163	3	41503	
3-02	Ventilation Mode (setting)	58761760	VentilationModeCommand	_162	_163	14	41504	
3-02	Ventilation Mode (status)	54567457	VentilationModeStatus	_162	_163	13	41505	
3-02	Ventilation Amount (setting)	58761762	VentilationAmountCommand	_162	_163	14	41506	
3-02	Ventilation Amount (status)	54567459	VentilationAmountStatus	_162	_163	13	41507	
3-03	ON/OFF (setting)	16818945	StartStopCommand	_163	_164	4	41729	set
3-03	ON/OFF (status)	12624642	StartStopStatus	_163	_164	3	41730	Fb
3-03	Alarm Sign	12624643	Alarm	_163	_164	3	41731	
3-03	Error Code	54567684	MalfunctionCode	_163	_164	13	41732	
3-03	Operation Mode (setting)	58761989	AirConModeCommand	_163	_164	14	41733	set
3-03	Operation Mode (status)	54567686	AirConModeStatus	_163	_164	13	41734	Fb
3-03	Airflow Rate (setting)	58761991	AirFlowRateCommand	_163	_164	14	41735	set
3-03	Airflow Rate (status)	54567688	AirFlowRateStatus	_163	_164	13	41736	Fb
3-03	Measured Room Temperature	41737	RoomTemp	_163	_164	0	41737	
3-03	Set Room Temperature	8430346	TempAdjust	_163	_164	2	41738	set
3-03	Filer Limit Sign	12624651	FilterSign	_163	_164	3	41739	
3-03	Filter Limit Sign Reset	21013260	FilterSignReset	_163	_164	5	41740	
3-03	Remote Control Operation (ON/OFF)	21013261	RemoteControlStart	_163	_164	5	41741	
3-03	Remote Control Operation (Operation Mode)	21013262	RemoteControlAirConModeSet	_163	_164	5	41742	
3-03	Remote Control Operation (Set Temperature)	21013264	RemoteControlTempAdjust	_163	_164	5	41744	
3-03	Remote Control Operation (Sub Group Address Control Reject)	21013265	CL_Rejection	_163	_164	5	41745	
3-03	Elec Total Power	96510739	ElecTotalPower	_163	_164	23	41747	
3-03	Communication Status	12624660	CommunicationStatus	_163	_164	3	41748	
3-03	System Forced OFF	21013269	SystemForcedOff	_163	_164	5	41749	
3-03	Air Direction (setting)	8430358	AirDirectionCommand	_163	_164	2	41750	
3-03	Air Direction (status)	41751	AirDirectionStatus	_163	_164	0	41751	
3-03	Forced Thermostat OFF (setting)	16818968	ForcedThermoOFFCommand	_163	_164	4	41752	
3-03	Forced Thermostat OFF (status)	12624665	ForcedThermoOFFStatus	_163	_164	3	41753	
3-03	Energy Efficiency Command (setting)	16818970	EnergyEfficiencyCommand	_163	_164	4	41754	
3-03	Energy Efficiency Command (status)	12624667	EnergyEfficiencyStatus	_163	_164	3	41755	
3-03	Thermostat Status	12624668	ThermoStatus	_163	_164	3	41756	
3-03	Compressor Status	12624669	CompressorStatus	_163	_164	3	41757	
3-03	Indoor Fan Status	12624670	IndoorFanStatus	_163	_164	3	41758	
3-03	Heater Operation Status	12624671	HeaterStatus	_163	_164	3	41759	
3-03	Ventilation Mode (setting)	58762016	VentilationModeCommand	_163	_164	14	41760	
3-03	Ventilation Mode (status)	54567713	VentilationModeStatus	_163	_164	13	41761	
3-03	Ventilation Amount (setting)	58762018	VentilationAmountCommand	_163	_164	14	41762	
3-03	Ventilation Amount (status)	54567715	VentilationAmountStatus	_163	_164	13	41763	
3-04	ON/OFF (setting)	16819201	StartStopCommand	_164	_165	4	41985	set
3-04	ON/OFF (status)	12624898	StartStopStatus	_164	_165	3	41986	Fb
3-04	Alarm Sign	12624899	Alarm	_164	_165	3	41987	
3-04	Error Code	54567940	MalfunctionCode	_164	_165	13	41988	
3-04	Operation Mode (setting)	58762245	AirConModeCommand	_164	_165	14	41989	set
3-04	Operation Mode (status)	54567942	AirConModeStatus	_164	_165	13	41990	Fb
3-04	Airflow Rate (setting)	58762247	AirFlowRateCommand	_164	_165	14	41991	set
3-04	Airflow Rate (status)	54567944	AirFlowRateStatus	_164	_165	13	41992	Fb
3-04	Measured Room Temperature	41993	RoomTemp	_164	_165	0	41993	
3-04	Set Room Temperature	8430602	TempAdjust	_164	_165	2	41994	set
3-04	Filer Limit Sign	12624907	FilterSign	_164	_165	3	41995	
3-04	Filter Limit Sign Reset	21013516	FilterSignReset	_164	_165	5	41996	
3-04	Remote Control Operation (ON/OFF)	21013517	RemoteControlStart	_164	_165	5	41997	
3-04	Remote Control Operation (Operation Mode)	21013518	RemoteControlAirConModeSet	_164	_165	5	41998	
3-04	Remote Control Operation (Set Temperature)	21013520	RemoteControlTempAdjust	_164	_165	5	42000	
3-04	Remote Control Operation (Sub Group Address Control Reject)	21013521	CL_Rejection	_164	_165	5	42001	
3-04	Elec Total Power	96510995	ElecTotalPower	_164	_165	23	42003	
3-04	Communication Status	12624916	CommunicationStatus	_164	_165	3	42004	
3-04	System Forced OFF	21013525	SystemForcedOff	_164	_165	5	42005	
3-04	Air Direction (setting)	8430614	AirDirectionCommand	_164	_165	2	42006	
3-04	Air Direction (status)	42007	AirDirectionStatus	_164	_165	0	42007	
3-04	Forced Thermostat OFF (setting)	16819224	ForcedThermoOFFCommand	_164	_165	4	42008	
3-04	Forced Thermostat OFF (status)	12624921	ForcedThermoOFFStatus	_164	_165	3	42009	
3-04	Energy Efficiency Command (setting)	16819226	EnergyEfficiencyCommand	_164	_165	4	42010	
3-04	Energy Efficiency Command (status)	12624923	EnergyEfficiencyStatus	_164	_165	3	42011	
3-04	Thermostat Status	12624924	ThermoStatus	_164	_165	3	42012	

3-04	Compressor Status	12624925	CompressorStatus	_164	_165	3	42013	
3-04	Indoor Fan Status	12624926	IndoorFanStatus	_164	_165	3	42014	
3-04	Heater Operation Status	12624927	HeaterStatus	_164	_165	3	42015	
3-04	Ventilation Mode (setting)	58762272	VentilationModeCommand	_164	_165	14	42016	
3-04	Ventilation Mode (status)	54567969	VentilationModeStatus	_164	_165	13	42017	
3-04	Ventilation Amount (setting)	58762274	VentilationAmountCommand	_164	_165	14	42018	
3-04	Ventilation Amount (status)	54567971	VentilationAmountStatus	_164	_165	13	42019	
3-05	ON/OFF (setting)	16819457	StartStopCommand	_165	_166	4	42241	set
3-05	ON/OFF (status)	12625154	StartStopStatus	_165	_166	3	42242	Fb
3-05	Alarm Sign	12625155	Alarm	_165	_166	3	42243	
3-05	Error Code	54568196	MalfunctionCode	_165	_166	13	42244	
3-05	Operation Mode (setting)	58762501	AirConModeCommand	_165	_166	14	42245	set
3-05	Operation Mode (status)	54568198	AirConModeStatus	_165	_166	13	42246	Fb
3-05	Airflow Rate (setting)	58762503	AirFlowRateCommand	_165	_166	14	42247	set
3-05	Airflow Rate (status)	54568200	AirFlowRateStatus	_165	_166	13	42248	Fb
3-05	Measured Room Temperature	42249	RoomTemp	_165	_166	0	42249	
3-05	Set Room Temperature	8430858	TempAdjust	_165	_166	2	42250	set
3-05	Filer Limit Sign	12625163	FilterSign	_165	_166	3	42251	
3-05	Filter Limit Sign Reset	21013772	FilterSignReset	_165	_166	5	42252	
3-05	Remote Control Operation (ON/OFF)	21013773	RemoteControlStart	_165	_166	5	42253	
3-05	Remote Control Operation (Operation Mode)	21013774	RemoteControlAirConModeSet	_165	_166	5	42254	
3-05	Remote Control Operation (Set Temperature)	21013776	RemoteControlTempAdjust	_165	_166	5	42256	
3-05	Remote Control Operation (Sub Group Address Control Reject)	21013777	CL_Rejection	_165	_166	5	42257	
3-05	Elec Total Power	96511251	ElecTotalPower	_165	_166	23	42259	
3-05	Communication Status	12625172	CommunicationStatus	_165	_166	3	42260	
3-05	System Forced OFF	21013781	SystemForcedOff	_165	_166	5	42261	
3-05	Air Direction (setting)	8430870	AirDirectionCommand	_165	_166	2	42262	
3-05	Air Direction (status)	42263	AirDirectionStatus	_165	_166	0	42263	
3-05	Forced Thermostat OFF (setting)	16819480	ForcedThermoOFFCommand	_165	_166	4	42264	
3-05	Forced Thermostat OFF (status)	12625177	ForcedThermoOFFStatus	_165	_166	3	42265	
3-05	Energy Efficiency Command (setting)	16819482	EnergyEfficiencyCommand	_165	_166	4	42266	
3-05	Energy Efficiency Command (status)	12625179	EnergyEfficiencyStatus	_165	_166	3	42267	
3-05	Thermostat Status	12625180	ThermoStatus	_165	_166	3	42268	
3-05	Compressor Status	12625181	CompressorStatus	_165	_166	3	42269	
3-05	Indoor Fan Status	12625182	IndoorFanStatus	_165	_166	3	42270	
3-05	Heater Operation Status	12625183	HeaterStatus	_165	_166	3	42271	
3-05	Ventilation Mode (setting)	58762528	VentilationModeCommand	_165	_166	14	42272	
3-05	Ventilation Mode (status)	54568225	VentilationModeStatus	_165	_166	13	42273	
3-05	Ventilation Amount (setting)	58762530	VentilationAmountCommand	_165	_166	14	42274	
3-05	Ventilation Amount (status)	54568227	VentilationAmountStatus	_165	_166	13	42275	
3-06	ON/OFF (setting)	16819713	StartStopCommand	_166	_167	4	42497	set
3-06	ON/OFF (status)	12625410	StartStopStatus	_166	_167	3	42498	Fb
3-06	Alarm Sign	12625411	Alarm	_166	_167	3	42499	
3-06	Error Code	54568452	MalfunctionCode	_166	_167	13	42500	
3-06	Operation Mode (setting)	58762757	AirConModeCommand	_166	_167	14	42501	set
3-06	Operation Mode (status)	54568454	AirConModeStatus	_166	_167	13	42502	Fb
3-06	Airflow Rate (setting)	58762759	AirFlowRateCommand	_166	_167	14	42503	set
3-06	Airflow Rate (status)	54568456	AirFlowRateStatus	_166	_167	13	42504	Fb
3-06	Measured Room Temperature	42505	RoomTemp	_166	_167	0	42505	
3-06	Set Room Temperature	8431114	TempAdjust	_166	_167	2	42506	set
3-06	Filer Limit Sign	12625419	FilterSign	_166	_167	3	42507	
3-06	Filter Limit Sign Reset	21014028	FilterSignReset	_166	_167	5	42508	
3-06	Remote Control Operation (ON/OFF)	21014029	RemoteControlStart	_166	_167	5	42509	
3-06	Remote Control Operation (Operation Mode)	21014030	RemoteControlAirConModeSet	_166	_167	5	42510	
3-06	Remote Control Operation (Set Temperature)	21014032	RemoteControlTempAdjust	_166	_167	5	42512	
3-06	Remote Control Operation (Sub Group Address Control Reject)	21014033	CL_Rejection	_166	_167	5	42513	
3-06	Elec Total Power	96511507	ElecTotalPower	_166	_167	23	42515	
3-06	Communication Status	12625428	CommunicationStatus	_166	_167	3	42516	
3-06	System Forced OFF	21014037	SystemForcedOff	_166	_167	5	42517	
3-06	Air Direction (setting)	8431126	AirDirectionCommand	_166	_167	2	42518	
3-06	Air Direction (status)	42519	AirDirectionStatus	_166	_167	0	42519	
3-06	Forced Thermostat OFF (setting)	16819736	ForcedThermoOFFCommand	_166	_167	4	42520	
3-06	Forced Thermostat OFF (status)	12625433	ForcedThermoOFFStatus	_166	_167	3	42521	
3-06	Energy Efficiency Command (setting)	16819738	EnergyEfficiencyCommand	_166	_167	4	42522	
3-06	Energy Efficiency Command (status)	12625435	EnergyEfficiencyStatus	_166	_167	3	42523	
3-06	Thermostat Status	12625436	ThermoStatus	_166	_167	3	42524	
3-06	Compressor Status	12625437	CompressorStatus	_166	_167	3	42525	
3-06	Indoor Fan Status	12625438	IndoorFanStatus	_166	_167	3	42526	
3-06	Heater Operation Status	12625439	HeaterStatus	_166	_167	3	42527	

3-06	Ventilation Mode (setting)	58762784	VentilationModeCommand	_166	_167	14	42528	
3-06	Ventilation Mode (status)	54568481	VentilationModeStatus	_166	_167	13	42529	
3-06	Ventilation Amount (setting)	58762786	VentilationAmountCommand	_166	_167	14	42530	
3-06	Ventilation Amount (status)	54568483	VentilationAmountStatus	_166	_167	13	42531	
3-07	ON/OFF (setting)	16819969	StartStopCommand	_167	_168	4	42753	set
3-07	ON/OFF (status)	12625666	StartStopStatus	_167	_168	3	42754	Fb
3-07	Alarm Sign	12625667	Alarm	_167	_168	3	42755	
3-07	Error Code	54568708	MalfunctionCode	_167	_168	13	42756	
3-07	Operation Mode (setting)	58763013	AirConModeCommand	_167	_168	14	42757	set
3-07	Operation Mode (status)	54568710	AirConModeStatus	_167	_168	13	42758	Fb
3-07	Airflow Rate (setting)	58763015	AirFlowRateCommand	_167	_168	14	42759	set
3-07	Airflow Rate (status)	54568712	AirFlowRateStatus	_167	_168	13	42760	Fb
3-07	Measured Room Temperature	42761	RoomTemp	_167	_168	0	42761	
3-07	Set Room Temperature	8431370	TempAdjust	_167	_168	2	42762	set
3-07	Filer Limit Sign	12625675	FilterSign	_167	_168	3	42763	
3-07	Filter Limit Sign Reset	21014284	FilterSignReset	_167	_168	5	42764	
3-07	Remote Control Operation (ON/OFF)	21014285	RemoteControlStart	_167	_168	5	42765	
3-07	Remote Control Operation (Operation Mode)	21014286	RemoteControlAirConModeSet	_167	_168	5	42766	
3-07	Remote Control Operation (Set Temperature)	21014288	RemoteControlTempAdjust	_167	_168	5	42768	
3-07	Remote Control Operation (Sub Group Address Control Reject)	21014289	CL_Rejection	_167	_168	5	42769	
3-07	Elec Total Power	96511763	ElecTotalPower	_167	_168	23	42771	
3-07	Communication Status	12625684	CommunicationStatus	_167	_168	3	42772	
3-07	System Forced OFF	21014293	SystemForcedOff	_167	_168	5	42773	
3-07	Air Direction (setting)	8431382	AirDirectionCommand	_167	_168	2	42774	
3-07	Air Direction (status)	42775	AirDirectionStatus	_167	_168	0	42775	
3-07	Forced Thermostat OFF (setting)	16819992	ForcedThermoOFFCommand	_167	_168	4	42776	
3-07	Forced Thermostat OFF (status)	12625689	ForcedThermoOFFStatus	_167	_168	3	42777	
3-07	Energy Efficiency Command (setting)	16819994	EnergyEfficiencyCommand	_167	_168	4	42778	
3-07	Energy Efficiency Command (status)	12625691	EnergyEfficiencyStatus	_167	_168	3	42779	
3-07	Thermostat Status	12625692	ThermoStatus	_167	_168	3	42780	
3-07	Compressor Status	12625693	CompressorStatus	_167	_168	3	42781	
3-07	Indoor Fan Status	12625694	IndoorFanStatus	_167	_168	3	42782	
3-07	Heater Operation Status	12625695	HeaterStatus	_167	_168	3	42783	
3-07	Ventilation Mode (setting)	58763040	VentilationModeCommand	_167	_168	14	42784	
3-07	Ventilation Mode (status)	54568737	VentilationModeStatus	_167	_168	13	42785	
3-07	Ventilation Amount (setting)	58763042	VentilationAmountCommand	_167	_168	14	42786	
3-07	Ventilation Amount (status)	54568739	VentilationAmountStatus	_167	_168	13	42787	
3-08	ON/OFF (setting)	16820225	StartStopCommand	_168	_169	4	43009	set
3-08	ON/OFF (status)	12625922	StartStopStatus	_168	_169	3	43010	Fb
3-08	Alarm Sign	12625923	Alarm	_168	_169	3	43011	
3-08	Error Code	54568964	MalfunctionCode	_168	_169	13	43012	
3-08	Operation Mode (setting)	58763269	AirConModeCommand	_168	_169	14	43013	set
3-08	Operation Mode (status)	54568966	AirConModeStatus	_168	_169	13	43014	Fb
3-08	Airflow Rate (setting)	58763271	AirFlowRateCommand	_168	_169	14	43015	set
3-08	Airflow Rate (status)	54568968	AirFlowRateStatus	_168	_169	13	43016	Fb
3-08	Measured Room Temperature	43017	RoomTemp	_168	_169	0	43017	
3-08	Set Room Temperature	8431626	TempAdjust	_168	_169	2	43018	set
3-08	Filer Limit Sign	12625931	FilterSign	_168	_169	3	43019	
3-08	Filter Limit Sign Reset	21014540	FilterSignReset	_168	_169	5	43020	
3-08	Remote Control Operation (ON/OFF)	21014541	RemoteControlStart	_168	_169	5	43021	
3-08	Remote Control Operation (Operation Mode)	21014542	RemoteControlAirConModeSet	_168	_169	5	43022	
3-08	Remote Control Operation (Set Temperature)	21014544	RemoteControlTempAdjust	_168	_169	5	43024	
3-08	Remote Control Operation (Sub Group Address Control Reject)	21014545	CL_Rejection	_168	_169	5	43025	
3-08	Elec Total Power	96512019	ElecTotalPower	_168	_169	23	43027	
3-08	Communication Status	12625940	CommunicationStatus	_168	_169	3	43028	
3-08	System Forced OFF	21014549	SystemForcedOff	_168	_169	5	43029	
3-08	Air Direction (setting)	8431638	AirDirectionCommand	_168	_169	2	43030	
3-08	Air Direction (status)	43031	AirDirectionStatus	_168	_169	0	43031	
3-08	Forced Thermostat OFF (setting)	16820248	ForcedThermoOFFCommand	_168	_169	4	43032	
3-08	Forced Thermostat OFF (status)	12625945	ForcedThermoOFFStatus	_168	_169	3	43033	
3-08	Energy Efficiency Command (setting)	16820250	EnergyEfficiencyCommand	_168	_169	4	43034	
3-08	Energy Efficiency Command (status)	12625947	EnergyEfficiencyStatus	_168	_169	3	43035	
3-08	Thermostat Status	12625948	ThermoStatus	_168	_169	3	43036	
3-08	Compressor Status	12625949	CompressorStatus	_168	_169	3	43037	
3-08	Indoor Fan Status	12625950	IndoorFanStatus	_168	_169	3	43038	
3-08	Heater Operation Status	12625951	HeaterStatus	_168	_169	3	43039	
3-08	Ventilation Mode (setting)	58763296	VentilationModeCommand	_168	_169	14	43040	
3-08	Ventilation Mode (status)	54568993	VentilationModeStatus	_168	_169	13	43041	
3-08	Ventilation Amount (setting)	58763298	VentilationAmountCommand	_168	_169	14	43042	

3-08	Ventilation Amount (status)	54568995	VentilationAmountStatus	_168	_169	13	43043	
3-09	ON/OFF (setting)	16820481	StartStopCommand	_169	_170	4	43265	set
3-09	ON/OFF (status)	12626178	StartStopStatus	_169	_170	3	43266	Fb
3-09	Alarm Sign	12626179	Alarm	_169	_170	3	43267	
3-09	Error Code	54569220	MalfunctionCode	_169	_170	13	43268	
3-09	Operation Mode (setting)	58763525	AirConModeCommand	_169	_170	14	43269	set
3-09	Operation Mode (status)	54569222	AirConModeStatus	_169	_170	13	43270	Fb
3-09	Airflow Rate (setting)	58763527	AirFlowRateCommand	_169	_170	14	43271	set
3-09	Airflow Rate (status)	54569224	AirFlowRateStatus	_169	_170	13	43272	Fb
3-09	Measured Room Temperature	43273	RoomTemp	_169	_170	0	43273	
3-09	Set Room Temperature	8431882	TempAdjust	_169	_170	2	43274	set
3-09	Filer Limit Sign	12626187	FilterSign	_169	_170	3	43275	
3-09	Filter Limit Sign Reset	21014796	FilterSignReset	_169	_170	5	43276	
3-09	Remote Control Operation (ON/OFF)	21014797	RemoteControlStart	_169	_170	5	43277	
3-09	Remote Control Operation (Operation Mode)	21014798	RemoteControlAirConModeSet	_169	_170	5	43278	
3-09	Remote Control Operation (Set Temperature)	21014800	RemoteControlTempAdjust	_169	_170	5	43280	
3-09	Remote Control Operation (Sub Group Address Control Reject)	21014801	CL_Rejection	_169	_170	5	43281	
3-09	Elec Total Power	96512275	ElecTotalPower	_169	_170	23	43283	
3-09	Communication Status	12626196	CommunicationStatus	_169	_170	3	43284	
3-09	System Forced OFF	21014805	SystemForcedOff	_169	_170	5	43285	
3-09	Air Direction (setting)	8431894	AirDirectionCommand	_169	_170	2	43286	
3-09	Air Direction (status)	43287	AirDirectionStatus	_169	_170	0	43287	
3-09	Forced Thermostat OFF (setting)	16820504	ForcedThermoOFFCommand	_169	_170	4	43288	
3-09	Forced Thermostat OFF (status)	12626201	ForcedThermoOFFStatus	_169	_170	3	43289	
3-09	Energy Efficiency Command (setting)	16820506	EnergyEfficiencyCommand	_169	_170	4	43290	
3-09	Energy Efficiency Command (status)	12626203	EnergyEfficiencyStatus	_169	_170	3	43291	
3-09	Thermostat Status	12626204	ThermoStatus	_169	_170	3	43292	
3-09	Compressor Status	12626205	CompressorStatus	_169	_170	3	43293	
3-09	Indoor Fan Status	12626206	IndoorFanStatus	_169	_170	3	43294	
3-09	Heater Operation Status	12626207	HeaterStatus	_169	_170	3	43295	
3-09	Ventilation Mode (setting)	58763552	VentilationModeCommand	_169	_170	14	43296	
3-09	Ventilation Mode (status)	54569249	VentilationModeStatus	_169	_170	13	43297	
3-09	Ventilation Amount (setting)	58763554	VentilationAmountCommand	_169	_170	14	43298	
3-09	Ventilation Amount (status)	54569251	VentilationAmountStatus	_169	_170	13	43299	
3-10	ON/OFF (setting)	16820737	StartStopCommand	_170	_171	4	43521	set
3-10	ON/OFF (status)	12626434	StartStopStatus	_170	_171	3	43522	Fb
3-10	Alarm Sign	12626435	Alarm	_170	_171	3	43523	
3-10	Error Code	54569476	MalfunctionCode	_170	_171	13	43524	
3-10	Operation Mode (setting)	58763781	AirConModeCommand	_170	_171	14	43525	set
3-10	Operation Mode (status)	54569478	AirConModeStatus	_170	_171	13	43526	Fb
3-10	Airflow Rate (setting)	58763783	AirFlowRateCommand	_170	_171	14	43527	set
3-10	Airflow Rate (status)	54569480	AirFlowRateStatus	_170	_171	13	43528	Fb
3-10	Measured Room Temperature	43529	RoomTemp	_170	_171	0	43529	
3-10	Set Room Temperature	8432138	TempAdjust	_170	_171	2	43530	set
3-10	Filer Limit Sign	12626443	FilterSign	_170	_171	3	43531	
3-10	Filter Limit Sign Reset	21015052	FilterSignReset	_170	_171	5	43532	
3-10	Remote Control Operation (ON/OFF)	21015053	RemoteControlStart	_170	_171	5	43533	
3-10	Remote Control Operation (Operation Mode)	21015054	RemoteControlAirConModeSet	_170	_171	5	43534	
3-10	Remote Control Operation (Set Temperature)	21015056	RemoteControlTempAdjust	_170	_171	5	43536	
3-10	Remote Control Operation (Sub Group Address Control Reject)	21015057	CL_Rejection	_170	_171	5	43537	
3-10	Elec Total Power	96512531	ElecTotalPower	_170	_171	23	43539	
3-10	Communication Status	12626452	CommunicationStatus	_170	_171	3	43540	
3-10	System Forced OFF	21015061	SystemForcedOff	_170	_171	5	43541	
3-10	Air Direction (setting)	8432150	AirDirectionCommand	_170	_171	2	43542	
3-10	Air Direction (status)	43543	AirDirectionStatus	_170	_171	0	43543	
3-10	Forced Thermostat OFF (setting)	16820760	ForcedThermoOFFCommand	_170	_171	4	43544	
3-10	Forced Thermostat OFF (status)	12626457	ForcedThermoOFFStatus	_170	_171	3	43545	
3-10	Energy Efficiency Command (setting)	16820762	EnergyEfficiencyCommand	_170	_171	4	43546	
3-10	Energy Efficiency Command (status)	12626459	EnergyEfficiencyStatus	_170	_171	3	43547	
3-10	Thermostat Status	12626460	ThermoStatus	_170	_171	3	43548	
3-10	Compressor Status	12626461	CompressorStatus	_170	_171	3	43549	
3-10	Indoor Fan Status	12626462	IndoorFanStatus	_170	_171	3	43550	
3-10	Heater Operation Status	12626463	HeaterStatus	_170	_171	3	43551	
3-10	Ventilation Mode (setting)	58763808	VentilationModeCommand	_170	_171	14	43552	
3-10	Ventilation Mode (status)	54569505	VentilationModeStatus	_170	_171	13	43553	
3-10	Ventilation Amount (setting)	58763810	VentilationAmountCommand	_170	_171	14	43554	
3-10	Ventilation Amount (status)	54569507	VentilationAmountStatus	_170	_171	13	43555	
3-11	ON/OFF (setting)	16820993	StartStopCommand	_171	_172	4	43777	set
3-11	ON/OFF (status)	12626690	StartStopStatus	_171	_172	3	43778	Fb

3-11	Alarm Sign	12626691	Alarm	_171	_172	3	43779	
3-11	Error Code	54569732	MalfunctionCode	_171	_172	13	43780	
3-11	Operation Mode (setting)	58764037	AirConModeCommand	_171	_172	14	43781	set
3-11	Operation Mode (status)	54569734	AirConModeStatus	_171	_172	13	43782	Fb
3-11	Airflow Rate (setting)	58764039	AirFlowRateCommand	_171	_172	14	43783	set
3-11	Airflow Rate (status)	54569736	AirFlowRateStatus	_171	_172	13	43784	Fb
3-11	Measured Room Temperature	43785	RoomTemp	_171	_172	0	43785	
3-11	Set Room Temperature	8432394	TempAdjust	_171	_172	2	43786	set
3-11	Filer Limit Sign	12626699	FilterSign	_171	_172	3	43787	
3-11	Filter Limit Sign Reset	21015308	FilterSignReset	_171	_172	5	43788	
3-11	Remote Control Operation (ON/OFF)	21015309	RemoteControlStart	_171	_172	5	43789	
3-11	Remote Control Operation (Operation Mode)	21015310	RemoteControlAirConModeSet	_171	_172	5	43790	
3-11	Remote Control Operation (Set Temperature)	21015312	RemoteControlTempAdjust	_171	_172	5	43792	
3-11	Remote Control Operation (Sub Group Address Control Reject)	21015313	CL_Rejection	_171	_172	5	43793	
3-11	Elec Total Power	96512787	ElecTotalPower	_171	_172	23	43795	
3-11	Communication Status	12626708	CommunicationStatus	_171	_172	3	43796	
3-11	System Forced OFF	21015317	SystemForcedOff	_171	_172	5	43797	
3-11	Air Direction (setting)	8432406	AirDirectionCommand	_171	_172	2	43798	
3-11	Air Direction (status)	43799	AirDirectionStatus	_171	_172	0	43799	
3-11	Forced Thermostat OFF (setting)	16821016	ForcedThermoOFFCommand	_171	_172	4	43800	
3-11	Forced Thermostat OFF (status)	12626713	ForcedThermoOFFStatus	_171	_172	3	43801	
3-11	Energy Efficiency Command (setting)	16821018	EnergyEfficiencyCommand	_171	_172	4	43802	
3-11	Energy Efficiency Command (status)	12626715	EnergyEfficiencyStatus	_171	_172	3	43803	
3-11	Thermostat Status	12626716	ThermoStatus	_171	_172	3	43804	
3-11	Compressor Status	12626717	CompressorStatus	_171	_172	3	43805	
3-11	Indoor Fan Status	12626718	IndoorFanStatus	_171	_172	3	43806	
3-11	Heater Operation Status	12626719	HeaterStatus	_171	_172	3	43807	
3-11	Ventilation Mode (setting)	58764064	VentilationModeCommand	_171	_172	14	43808	
3-11	Ventilation Mode (status)	54569761	VentilationModeStatus	_171	_172	13	43809	
3-11	Ventilation Amount (setting)	58764066	VentilationAmountCommand	_171	_172	14	43810	
3-11	Ventilation Amount (status)	54569763	VentilationAmountStatus	_171	_172	13	43811	
3-12	ON/OFF (setting)	16821249	StartStopCommand	_172	_173	4	44033	set
3-12	ON/OFF (status)	12626946	StartStopStatus	_172	_173	3	44034	Fb
3-12	Alarm Sign	12626947	Alarm	_172	_173	3	44035	
3-12	Error Code	54569988	MalfunctionCode	_172	_173	13	44036	
3-12	Operation Mode (setting)	58764293	AirConModeCommand	_172	_173	14	44037	set
3-12	Operation Mode (status)	54569990	AirConModeStatus	_172	_173	13	44038	Fb
3-12	Airflow Rate (setting)	58764295	AirFlowRateCommand	_172	_173	14	44039	set
3-12	Airflow Rate (status)	54569992	AirFlowRateStatus	_172	_173	13	44040	Fb
3-12	Measured Room Temperature	44041	RoomTemp	_172	_173	0	44041	
3-12	Set Room Temperature	8432650	TempAdjust	_172	_173	2	44042	set
3-12	Filer Limit Sign	12626955	FilterSign	_172	_173	3	44043	
3-12	Filter Limit Sign Reset	21015564	FilterSignReset	_172	_173	5	44044	
3-12	Remote Control Operation (ON/OFF)	21015565	RemoteControlStart	_172	_173	5	44045	
3-12	Remote Control Operation (Operation Mode)	21015566	RemoteControlAirConModeSet	_172	_173	5	44046	
3-12	Remote Control Operation (Set Temperature)	21015568	RemoteControlTempAdjust	_172	_173	5	44048	
3-12	Remote Control Operation (Sub Group Address Control Reject)	21015569	CL_Rejection	_172	_173	5	44049	
3-12	Elec Total Power	96513043	ElecTotalPower	_172	_173	23	44051	
3-12	Communication Status	12626964	CommunicationStatus	_172	_173	3	44052	
3-12	System Forced OFF	21015573	SystemForcedOff	_172	_173	5	44053	
3-12	Air Direction (setting)	8432662	AirDirectionCommand	_172	_173	2	44054	
3-12	Air Direction (status)	44055	AirDirectionStatus	_172	_173	0	44055	
3-12	Forced Thermostat OFF (setting)	16821272	ForcedThermoOFFCommand	_172	_173	4	44056	
3-12	Forced Thermostat OFF (status)	12626969	ForcedThermoOFFStatus	_172	_173	3	44057	
3-12	Energy Efficiency Command (setting)	16821274	EnergyEfficiencyCommand	_172	_173	4	44058	
3-12	Energy Efficiency Command (status)	12626971	EnergyEfficiencyStatus	_172	_173	3	44059	
3-12	Thermostat Status	12626972	ThermoStatus	_172	_173	3	44060	
3-12	Compressor Status	12626973	CompressorStatus	_172	_173	3	44061	
3-12	Indoor Fan Status	12626974	IndoorFanStatus	_172	_173	3	44062	
3-12	Heater Operation Status	12626975	HeaterStatus	_172	_173	3	44063	
3-12	Ventilation Mode (setting)	58764320	VentilationModeCommand	_172	_173	14	44064	
3-12	Ventilation Mode (status)	54570017	VentilationModeStatus	_172	_173	13	44065	
3-12	Ventilation Amount (setting)	58764322	VentilationAmountCommand	_172	_173	14	44066	
3-12	Ventilation Amount (status)	54570019	VentilationAmountStatus	_172	_173	13	44067	
3-13	ON/OFF (setting)	16821505	StartStopCommand	_173	_174	4	44289	set
3-13	ON/OFF (status)	12627202	StartStopStatus	_173	_174	3	44290	Fb
3-13	Alarm Sign	12627203	Alarm	_173	_174	3	44291	
3-13	Error Code	54570244	MalfunctionCode	_173	_174	13	44292	
3-13	Operation Mode (setting)	58764549	AirConModeCommand	_173	_174	14	44293	set

3-13	Operation Mode (status)	54570246	AirConModeStatus	_173	_174	13	44294	Fb
3-13	Airflow Rate (setting)	58764551	AirFlowRateCommand	_173	_174	14	44295	set
3-13	Airflow Rate (status)	54570248	AirFlowRateStatus	_173	_174	13	44296	Fb
3-13	Measured Room Temperature	44297	RoomTemp	_173	_174	0	44297	
3-13	Set Room Temperature	8432906	TempAdjust	_173	_174	2	44298	set
3-13	Filer Limit Sign	12627211	FilterSign	_173	_174	3	44299	
3-13	Filter Limit Sign Reset	21015820	FilterSignReset	_173	_174	5	44300	
3-13	Remote Control Operation (ON/OFF)	21015821	RemoteControlStart	_173	_174	5	44301	
3-13	Remote Control Operation (Operation Mode)	21015822	RemoteControlAirConModeSet	_173	_174	5	44302	
3-13	Remote Control Operation (Set Temperature)	21015824	RemoteControlTempAdjust	_173	_174	5	44304	
3-13	Remote Control Operation (Sub Group Address Control Reject)	21015825	CL_Rejection	_173	_174	5	44305	
3-13	Elec Total Power	96513299	ElecTotalPower	_173	_174	23	44307	
3-13	Communication Status	12627220	CommunicationStatus	_173	_174	3	44308	
3-13	System Forced OFF	21015829	SystemForcedOff	_173	_174	5	44309	
3-13	Air Direction (setting)	8432918	AirDirectionCommand	_173	_174	2	44310	
3-13	Air Direction (status)	44311	AirDirectionStatus	_173	_174	0	44311	
3-13	Forced Thermostat OFF (setting)	16821528	ForcedThermoOFFCommand	_173	_174	4	44312	
3-13	Forced Thermostat OFF (status)	12627225	ForcedThermoOFFStatus	_173	_174	3	44313	
3-13	Energy Efficiency Command (setting)	16821530	EnergyEfficiencyCommand	_173	_174	4	44314	
3-13	Energy Efficiency Command (status)	12627227	EnergyEfficiencyStatus	_173	_174	3	44315	
3-13	Thermostat Status	12627228	ThermoStatus	_173	_174	3	44316	
3-13	Compressor Status	12627229	CompressorStatus	_173	_174	3	44317	
3-13	Indoor Fan Status	12627230	IndoorFanStatus	_173	_174	3	44318	
3-13	Heater Operation Status	12627231	HeaterStatus	_173	_174	3	44319	
3-13	Ventilation Mode (setting)	58764576	VentilationModeCommand	_173	_174	14	44320	
3-13	Ventilation Mode (status)	54570273	VentilationModeStatus	_173	_174	13	44321	
3-13	Ventilation Amount (setting)	58764578	VentilationAmountCommand	_173	_174	14	44322	
3-13	Ventilation Amount (status)	54570275	VentilationAmountStatus	_173	_174	13	44323	
3-14	ON/OFF (setting)	16821761	StartStopCommand	_174	_175	4	44545	set
3-14	ON/OFF (status)	12627458	StartStopStatus	_174	_175	3	44546	Fb
3-14	Alarm Sign	12627459	Alarm	_174	_175	3	44547	
3-14	Error Code	54570500	MalfunctionCode	_174	_175	13	44548	
3-14	Operation Mode (setting)	58764805	AirConModeCommand	_174	_175	14	44549	set
3-14	Operation Mode (status)	54570502	AirConModeStatus	_174	_175	13	44550	Fb
3-14	Airflow Rate (setting)	58764807	AirFlowRateCommand	_174	_175	14	44551	set
3-14	Airflow Rate (status)	54570504	AirFlowRateStatus	_174	_175	13	44552	Fb
3-14	Measured Room Temperature	44553	RoomTemp	_174	_175	0	44553	
3-14	Set Room Temperature	8433162	TempAdjust	_174	_175	2	44554	set
3-14	Filer Limit Sign	12627467	FilterSign	_174	_175	3	44555	
3-14	Filter Limit Sign Reset	21016076	FilterSignReset	_174	_175	5	44556	
3-14	Remote Control Operation (ON/OFF)	21016077	RemoteControlStart	_174	_175	5	44557	
3-14	Remote Control Operation (Operation Mode)	21016078	RemoteControlAirConModeSet	_174	_175	5	44558	
3-14	Remote Control Operation (Set Temperature)	21016080	RemoteControlTempAdjust	_174	_175	5	44560	
3-14	Remote Control Operation (Sub Group Address Control Reject)	21016081	CL_Rejection	_174	_175	5	44561	
3-14	Elec Total Power	96513555	ElecTotalPower	_174	_175	23	44563	
3-14	Communication Status	12627476	CommunicationStatus	_174	_175	3	44564	
3-14	System Forced OFF	21016085	SystemForcedOff	_174	_175	5	44565	
3-14	Air Direction (setting)	8433174	AirDirectionCommand	_174	_175	2	44566	
3-14	Air Direction (status)	44567	AirDirectionStatus	_174	_175	0	44567	
3-14	Forced Thermostat OFF (setting)	16821784	ForcedThermoOFFCommand	_174	_175	4	44568	
3-14	Forced Thermostat OFF (status)	12627481	ForcedThermoOFFStatus	_174	_175	3	44569	
3-14	Energy Efficiency Command (setting)	16821786	EnergyEfficiencyCommand	_174	_175	4	44570	
3-14	Energy Efficiency Command (status)	12627483	EnergyEfficiencyStatus	_174	_175	3	44571	
3-14	Thermostat Status	12627484	ThermoStatus	_174	_175	3	44572	
3-14	Compressor Status	12627485	CompressorStatus	_174	_175	3	44573	
3-14	Indoor Fan Status	12627486	IndoorFanStatus	_174	_175	3	44574	
3-14	Heater Operation Status	12627487	HeaterStatus	_174	_175	3	44575	
3-14	Ventilation Mode (setting)	58764832	VentilationModeCommand	_174	_175	14	44576	
3-14	Ventilation Mode (status)	54570529	VentilationModeStatus	_174	_175	13	44577	
3-14	Ventilation Amount (setting)	58764834	VentilationAmountCommand	_174	_175	14	44578	
3-14	Ventilation Amount (status)	54570531	VentilationAmountStatus	_174	_175	13	44579	
3-15	ON/OFF (setting)	16822017	StartStopCommand	_175	_176	4	44801	set
3-15	ON/OFF (status)	12627714	StartStopStatus	_175	_176	3	44802	Fb
3-15	Alarm Sign	12627715	Alarm	_175	_176	3	44803	
3-15	Error Code	54570756	MalfunctionCode	_175	_176	13	44804	
3-15	Operation Mode (setting)	58765061	AirConModeCommand	_175	_176	14	44805	set
3-15	Operation Mode (status)	54570758	AirConModeStatus	_175	_176	13	44806	Fb
3-15	Airflow Rate (setting)	58765063	AirFlowRateCommand	_175	_176	14	44807	set
3-15	Airflow Rate (status)	54570760	AirFlowRateStatus	_175	_176	13	44808	Fb

3-15	Measured Room Temperature	44809	RoomTemp	_175	_176	0	44809	
3-15	Set Room Temperature	8433418	TempAdjust	_175	_176	2	44810	set
3-15	Filer Limit Sign	12627723	FilterSign	_175	_176	3	44811	
3-15	Filter Limit Sign Reset	21016332	FilterSignReset	_175	_176	5	44812	
3-15	Remote Control Operation (ON/OFF)	21016333	RemoteControlStart	_175	_176	5	44813	
3-15	Remote Control Operation (Operation Mode)	21016334	RemoteControlAirConModeSet	_175	_176	5	44814	
3-15	Remote Control Operation (Set Temperature)	21016336	RemoteControlTempAdjust	_175	_176	5	44816	
3-15	Remote Control Operation (Sub Group Address Control Rejecti	21016337	CL_Rejection	_175	_176	5	44817	
3-15	Elec Total Power	96513811	ElecTotalPower	_175	_176	23	44819	
3-15	Communication Status	12627732	CommunicationStatus	_175	_176	3	44820	
3-15	System Forced OFF	21016341	SystemForcedOff	_175	_176	5	44821	
3-15	Air Direction (setting)	8433430	AirDirectionCommand	_175	_176	2	44822	
3-15	Air Direction (status)	44823	AirDirectionStatus	_175	_176	0	44823	
3-15	Forced Thermostat OFF (setting)	16822040	ForcedThermoOFFCommand	_175	_176	4	44824	
3-15	Forced Thermostat OFF (status)	12627737	ForcedThermoOFFStatus	_175	_176	3	44825	
3-15	Energy Efficiency Command (setting)	16822042	EnergyEfficiencyCommand	_175	_176	4	44826	
3-15	Energy Efficiency Command (status)	12627739	EnergyEfficiencyStatus	_175	_176	3	44827	
3-15	Thermostat Status	12627740	ThermoStatus	_175	_176	3	44828	
3-15	Compressor Status	12627741	CompressorStatus	_175	_176	3	44829	
3-15	Indoor Fan Status	12627742	IndoorFanStatus	_175	_176	3	44830	
3-15	Heater Operation Status	12627743	HeaterStatus	_175	_176	3	44831	
3-15	Ventilation Mode (setting)	58765088	VentilationModeCommand	_175	_176	14	44832	
3-15	Ventilation Mode (status)	54570785	VentilationModeStatus	_175	_176	13	44833	
3-15	Ventilation Amount (setting)	58765090	VentilationAmountCommand	_175	_176	14	44834	
3-15	Ventilation Amount (status)	54570787	VentilationAmountStatus	_175	_176	13	44835	
4-00	ON/OFF (setting)	16822273	StartStopCommand	_176	_177	4	45057	set
4-00	ON/OFF (status)	12627970	StartStopStatus	_176	_177	3	45058	Fb
4-00	Alarm Sign	12627971	Alarm	_176	_177	3	45059	
4-00	Error Code	54571012	MalfunctionCode	_176	_177	13	45060	
4-00	Operation Mode (setting)	58765317	AirConModeCommand	_176	_177	14	45061	set
4-00	Operation Mode (status)	54571014	AirConModeStatus	_176	_177	13	45062	Fb
4-00	Airflow Rate (setting)	58765319	AirFlowRateCommand	_176	_177	14	45063	set
4-00	Airflow Rate (status)	54571016	AirFlowRateStatus	_176	_177	13	45064	Fb
4-00	Measured Room Temperature	45065	RoomTemp	_176	_177	0	45065	
4-00	Set Room Temperature	8433674	TempAdjust	_176	_177	2	45066	set
4-00	Filer Limit Sign	12627979	FilterSign	_176	_177	3	45067	
4-00	Filter Limit Sign Reset	21016588	FilterSignReset	_176	_177	5	45068	
4-00	Remote Control Operation (ON/OFF)	21016589	RemoteControlStart	_176	_177	5	45069	
4-00	Remote Control Operation (Operation Mode)	21016590	RemoteControlAirConModeSet	_176	_177	5	45070	
4-00	Remote Control Operation (Set Temperature)	21016592	RemoteControlTempAdjust	_176	_177	5	45072	
4-00	Remote Control Operation (Sub Group Address Control Rejecti	21016593	CL_Rejection	_176	_177	5	45073	
4-00	Elec Total Power	96514067	ElecTotalPower	_176	_177	23	45075	
4-00	Communication Status	12627988	CommunicationStatus	_176	_177	3	45076	
4-00	System Forced OFF	21016597	SystemForcedOff	_176	_177	5	45077	
4-00	Air Direction (setting)	8433686	AirDirectionCommand	_176	_177	2	45078	
4-00	Air Direction (status)	45079	AirDirectionStatus	_176	_177	0	45079	
4-00	Forced Thermostat OFF (setting)	16822296	ForcedThermoOFFCommand	_176	_177	4	45080	
4-00	Forced Thermostat OFF (status)	12627993	ForcedThermoOFFStatus	_176	_177	3	45081	
4-00	Energy Efficiency Command (setting)	16822298	EnergyEfficiencyCommand	_176	_177	4	45082	
4-00	Energy Efficiency Command (status)	12627995	EnergyEfficiencyStatus	_176	_177	3	45083	
4-00	Thermostat Status	12627996	ThermoStatus	_176	_177	3	45084	
4-00	Compressor Status	12627997	CompressorStatus	_176	_177	3	45085	
4-00	Indoor Fan Status	12627998	IndoorFanStatus	_176	_177	3	45086	
4-00	Heater Operation Status	12627999	HeaterStatus	_176	_177	3	45087	
4-00	Ventilation Mode (setting)	58765344	VentilationModeCommand	_176	_177	14	45088	
4-00	Ventilation Mode (status)	54571041	VentilationModeStatus	_176	_177	13	45089	
4-00	Ventilation Amount (setting)	58765346	VentilationAmountCommand	_176	_177	14	45090	
4-00	Ventilation Amount (status)	54571043	VentilationAmountStatus	_176	_177	13	45091	
4-01	ON/OFF (setting)	16822529	StartStopCommand	_177	_178	4	45313	set
4-01	ON/OFF (status)	12628226	StartStopStatus	_177	_178	3	45314	Fb
4-01	Alarm Sign	12628227	Alarm	_177	_178	3	45315	
4-01	Error Code	54571268	MalfunctionCode	_177	_178	13	45316	
4-01	Operation Mode (setting)	58765573	AirConModeCommand	_177	_178	14	45317	set
4-01	Operation Mode (status)	54571270	AirConModeStatus	_177	_178	13	45318	Fb
4-01	Airflow Rate (setting)	58765575	AirFlowRateCommand	_177	_178	14	45319	set
4-01	Airflow Rate (status)	54571272	AirFlowRateStatus	_177	_178	13	45320	Fb
4-01	Measured Room Temperature	45321	RoomTemp	_177	_178	0	45321	
4-01	Set Room Temperature	8433930	TempAdjust	_177	_178	2	45322	set
4-01	Filer Limit Sign	12628235	FilterSign	_177	_178	3	45323	

4-01	Filter Limit Sign Reset	21016844	FilterSignReset	_177	_178	5	45324	
4-01	Remote Control Operation (ON/OFF)	21016845	RemoteControlStart	_177	_178	5	45325	
4-01	Remote Control Operation (Operation Mode)	21016846	RemoteControlAirConModeSet	_177	_178	5	45326	
4-01	Remote Control Operation (Set Temperature)	21016848	RemoteControlTempAdjust	_177	_178	5	45328	
4-01	Remote Control Operation (Sub Group Address Control Rejecti	21016849	CL_Rejection	_177	_178	5	45329	
4-01	Elec Total Power	96514323	ElecTotalPower	_177	_178	23	45331	
4-01	Communication Status	12628244	CommunicationStatus	_177	_178	3	45332	
4-01	System Forced OFF	21016853	SystemForcedOff	_177	_178	5	45333	
4-01	Air Direction (setting)	8433942	AirDirectionCommand	_177	_178	2	45334	
4-01	Air Direction (status)	45335	AirDirectionStatus	_177	_178	0	45335	
4-01	Forced Thermostat OFF (setting)	16822552	ForcedThermoOFFCommand	_177	_178	4	45336	
4-01	Forced Thermostat OFF (status)	12628249	ForcedThermoOFFStatus	_177	_178	3	45337	
4-01	Energy Efficiency Command (setting)	16822554	EnergyEfficiencyCommand	_177	_178	4	45338	
4-01	Energy Efficiency Command (status)	12628251	EnergyEfficiencyStatus	_177	_178	3	45339	
4-01	Thermostat Status	12628252	ThermoStatus	_177	_178	3	45340	
4-01	Compressor Status	12628253	CompressorStatus	_177	_178	3	45341	
4-01	Indoor Fan Status	12628254	IndoorFanStatus	_177	_178	3	45342	
4-01	Heater Operation Status	12628255	HeaterStatus	_177	_178	3	45343	
4-01	Ventilation Mode (setting)	58765600	VentilationModeCommand	_177	_178	14	45344	
4-01	Ventilation Mode (status)	54571297	VentilationModeStatus	_177	_178	13	45345	
4-01	Ventilation Amount (setting)	58765602	VentilationAmountCommand	_177	_178	14	45346	
4-01	Ventilation Amount (status)	54571299	VentilationAmountStatus	_177	_178	13	45347	
4-02	ON/OFF (setting)	16822785	StartStopCommand	_178	_179	4	45569	set
4-02	ON/OFF (status)	12628482	StartStopStatus	_178	_179	3	45570	Fb
4-02	Alarm Sign	12628483	Alarm	_178	_179	3	45571	
4-02	Error Code	54571524	MalfunctionCode	_178	_179	13	45572	
4-02	Operation Mode (setting)	58765829	AirConModeCommand	_178	_179	14	45573	set
4-02	Operation Mode (status)	54571526	AirConModeStatus	_178	_179	13	45574	Fb
4-02	Airflow Rate (setting)	58765831	AirFlowRateCommand	_178	_179	14	45575	set
4-02	Airflow Rate (status)	54571528	AirFlowRateStatus	_178	_179	13	45576	Fb
4-02	Measured Room Temperature	45577	RoomTemp	_178	_179	0	45577	
4-02	Set Room Temperature	8434186	TempAdjust	_178	_179	2	45578	set
4-02	Filer Limit Sign	12628491	FilterSign	_178	_179	3	45579	
4-02	Filter Limit Sign Reset	21017100	FilterSignReset	_178	_179	5	45580	
4-02	Remote Control Operation (ON/OFF)	21017101	RemoteControlStart	_178	_179	5	45581	
4-02	Remote Control Operation (Operation Mode)	21017102	RemoteControlAirConModeSet	_178	_179	5	45582	
4-02	Remote Control Operation (Set Temperature)	21017104	RemoteControlTempAdjust	_178	_179	5	45584	
4-02	Remote Control Operation (Sub Group Address Control Rejecti	21017105	CL_Rejection	_178	_179	5	45585	
4-02	Elec Total Power	96514579	ElecTotalPower	_178	_179	23	45587	
4-02	Communication Status	12628500	CommunicationStatus	_178	_179	3	45588	
4-02	System Forced OFF	21017109	SystemForcedOff	_178	_179	5	45589	
4-02	Air Direction (setting)	8434198	AirDirectionCommand	_178	_179	2	45590	
4-02	Air Direction (status)	45591	AirDirectionStatus	_178	_179	0	45591	
4-02	Forced Thermostat OFF (setting)	16822808	ForcedThermoOFFCommand	_178	_179	4	45592	
4-02	Forced Thermostat OFF (status)	12628505	ForcedThermoOFFStatus	_178	_179	3	45593	
4-02	Energy Efficiency Command (setting)	16822810	EnergyEfficiencyCommand	_178	_179	4	45594	
4-02	Energy Efficiency Command (status)	12628507	EnergyEfficiencyStatus	_178	_179	3	45595	
4-02	Thermostat Status	12628508	ThermoStatus	_178	_179	3	45596	
4-02	Compressor Status	12628509	CompressorStatus	_178	_179	3	45597	
4-02	Indoor Fan Status	12628510	IndoorFanStatus	_178	_179	3	45598	
4-02	Heater Operation Status	12628511	HeaterStatus	_178	_179	3	45599	
4-02	Ventilation Mode (setting)	58765856	VentilationModeCommand	_178	_179	14	45600	
4-02	Ventilation Mode (status)	54571553	VentilationModeStatus	_178	_179	13	45601	
4-02	Ventilation Amount (setting)	58765858	VentilationAmountCommand	_178	_179	14	45602	
4-02	Ventilation Amount (status)	54571555	VentilationAmountStatus	_178	_179	13	45603	
4-03	ON/OFF (setting)	16823041	StartStopCommand	_179	_180	4	45825	set
4-03	ON/OFF (status)	12628738	StartStopStatus	_179	_180	3	45826	Fb
4-03	Alarm Sign	12628739	Alarm	_179	_180	3	45827	
4-03	Error Code	54571780	MalfunctionCode	_179	_180	13	45828	
4-03	Operation Mode (setting)	58766085	AirConModeCommand	_179	_180	14	45829	set
4-03	Operation Mode (status)	54571782	AirConModeStatus	_179	_180	13	45830	Fb
4-03	Airflow Rate (setting)	58766087	AirFlowRateCommand	_179	_180	14	45831	set
4-03	Airflow Rate (status)	54571784	AirFlowRateStatus	_179	_180	13	45832	Fb
4-03	Measured Room Temperature	45833	RoomTemp	_179	_180	0	45833	
4-03	Set Room Temperature	8434442	TempAdjust	_179	_180	2	45834	set
4-03	Filer Limit Sign	12628747	FilterSign	_179	_180	3	45835	
4-03	Filter Limit Sign Reset	21017356	FilterSignReset	_179	_180	5	45836	
4-03	Remote Control Operation (ON/OFF)	21017357	RemoteControlStart	_179	_180	5	45837	
4-03	Remote Control Operation (Operation Mode)	21017358	RemoteControlAirConModeSet	_179	_180	5	45838	

4-03	Remote Control Operation (Set Temperature)	21017360	RemoteControlTempAdjust	_179	_180	5	45840	
4-03	Remote Control Operation (Sub Group Address Control Rejecti	21017361	CL_Rejection	_179	_180	5	45841	
4-03	Elec Total Power	96514835	ElecTotalPower	_179	_180	23	45843	
4-03	Communication Status	12628756	CommunicationStatus	_179	_180	3	45844	
4-03	System Forced OFF	21017365	SystemForcedOff	_179	_180	5	45845	
4-03	Air Direction (setting)	8434454	AirDirectionCommand	_179	_180	2	45846	
4-03	Air Direction (status)	45847	AirDirectionStatus	_179	_180	0	45847	
4-03	Forced Thermostat OFF (setting)	16823064	ForcedThermoOFFCommand	_179	_180	4	45848	
4-03	Forced Thermostat OFF (status)	12628761	ForcedThermoOFFStatus	_179	_180	3	45849	
4-03	Energy Efficiency Command (setting)	16823066	EnergyEfficiencyCommand	_179	_180	4	45850	
4-03	Energy Efficiency Command (status)	12628763	EnergyEfficiencyStatus	_179	_180	3	45851	
4-03	Thermostat Status	12628764	ThermoStatus	_179	_180	3	45852	
4-03	Compressor Status	12628765	CompressorStatus	_179	_180	3	45853	
4-03	Indoor Fan Status	12628766	IndoorFanStatus	_179	_180	3	45854	
4-03	Heater Operation Status	12628767	HeaterStatus	_179	_180	3	45855	
4-03	Ventilation Mode (setting)	58766112	VentilationModeCommand	_179	_180	14	45856	
4-03	Ventilation Mode (status)	54571809	VentilationModeStatus	_179	_180	13	45857	
4-03	Ventilation Amount (setting)	58766114	VentilationAmountCommand	_179	_180	14	45858	
4-03	Ventilation Amount (status)	54571811	VentilationAmountStatus	_179	_180	13	45859	
4-04	ON/OFF (setting)	16823297	StartStopCommand	_180	_181	4	46081	set
4-04	ON/OFF (status)	12628994	StartStopStatus	_180	_181	3	46082	Fb
4-04	Alarm Sign	12628995	Alarm	_180	_181	3	46083	
4-04	Error Code	54572036	MalfunctionCode	_180	_181	13	46084	
4-04	Operation Mode (setting)	58766341	AirConModeCommand	_180	_181	14	46085	set
4-04	Operation Mode (status)	54572038	AirConModeStatus	_180	_181	13	46086	Fb
4-04	Airflow Rate (setting)	58766343	AirFlowRateCommand	_180	_181	14	46087	set
4-04	Airflow Rate (status)	54572040	AirFlowRateStatus	_180	_181	13	46088	Fb
4-04	Measured Room Temperature	46089	RoomTemp	_180	_181	0	46089	
4-04	Set Room Temperature	8434698	TempAdjust	_180	_181	2	46090	set
4-04	Filer Limit Sign	12629003	FilterSign	_180	_181	3	46091	
4-04	Filter Limit Sign Reset	21017612	FilterSignReset	_180	_181	5	46092	
4-04	Remote Control Operation (ON/OFF)	21017613	RemoteControlStart	_180	_181	5	46093	
4-04	Remote Control Operation (Operation Mode)	21017614	RemoteControlAirConModeSet	_180	_181	5	46094	
4-04	Remote Control Operation (Set Temperature)	21017616	RemoteControlTempAdjust	_180	_181	5	46096	
4-04	Remote Control Operation (Sub Group Address Control Rejecti	21017617	CL_Rejection	_180	_181	5	46097	
4-04	Elec Total Power	96515091	ElecTotalPower	_180	_181	23	46099	
4-04	Communication Status	12629012	CommunicationStatus	_180	_181	3	46100	
4-04	System Forced OFF	21017621	SystemForcedOff	_180	_181	5	46101	
4-04	Air Direction (setting)	8434710	AirDirectionCommand	_180	_181	2	46102	
4-04	Air Direction (status)	46103	AirDirectionStatus	_180	_181	0	46103	
4-04	Forced Thermostat OFF (setting)	16823320	ForcedThermoOFFCommand	_180	_181	4	46104	
4-04	Forced Thermostat OFF (status)	12629017	ForcedThermoOFFStatus	_180	_181	3	46105	
4-04	Energy Efficiency Command (setting)	16823322	EnergyEfficiencyCommand	_180	_181	4	46106	
4-04	Energy Efficiency Command (status)	12629019	EnergyEfficiencyStatus	_180	_181	3	46107	
4-04	Thermostat Status	12629020	ThermoStatus	_180	_181	3	46108	
4-04	Compressor Status	12629021	CompressorStatus	_180	_181	3	46109	
4-04	Indoor Fan Status	12629022	IndoorFanStatus	_180	_181	3	46110	
4-04	Heater Operation Status	12629023	HeaterStatus	_180	_181	3	46111	
4-04	Ventilation Mode (setting)	58766368	VentilationModeCommand	_180	_181	14	46112	
4-04	Ventilation Mode (status)	54572065	VentilationModeStatus	_180	_181	13	46113	
4-04	Ventilation Amount (setting)	58766370	VentilationAmountCommand	_180	_181	14	46114	
4-04	Ventilation Amount (status)	54572067	VentilationAmountStatus	_180	_181	13	46115	
4-05	ON/OFF (setting)	16823553	StartStopCommand	_181	_182	4	46337	set
4-05	ON/OFF (status)	12629250	StartStopStatus	_181	_182	3	46338	Fb
4-05	Alarm Sign	12629251	Alarm	_181	_182	3	46339	
4-05	Error Code	54572292	MalfunctionCode	_181	_182	13	46340	
4-05	Operation Mode (setting)	58766597	AirConModeCommand	_181	_182	14	46341	set
4-05	Operation Mode (status)	54572294	AirConModeStatus	_181	_182	13	46342	Fb
4-05	Airflow Rate (setting)	58766599	AirFlowRateCommand	_181	_182	14	46343	set
4-05	Airflow Rate (status)	54572296	AirFlowRateStatus	_181	_182	13	46344	Fb
4-05	Measured Room Temperature	46345	RoomTemp	_181	_182	0	46345	
4-05	Set Room Temperature	8434954	TempAdjust	_181	_182	2	46346	set
4-05	Filer Limit Sign	12629259	FilterSign	_181	_182	3	46347	
4-05	Filter Limit Sign Reset	21017868	FilterSignReset	_181	_182	5	46348	
4-05	Remote Control Operation (ON/OFF)	21017869	RemoteControlStart	_181	_182	5	46349	
4-05	Remote Control Operation (Operation Mode)	21017870	RemoteControlAirConModeSet	_181	_182	5	46350	
4-05	Remote Control Operation (Set Temperature)	21017872	RemoteControlTempAdjust	_181	_182	5	46352	
4-05	Remote Control Operation (Sub Group Address Control Rejecti	21017873	CL_Rejection	_181	_182	5	46353	
4-05	Elec Total Power	96515347	ElecTotalPower	_181	_182	23	46355	

4-05	Communication Status	12629268	CommunicationStatus	_181	_182	3	46356	
4-05	System Forced OFF	21017877	SystemForcedOff	_181	_182	5	46357	
4-05	Air Direction (setting)	8434966	AirDirectionCommand	_181	_182	2	46358	
4-05	Air Direction (status)	46359	AirDirectionStatus	_181	_182	0	46359	
4-05	Forced Thermostat OFF (setting)	16823576	ForcedThermoOFFCommand	_181	_182	4	46360	
4-05	Forced Thermostat OFF (status)	12629273	ForcedThermoOFFStatus	_181	_182	3	46361	
4-05	Energy Efficiency Command (setting)	16823578	EnergyEfficiencyCommand	_181	_182	4	46362	
4-05	Energy Efficiency Command (status)	12629275	EnergyEfficiencyStatus	_181	_182	3	46363	
4-05	Thermostat Status	12629276	ThermoStatus	_181	_182	3	46364	
4-05	Compressor Status	12629277	CompressorStatus	_181	_182	3	46365	
4-05	Indoor Fan Status	12629278	IndoorFanStatus	_181	_182	3	46366	
4-05	Heater Operation Status	12629279	HeaterStatus	_181	_182	3	46367	
4-05	Ventilation Mode (setting)	58766624	VentilationModeCommand	_181	_182	14	46368	
4-05	Ventilation Mode (status)	54572321	VentilationModeStatus	_181	_182	13	46369	
4-05	Ventilation Amount (setting)	58766626	VentilationAmountCommand	_181	_182	14	46370	
4-05	Ventilation Amount (status)	54572323	VentilationAmountStatus	_181	_182	13	46371	
4-06	ON/OFF (setting)	16823809	StartStopCommand	_182	_183	4	46593	set
4-06	ON/OFF (status)	12629506	StartStopStatus	_182	_183	3	46594	Fb
4-06	Alarm Sign	12629507	Alarm	_182	_183	3	46595	
4-06	Error Code	54572548	MalfunctionCode	_182	_183	13	46596	
4-06	Operation Mode (setting)	58766853	AirConModeCommand	_182	_183	14	46597	set
4-06	Operation Mode (status)	54572550	AirConModeStatus	_182	_183	13	46598	Fb
4-06	Airflow Rate (setting)	58766855	AirFlowRateCommand	_182	_183	14	46599	set
4-06	Airflow Rate (status)	54572552	AirFlowRateStatus	_182	_183	13	46600	Fb
4-06	Measured Room Temperature	46601	RoomTemp	_182	_183	0	46601	
4-06	Set Room Temperature	8435210	TempAdjust	_182	_183	2	46602	set
4-06	Filer Limit Sign	12629515	FilterSign	_182	_183	3	46603	
4-06	Filter Limit Sign Reset	21018124	FilterSignReset	_182	_183	5	46604	
4-06	Remote Control Operation (ON/OFF)	21018125	RemoteControlStart	_182	_183	5	46605	
4-06	Remote Control Operation (Operation Mode)	21018126	RemoteControlAirConModeSet	_182	_183	5	46606	
4-06	Remote Control Operation (Set Temperature)	21018128	RemoteControlTempAdjust	_182	_183	5	46608	
4-06	Remote Control Operation (Sub Group Address Control Reject)	21018129	CL_Rejection	_182	_183	5	46609	
4-06	Elec Total Power	96515603	ElecTotalPower	_182	_183	23	46611	
4-06	Communication Status	12629524	CommunicationStatus	_182	_183	3	46612	
4-06	System Forced OFF	21018133	SystemForcedOff	_182	_183	5	46613	
4-06	Air Direction (setting)	8435222	AirDirectionCommand	_182	_183	2	46614	
4-06	Air Direction (status)	46615	AirDirectionStatus	_182	_183	0	46615	
4-06	Forced Thermostat OFF (setting)	16823832	ForcedThermoOFFCommand	_182	_183	4	46616	
4-06	Forced Thermostat OFF (status)	12629529	ForcedThermoOFFStatus	_182	_183	3	46617	
4-06	Energy Efficiency Command (setting)	16823834	EnergyEfficiencyCommand	_182	_183	4	46618	
4-06	Energy Efficiency Command (status)	12629531	EnergyEfficiencyStatus	_182	_183	3	46619	
4-06	Thermostat Status	12629532	ThermoStatus	_182	_183	3	46620	
4-06	Compressor Status	12629533	CompressorStatus	_182	_183	3	46621	
4-06	Indoor Fan Status	12629534	IndoorFanStatus	_182	_183	3	46622	
4-06	Heater Operation Status	12629535	HeaterStatus	_182	_183	3	46623	
4-06	Ventilation Mode (setting)	58766880	VentilationModeCommand	_182	_183	14	46624	
4-06	Ventilation Mode (status)	54572577	VentilationModeStatus	_182	_183	13	46625	
4-06	Ventilation Amount (setting)	58766882	VentilationAmountCommand	_182	_183	14	46626	
4-06	Ventilation Amount (status)	54572579	VentilationAmountStatus	_182	_183	13	46627	
4-07	ON/OFF (setting)	16824065	StartStopCommand	_183	_184	4	46849	set
4-07	ON/OFF (status)	12629762	StartStopStatus	_183	_184	3	46850	Fb
4-07	Alarm Sign	12629763	Alarm	_183	_184	3	46851	
4-07	Error Code	54572804	MalfunctionCode	_183	_184	13	46852	
4-07	Operation Mode (setting)	58767109	AirConModeCommand	_183	_184	14	46853	set
4-07	Operation Mode (status)	54572806	AirConModeStatus	_183	_184	13	46854	Fb
4-07	Airflow Rate (setting)	58767111	AirFlowRateCommand	_183	_184	14	46855	set
4-07	Airflow Rate (status)	54572808	AirFlowRateStatus	_183	_184	13	46856	Fb
4-07	Measured Room Temperature	46857	RoomTemp	_183	_184	0	46857	
4-07	Set Room Temperature	8435466	TempAdjust	_183	_184	2	46858	set
4-07	Filer Limit Sign	12629771	FilterSign	_183	_184	3	46859	
4-07	Filter Limit Sign Reset	21018380	FilterSignReset	_183	_184	5	46860	
4-07	Remote Control Operation (ON/OFF)	21018381	RemoteControlStart	_183	_184	5	46861	
4-07	Remote Control Operation (Operation Mode)	21018382	RemoteControlAirConModeSet	_183	_184	5	46862	
4-07	Remote Control Operation (Set Temperature)	21018384	RemoteControlTempAdjust	_183	_184	5	46864	
4-07	Remote Control Operation (Sub Group Address Control Reject)	21018385	CL_Rejection	_183	_184	5	46865	
4-07	Elec Total Power	96515859	ElecTotalPower	_183	_184	23	46867	
4-07	Communication Status	12629780	CommunicationStatus	_183	_184	3	46868	
4-07	System Forced OFF	21018389	SystemForcedOff	_183	_184	5	46869	
4-07	Air Direction (setting)	8435478	AirDirectionCommand	_183	_184	2	46870	

4-07	Air Direction (status)	46871	AirDirectionStatus	_183	_184	0	46871	
4-07	Forced Thermostat OFF (setting)	16824088	ForcedThermoOFFCommand	_183	_184	4	46872	
4-07	Forced Thermostat OFF (status)	12629785	ForcedThermoOFFStatus	_183	_184	3	46873	
4-07	Energy Efficiency Command (setting)	16824090	EnergyEfficiencyCommand	_183	_184	4	46874	
4-07	Energy Efficiency Command (status)	12629787	EnergyEfficiencyStatus	_183	_184	3	46875	
4-07	Thermostat Status	12629788	ThermoStatus	_183	_184	3	46876	
4-07	Compressor Status	12629789	CompressorStatus	_183	_184	3	46877	
4-07	Indoor Fan Status	12629790	IndoorFanStatus	_183	_184	3	46878	
4-07	Heater Operation Status	12629791	HeaterStatus	_183	_184	3	46879	
4-07	Ventilation Mode (setting)	58767136	VentilationModeCommand	_183	_184	14	46880	
4-07	Ventilation Mode (status)	54572833	VentilationModeStatus	_183	_184	13	46881	
4-07	Ventilation Amount (setting)	58767138	VentilationAmountCommand	_183	_184	14	46882	
4-07	Ventilation Amount (status)	54572835	VentilationAmountStatus	_183	_184	13	46883	
4-08	ON/OFF (setting)	16824321	StartStopCommand	_184	_185	4	47105	set
4-08	ON/OFF (status)	12630018	StartStopStatus	_184	_185	3	47106	Fb
4-08	Alarm Sign	12630019	Alarm	_184	_185	3	47107	
4-08	Error Code	54573060	MalfunctionCode	_184	_185	13	47108	
4-08	Operation Mode (setting)	58767365	AirConModeCommand	_184	_185	14	47109	set
4-08	Operation Mode (status)	54573062	AirConModeStatus	_184	_185	13	47110	Fb
4-08	Airflow Rate (setting)	58767367	AirFlowRateCommand	_184	_185	14	47111	set
4-08	Airflow Rate (status)	54573064	AirFlowRateStatus	_184	_185	13	47112	Fb
4-08	Measured Room Temperature	47113	RoomTemp	_184	_185	0	47113	
4-08	Set Room Temperature	8435722	TempAdjust	_184	_185	2	47114	set
4-08	Filer Limit Sign	12630027	FilterSign	_184	_185	3	47115	
4-08	Filter Limit Sign Reset	21018636	FilterSignReset	_184	_185	5	47116	
4-08	Remote Control Operation (ON/OFF)	21018637	RemoteControlStart	_184	_185	5	47117	
4-08	Remote Control Operation (Operation Mode)	21018638	RemoteControlAirConModeSet	_184	_185	5	47118	
4-08	Remote Control Operation (Set Temperature)	21018640	RemoteControlTempAdjust	_184	_185	5	47120	
4-08	Remote Control Operation (Sub Group Address Control Reject)	21018641	CL_Rejection	_184	_185	5	47121	
4-08	Elec Total Power	96516115	ElecTotalPower	_184	_185	23	47123	
4-08	Communication Status	12630036	CommunicationStatus	_184	_185	3	47124	
4-08	System Forced OFF	21018645	SystemForcedOff	_184	_185	5	47125	
4-08	Air Direction (setting)	8435734	AirDirectionCommand	_184	_185	2	47126	
4-08	Air Direction (status)	47127	AirDirectionStatus	_184	_185	0	47127	
4-08	Forced Thermostat OFF (setting)	16824344	ForcedThermoOFFCommand	_184	_185	4	47128	
4-08	Forced Thermostat OFF (status)	12630041	ForcedThermoOFFStatus	_184	_185	3	47129	
4-08	Energy Efficiency Command (setting)	16824346	EnergyEfficiencyCommand	_184	_185	4	47130	
4-08	Energy Efficiency Command (status)	12630043	EnergyEfficiencyStatus	_184	_185	3	47131	
4-08	Thermostat Status	12630044	ThermoStatus	_184	_185	3	47132	
4-08	Compressor Status	12630045	CompressorStatus	_184	_185	3	47133	
4-08	Indoor Fan Status	12630046	IndoorFanStatus	_184	_185	3	47134	
4-08	Heater Operation Status	12630047	HeaterStatus	_184	_185	3	47135	
4-08	Ventilation Mode (setting)	58767392	VentilationModeCommand	_184	_185	14	47136	
4-08	Ventilation Mode (status)	54573089	VentilationModeStatus	_184	_185	13	47137	
4-08	Ventilation Amount (setting)	58767394	VentilationAmountCommand	_184	_185	14	47138	
4-08	Ventilation Amount (status)	54573091	VentilationAmountStatus	_184	_185	13	47139	
4-09	ON/OFF (setting)	16824577	StartStopCommand	_185	_186	4	47361	set
4-09	ON/OFF (status)	12630274	StartStopStatus	_185	_186	3	47362	Fb
4-09	Alarm Sign	12630275	Alarm	_185	_186	3	47363	
4-09	Error Code	54573316	MalfunctionCode	_185	_186	13	47364	
4-09	Operation Mode (setting)	58767621	AirConModeCommand	_185	_186	14	47365	set
4-09	Operation Mode (status)	54573318	AirConModeStatus	_185	_186	13	47366	Fb
4-09	Airflow Rate (setting)	58767623	AirFlowRateCommand	_185	_186	14	47367	set
4-09	Airflow Rate (status)	54573320	AirFlowRateStatus	_185	_186	13	47368	Fb
4-09	Measured Room Temperature	47369	RoomTemp	_185	_186	0	47369	
4-09	Set Room Temperature	8435978	TempAdjust	_185	_186	2	47370	set
4-09	Filer Limit Sign	12630283	FilterSign	_185	_186	3	47371	
4-09	Filter Limit Sign Reset	21018892	FilterSignReset	_185	_186	5	47372	
4-09	Remote Control Operation (ON/OFF)	21018893	RemoteControlStart	_185	_186	5	47373	
4-09	Remote Control Operation (Operation Mode)	21018894	RemoteControlAirConModeSet	_185	_186	5	47374	
4-09	Remote Control Operation (Set Temperature)	21018896	RemoteControlTempAdjust	_185	_186	5	47376	
4-09	Remote Control Operation (Sub Group Address Control Reject)	21018897	CL_Rejection	_185	_186	5	47377	
4-09	Elec Total Power	96516371	ElecTotalPower	_185	_186	23	47379	
4-09	Communication Status	12630292	CommunicationStatus	_185	_186	3	47380	
4-09	System Forced OFF	21018901	SystemForcedOff	_185	_186	5	47381	
4-09	Air Direction (setting)	8435990	AirDirectionCommand	_185	_186	2	47382	
4-09	Air Direction (status)	47383	AirDirectionStatus	_185	_186	0	47383	
4-09	Forced Thermostat OFF (setting)	16824600	ForcedThermoOFFCommand	_185	_186	4	47384	
4-09	Forced Thermostat OFF (status)	12630297	ForcedThermoOFFStatus	_185	_186	3	47385	

4-09	Energy Efficiency Command (setting)	16824602	EnergyEfficiencyCommand	_185	_186	4	47386	
4-09	Energy Efficiency Command (status)	12630299	EnergyEfficiencyStatus	_185	_186	3	47387	
4-09	Thermostat Status	12630300	ThermoStatus	_185	_186	3	47388	
4-09	Compressor Status	12630301	CompressorStatus	_185	_186	3	47389	
4-09	Indoor Fan Status	12630302	IndoorFanStatus	_185	_186	3	47390	
4-09	Heater Operation Status	12630303	HeaterStatus	_185	_186	3	47391	
4-09	Ventilation Mode (setting)	58767648	VentilationModeCommand	_185	_186	14	47392	
4-09	Ventilation Mode (status)	54573345	VentilationModeStatus	_185	_186	13	47393	
4-09	Ventilation Amount (setting)	58767650	VentilationAmountCommand	_185	_186	14	47394	
4-09	Ventilation Amount (status)	54573347	VentilationAmountStatus	_185	_186	13	47395	
4-10	ON/OFF (setting)	16824833	StartStopCommand	_186	_187	4	47617	set
4-10	ON/OFF (status)	12630530	StartStopStatus	_186	_187	3	47618	Fb
4-10	Alarm Sign	12630531	Alarm	_186	_187	3	47619	
4-10	Error Code	54573572	MalfunctionCode	_186	_187	13	47620	
4-10	Operation Mode (setting)	58767877	AirConModeCommand	_186	_187	14	47621	set
4-10	Operation Mode (status)	54573574	AirConModeStatus	_186	_187	13	47622	Fb
4-10	Airflow Rate (setting)	58767879	AirFlowRateCommand	_186	_187	14	47623	set
4-10	Airflow Rate (status)	54573576	AirFlowRateStatus	_186	_187	13	47624	Fb
4-10	Measured Room Temperature	47625	RoomTemp	_186	_187	0	47625	
4-10	Set Room Temperature	8436234	TempAdjust	_186	_187	2	47626	set
4-10	Filer Limit Sign	12630539	FilterSign	_186	_187	3	47627	
4-10	Filter Limit Sign Reset	21019148	FilterSignReset	_186	_187	5	47628	
4-10	Remote Control Operation (ON/OFF)	21019149	RemoteControlStart	_186	_187	5	47629	
4-10	Remote Control Operation (Operation Mode)	21019150	RemoteControlAirConModeSet	_186	_187	5	47630	
4-10	Remote Control Operation (Set Temperature)	21019152	RemoteControlTempAdjust	_186	_187	5	47632	
4-10	Remote Control Operation (Sub Group Address Control Reject)	21019153	CL_Rejection	_186	_187	5	47633	
4-10	Elec Total Power	96516627	ElecTotalPower	_186	_187	23	47635	
4-10	Communication Status	12630548	CommunicationStatus	_186	_187	3	47636	
4-10	System Forced OFF	21019157	SystemForcedOff	_186	_187	5	47637	
4-10	Air Direction (setting)	8436246	AirDirectionCommand	_186	_187	2	47638	
4-10	Air Direction (status)	47639	AirDirectionStatus	_186	_187	0	47639	
4-10	Forced Thermostat OFF (setting)	16824856	ForcedThermoOFFCommand	_186	_187	4	47640	
4-10	Forced Thermostat OFF (status)	12630553	ForcedThermoOFFStatus	_186	_187	3	47641	
4-10	Energy Efficiency Command (setting)	16824858	EnergyEfficiencyCommand	_186	_187	4	47642	
4-10	Energy Efficiency Command (status)	12630555	EnergyEfficiencyStatus	_186	_187	3	47643	
4-10	Thermostat Status	12630556	ThermoStatus	_186	_187	3	47644	
4-10	Compressor Status	12630557	CompressorStatus	_186	_187	3	47645	
4-10	Indoor Fan Status	12630558	IndoorFanStatus	_186	_187	3	47646	
4-10	Heater Operation Status	12630559	HeaterStatus	_186	_187	3	47647	
4-10	Ventilation Mode (setting)	58767904	VentilationModeCommand	_186	_187	14	47648	
4-10	Ventilation Mode (status)	54573601	VentilationModeStatus	_186	_187	13	47649	
4-10	Ventilation Amount (setting)	58767906	VentilationAmountCommand	_186	_187	14	47650	
4-10	Ventilation Amount (status)	54573603	VentilationAmountStatus	_186	_187	13	47651	
4-11	ON/OFF (setting)	16825089	StartStopCommand	_187	_188	4	47873	set
4-11	ON/OFF (status)	12630786	StartStopStatus	_187	_188	3	47874	Fb
4-11	Alarm Sign	12630787	Alarm	_187	_188	3	47875	
4-11	Error Code	54573828	MalfunctionCode	_187	_188	13	47876	
4-11	Operation Mode (setting)	58768133	AirConModeCommand	_187	_188	14	47877	set
4-11	Operation Mode (status)	54573830	AirConModeStatus	_187	_188	13	47878	Fb
4-11	Airflow Rate (setting)	58768135	AirFlowRateCommand	_187	_188	14	47879	set
4-11	Airflow Rate (status)	54573832	AirFlowRateStatus	_187	_188	13	47880	Fb
4-11	Measured Room Temperature	47881	RoomTemp	_187	_188	0	47881	
4-11	Set Room Temperature	8436490	TempAdjust	_187	_188	2	47882	set
4-11	Filer Limit Sign	12630795	FilterSign	_187	_188	3	47883	
4-11	Filter Limit Sign Reset	21019404	FilterSignReset	_187	_188	5	47884	
4-11	Remote Control Operation (ON/OFF)	21019405	RemoteControlStart	_187	_188	5	47885	
4-11	Remote Control Operation (Operation Mode)	21019406	RemoteControlAirConModeSet	_187	_188	5	47886	
4-11	Remote Control Operation (Set Temperature)	21019408	RemoteControlTempAdjust	_187	_188	5	47888	
4-11	Remote Control Operation (Sub Group Address Control Reject)	21019409	CL_Rejection	_187	_188	5	47889	
4-11	Elec Total Power	96516883	ElecTotalPower	_187	_188	23	47891	
4-11	Communication Status	12630804	CommunicationStatus	_187	_188	3	47892	
4-11	System Forced OFF	21019413	SystemForcedOff	_187	_188	5	47893	
4-11	Air Direction (setting)	8436502	AirDirectionCommand	_187	_188	2	47894	
4-11	Air Direction (status)	47895	AirDirectionStatus	_187	_188	0	47895	
4-11	Forced Thermostat OFF (setting)	16825112	ForcedThermoOFFCommand	_187	_188	4	47896	
4-11	Forced Thermostat OFF (status)	12630809	ForcedThermoOFFStatus	_187	_188	3	47897	
4-11	Energy Efficiency Command (setting)	16825114	EnergyEfficiencyCommand	_187	_188	4	47898	
4-11	Energy Efficiency Command (status)	12630811	EnergyEfficiencyStatus	_187	_188	3	47899	
4-11	Thermostat Status	12630812	ThermoStatus	_187	_188	3	47900	

4-11	Compressor Status	12630813	CompressorStatus	_187	_188	3	47901	
4-11	Indoor Fan Status	12630814	IndoorFanStatus	_187	_188	3	47902	
4-11	Heater Operation Status	12630815	HeaterStatus	_187	_188	3	47903	
4-11	Ventilation Mode (setting)	58768160	VentilationModeCommand	_187	_188	14	47904	
4-11	Ventilation Mode (status)	54573857	VentilationModeStatus	_187	_188	13	47905	
4-11	Ventilation Amount (setting)	58768162	VentilationAmountCommand	_187	_188	14	47906	
4-11	Ventilation Amount (status)	54573859	VentilationAmountStatus	_187	_188	13	47907	
4-12	ON/OFF (setting)	16825345	StartStopCommand	_188	_189	4	48129	set
4-12	ON/OFF (status)	12631042	StartStopStatus	_188	_189	3	48130	Fb
4-12	Alarm Sign	12631043	Alarm	_188	_189	3	48131	
4-12	Error Code	54574084	MalfunctionCode	_188	_189	13	48132	
4-12	Operation Mode (setting)	58768389	AirConModeCommand	_188	_189	14	48133	set
4-12	Operation Mode (status)	54574086	AirConModeStatus	_188	_189	13	48134	Fb
4-12	Airflow Rate (setting)	58768391	AirFlowRateCommand	_188	_189	14	48135	set
4-12	Airflow Rate (status)	54574088	AirFlowRateStatus	_188	_189	13	48136	Fb
4-12	Measured Room Temperature	48137	RoomTemp	_188	_189	0	48137	
4-12	Set Room Temperature	8436746	TempAdjust	_188	_189	2	48138	set
4-12	Filer Limit Sign	12631051	FilterSign	_188	_189	3	48139	
4-12	Filter Limit Sign Reset	21019660	FilterSignReset	_188	_189	5	48140	
4-12	Remote Control Operation (ON/OFF)	21019661	RemoteControlStart	_188	_189	5	48141	
4-12	Remote Control Operation (Operation Mode)	21019662	RemoteControlAirConModeSet	_188	_189	5	48142	
4-12	Remote Control Operation (Set Temperature)	21019664	RemoteControlTempAdjust	_188	_189	5	48144	
4-12	Remote Control Operation (Sub Group Address Control Reject)	21019665	CL_Rejection	_188	_189	5	48145	
4-12	Elec Total Power	96517139	ElecTotalPower	_188	_189	23	48147	
4-12	Communication Status	12631060	CommunicationStatus	_188	_189	3	48148	
4-12	System Forced OFF	21019669	SystemForcedOff	_188	_189	5	48149	
4-12	Air Direction (setting)	8436758	AirDirectionCommand	_188	_189	2	48150	
4-12	Air Direction (status)	48151	AirDirectionStatus	_188	_189	0	48151	
4-12	Forced Thermostat OFF (setting)	16825368	ForcedThermoOFFCommand	_188	_189	4	48152	
4-12	Forced Thermostat OFF (status)	12631065	ForcedThermoOFFStatus	_188	_189	3	48153	
4-12	Energy Efficiency Command (setting)	16825370	EnergyEfficiencyCommand	_188	_189	4	48154	
4-12	Energy Efficiency Command (status)	12631067	EnergyEfficiencyStatus	_188	_189	3	48155	
4-12	Thermostat Status	12631068	ThermoStatus	_188	_189	3	48156	
4-12	Compressor Status	12631069	CompressorStatus	_188	_189	3	48157	
4-12	Indoor Fan Status	12631070	IndoorFanStatus	_188	_189	3	48158	
4-12	Heater Operation Status	12631071	HeaterStatus	_188	_189	3	48159	
4-12	Ventilation Mode (setting)	58768416	VentilationModeCommand	_188	_189	14	48160	
4-12	Ventilation Mode (status)	54574113	VentilationModeStatus	_188	_189	13	48161	
4-12	Ventilation Amount (setting)	58768418	VentilationAmountCommand	_188	_189	14	48162	
4-12	Ventilation Amount (status)	54574115	VentilationAmountStatus	_188	_189	13	48163	
4-13	ON/OFF (setting)	16825601	StartStopCommand	_189	_190	4	48385	set
4-13	ON/OFF (status)	12631298	StartStopStatus	_189	_190	3	48386	Fb
4-13	Alarm Sign	12631299	Alarm	_189	_190	3	48387	
4-13	Error Code	54574340	MalfunctionCode	_189	_190	13	48388	
4-13	Operation Mode (setting)	58768645	AirConModeCommand	_189	_190	14	48389	set
4-13	Operation Mode (status)	54574342	AirConModeStatus	_189	_190	13	48390	Fb
4-13	Airflow Rate (setting)	58768647	AirFlowRateCommand	_189	_190	14	48391	set
4-13	Airflow Rate (status)	54574344	AirFlowRateStatus	_189	_190	13	48392	Fb
4-13	Measured Room Temperature	48393	RoomTemp	_189	_190	0	48393	
4-13	Set Room Temperature	8437002	TempAdjust	_189	_190	2	48394	set
4-13	Filer Limit Sign	12631307	FilterSign	_189	_190	3	48395	
4-13	Filter Limit Sign Reset	21019916	FilterSignReset	_189	_190	5	48396	
4-13	Remote Control Operation (ON/OFF)	21019917	RemoteControlStart	_189	_190	5	48397	
4-13	Remote Control Operation (Operation Mode)	21019918	RemoteControlAirConModeSet	_189	_190	5	48398	
4-13	Remote Control Operation (Set Temperature)	21019920	RemoteControlTempAdjust	_189	_190	5	48400	
4-13	Remote Control Operation (Sub Group Address Control Reject)	21019921	CL_Rejection	_189	_190	5	48401	
4-13	Elec Total Power	96517395	ElecTotalPower	_189	_190	23	48403	
4-13	Communication Status	12631316	CommunicationStatus	_189	_190	3	48404	
4-13	System Forced OFF	21019925	SystemForcedOff	_189	_190	5	48405	
4-13	Air Direction (setting)	8437014	AirDirectionCommand	_189	_190	2	48406	
4-13	Air Direction (status)	48407	AirDirectionStatus	_189	_190	0	48407	
4-13	Forced Thermostat OFF (setting)	16825624	ForcedThermoOFFCommand	_189	_190	4	48408	
4-13	Forced Thermostat OFF (status)	12631321	ForcedThermoOFFStatus	_189	_190	3	48409	
4-13	Energy Efficiency Command (setting)	16825626	EnergyEfficiencyCommand	_189	_190	4	48410	
4-13	Energy Efficiency Command (status)	12631323	EnergyEfficiencyStatus	_189	_190	3	48411	
4-13	Thermostat Status	12631324	ThermoStatus	_189	_190	3	48412	
4-13	Compressor Status	12631325	CompressorStatus	_189	_190	3	48413	
4-13	Indoor Fan Status	12631326	IndoorFanStatus	_189	_190	3	48414	
4-13	Heater Operation Status	12631327	HeaterStatus	_189	_190	3	48415	

4-13	Ventilation Mode (setting)	58768672	VentilationModeCommand	_189	_190	14	48416	
4-13	Ventilation Mode (status)	54574369	VentilationModeStatus	_189	_190	13	48417	
4-13	Ventilation Amount (setting)	58768674	VentilationAmountCommand	_189	_190	14	48418	
4-13	Ventilation Amount (status)	54574371	VentilationAmountStatus	_189	_190	13	48419	
4-14	ON/OFF (setting)	16825857	StartStopCommand	_190	_191	4	48641	set
4-14	ON/OFF (status)	12631554	StartStopStatus	_190	_191	3	48642	Fb
4-14	Alarm Sign	12631555	Alarm	_190	_191	3	48643	
4-14	Error Code	54574596	MalfunctionCode	_190	_191	13	48644	
4-14	Operation Mode (setting)	58768901	AirConModeCommand	_190	_191	14	48645	set
4-14	Operation Mode (status)	54574598	AirConModeStatus	_190	_191	13	48646	Fb
4-14	Airflow Rate (setting)	58768903	AirFlowRateCommand	_190	_191	14	48647	set
4-14	Airflow Rate (status)	54574600	AirFlowRateStatus	_190	_191	13	48648	Fb
4-14	Measured Room Temperature	48649	RoomTemp	_190	_191	0	48649	
4-14	Set Room Temperature	8437258	TempAdjust	_190	_191	2	48650	set
4-14	Filer Limit Sign	12631563	FilterSign	_190	_191	3	48651	
4-14	Filter Limit Sign Reset	21020172	FilterSignReset	_190	_191	5	48652	
4-14	Remote Control Operation (ON/OFF)	21020173	RemoteControlStart	_190	_191	5	48653	
4-14	Remote Control Operation (Operation Mode)	21020174	RemoteControlAirConModeSet	_190	_191	5	48654	
4-14	Remote Control Operation (Set Temperature)	21020176	RemoteControlTempAdjust	_190	_191	5	48656	
4-14	Remote Control Operation (Sub Group Address Control Reject)	21020177	CL_Rejection	_190	_191	5	48657	
4-14	Elec Total Power	96517651	ElecTotalPower	_190	_191	23	48659	
4-14	Communication Status	12631572	CommunicationStatus	_190	_191	3	48660	
4-14	System Forced OFF	21020181	SystemForcedOff	_190	_191	5	48661	
4-14	Air Direction (setting)	8437270	AirDirectionCommand	_190	_191	2	48662	
4-14	Air Direction (status)	48663	AirDirectionStatus	_190	_191	0	48663	
4-14	Forced Thermostat OFF (setting)	16825880	ForcedThermoOFFCommand	_190	_191	4	48664	
4-14	Forced Thermostat OFF (status)	12631577	ForcedThermoOFFStatus	_190	_191	3	48665	
4-14	Energy Efficiency Command (setting)	16825882	EnergyEfficiencyCommand	_190	_191	4	48666	
4-14	Energy Efficiency Command (status)	12631579	EnergyEfficiencyStatus	_190	_191	3	48667	
4-14	Thermostat Status	12631580	ThermoStatus	_190	_191	3	48668	
4-14	Compressor Status	12631581	CompressorStatus	_190	_191	3	48669	
4-14	Indoor Fan Status	12631582	IndoorFanStatus	_190	_191	3	48670	
4-14	Heater Operation Status	12631583	HeaterStatus	_190	_191	3	48671	
4-14	Ventilation Mode (setting)	58768928	VentilationModeCommand	_190	_191	14	48672	
4-14	Ventilation Mode (status)	54574625	VentilationModeStatus	_190	_191	13	48673	
4-14	Ventilation Amount (setting)	58768930	VentilationAmountCommand	_190	_191	14	48674	
4-14	Ventilation Amount (status)	54574627	VentilationAmountStatus	_190	_191	13	48675	
4-15	ON/OFF (setting)	16826113	StartStopCommand	_191	_192	4	48897	set
4-15	ON/OFF (status)	12631810	StartStopStatus	_191	_192	3	48898	Fb
4-15	Alarm Sign	12631811	Alarm	_191	_192	3	48899	
4-15	Error Code	54574852	MalfunctionCode	_191	_192	13	48900	
4-15	Operation Mode (setting)	58769157	AirConModeCommand	_191	_192	14	48901	set
4-15	Operation Mode (status)	54574854	AirConModeStatus	_191	_192	13	48902	Fb
4-15	Airflow Rate (setting)	58769159	AirFlowRateCommand	_191	_192	14	48903	set
4-15	Airflow Rate (status)	54574856	AirFlowRateStatus	_191	_192	13	48904	Fb
4-15	Measured Room Temperature	48905	RoomTemp	_191	_192	0	48905	
4-15	Set Room Temperature	8437514	TempAdjust	_191	_192	2	48906	set
4-15	Filer Limit Sign	12631819	FilterSign	_191	_192	3	48907	
4-15	Filter Limit Sign Reset	21020428	FilterSignReset	_191	_192	5	48908	
4-15	Remote Control Operation (ON/OFF)	21020429	RemoteControlStart	_191	_192	5	48909	
4-15	Remote Control Operation (Operation Mode)	21020430	RemoteControlAirConModeSet	_191	_192	5	48910	
4-15	Remote Control Operation (Set Temperature)	21020432	RemoteControlTempAdjust	_191	_192	5	48912	
4-15	Remote Control Operation (Sub Group Address Control Reject)	21020433	CL_Rejection	_191	_192	5	48913	
4-15	Elec Total Power	96517907	ElecTotalPower	_191	_192	23	48915	
4-15	Communication Status	12631828	CommunicationStatus	_191	_192	3	48916	
4-15	System Forced OFF	21020437	SystemForcedOff	_191	_192	5	48917	
4-15	Air Direction (setting)	8437526	AirDirectionCommand	_191	_192	2	48918	
4-15	Air Direction (status)	48919	AirDirectionStatus	_191	_192	0	48919	
4-15	Forced Thermostat OFF (setting)	16826136	ForcedThermoOFFCommand	_191	_192	4	48920	
4-15	Forced Thermostat OFF (status)	12631833	ForcedThermoOFFStatus	_191	_192	3	48921	
4-15	Energy Efficiency Command (setting)	16826138	EnergyEfficiencyCommand	_191	_192	4	48922	
4-15	Energy Efficiency Command (status)	12631835	EnergyEfficiencyStatus	_191	_192	3	48923	
4-15	Thermostat Status	12631836	ThermoStatus	_191	_192	3	48924	
4-15	Compressor Status	12631837	CompressorStatus	_191	_192	3	48925	
4-15	Indoor Fan Status	12631838	IndoorFanStatus	_191	_192	3	48926	
4-15	Heater Operation Status	12631839	HeaterStatus	_191	_192	3	48927	
4-15	Ventilation Mode (setting)	58769184	VentilationModeCommand	_191	_192	14	48928	
4-15	Ventilation Mode (status)	54574881	VentilationModeStatus	_191	_192	13	48929	
4-15	Ventilation Amount (setting)	58769186	VentilationAmountCommand	_191	_192	14	48930	

4-15	Ventilation Amount (status)	54574883	VentilationAmountStatus_191	_192	13	48931
------	-----------------------------	----------	-----------------------------	------	----	-------